

EDITION NO. 0083/1  
JANUARY 1990

# TAKANG

## CNC LATHE

TNC-5/10, TNC-20/25S, TNC-20/25D

ELECTRICAL MANUAL



TAKANG INDUSTRY CO., LTD.

TAKANG CNC LATHE

TNC-5/10, TNC-20/25S, TNC-20/25D

WIRING DIAGRAM

(1990<sup>1</sup> JANUARY)

ITEMS:  
.....

	PAGE
1. ELECTRIC COMPONENTS LOCATION LAY OUT.....	3
2. TOTAL WIRING BLOCK DIAGRAM.....	6
3. THE WIRING OF FANUC SYSTEM.....	9
4. OPERATOR'S PANEL WIRING DIAGRAM.....	21
5. POWER MAGNETIC CIRCUIT DIAGRAM.....	34
6. STANDARD RELAY WIRING DIAGRAM.....	38
7. OPTIONAL RELAY WIRING DIAGRAM.....	44
8. ELECTRIC BOX#4 WIRING DIAGRAM.....	51
9. EXTERNAL SENSOR INPUT CIRCUIT.....	54
10. BRANCH BOARD WIRING DIAGRAM.....	59
11. INPUT/OUTPUT FUNCTION LIST OF MULTI-SPINDLE BOARD.....	82
12. SETTING:	
12.1 STANDARD TIMER SETTING TABLE.....	85
12.2 STANDARD KEEP RELAY SETTING TABLE.....	89

**TNC-20DS/25DS**

**SUPPLEMENT**

## CONTENTS

I.	General.....	2
II.	Machine specification.....	3
	CRT/MDI Panel.....	4
III.	C-Axis & Sub-spindle operation.....	5
	A. Axis command.....	5
	1-1 C-Axis	
	1-2 Sub-spindle	
	B. Extra function.....	5
	2-1 G code	
	2-2 M code	
	C. Increasing key on operation panel.....	6
	3-1 Direction level	
	3-2 Mode panel	
	3-3 Spindle select	
	D. Programming.....	7
	4-1 Sketch	
	4-2 Sketch	
	4-3 Sketch	
	4-4 Sketch	
	4-5 Sketch	
IV.	Spare parts.....	15
	1-1 Sub-spindle	
	1-2 Sub-spindle(Front view)	
	1-3 Sub-spindle(Side view)	