



FV-1100(A) / 1300(A)(SE) USER MANUAL



FAIR FRIEND ENT. GROUP- MACHINE TOOLS DIVISON

ADDRESS: No.133, Gong 1st Road, Taichung Industrial
Park, Taichung City, Taiwan, R.O.C.

TEL: (886) 4-3594075 (8 Lines)

FAX: (886) 4-3590318



CONTENT

Chapter 1 Mechanical Generality

1. Description of Machine-----1-1
2. Identification Marking-----1-16
3. Specifications-----1-18
4. Working Range-----1-21
5. Accessories-----1-25

Chapter 2 Safety Instructions

1. General Safety Instructions-----2-1
2. Safety Instructions for Machine-----2-3
3. The Policy of Danger and Prevention-----2-8

Chapter 3 Preparation before Installation

1. Foundation-----3-1
2. Transportation Requirement-----3-3

Chapter 4 Transportation and Installation

1. Notice Items before Unpacking-----4-1
2. Notice Items for Unpacking-----4-3
3. Transportation after Unpacking-----4-6
4. Location of Machine Body-----4-8
5. Machine Installation-----4-9
6. Adjusting Method for Level-----4-13
7. Ground Connection-----4-14
8. Others-----4-15