

MAINTENANCE MANUAL

MACHINING CENTER

MC 100



MAKINO MILLING MACHINE CO., LTD.

MC100 (2M)

SPINDLE HEAD UNIT

TAPER SHANK

11A

CONTENTS

	Page
1. INTRODUCTION	1 - 1
2. SPINDLE DRIVE MECHANISM	2 - 1
2.1 Gear Changes and the Shifter	2 - 4
2.1.1 Construction	2 - 4
2.1.2 Gear combinations for each range	2 - 6
2.2 Spindle Constant Angle Positioning (Orientation) Mechanism	2 - 7
2.2.1 Construction	2 - 8
2.3 Tool Clamping	2 - 9
2.3.1 Construction	2 - 9
3. HYDRAULIC CIRCUITS	3 - 1
3.1 Hydraulic Circuit for the Shifter	3 - 1
3.2 Orientation Hydraulic Circuit	3 - 2
3.3 Collet Unclamping Hydraulic Circuit	3 - 3
4. CONTROL SEQUENCE	4 - 1
4.1 Spindle Drive Sequence	4 - 1
4.2 Orientation Sequence	4 - 2
4.3 Tool Clamping and Unclamping Sequence	4 - 3
4.4 Spindle Operation Sequence with ATC	4 - 4
5. OIL/AIR PRESSURE EQUIPMENT	5 - 1
5.1 Mounting Positioning for Oil/Air Pressure Equipment	5 - 1
5.1.1 Hydraulic equipment for the shifter	5 - 1
5.1.2 Hydraulic equipment for orientation	5 - 2

	Page
5.1.3 Hydraulic equipment for collet	5 - 3
5.2 Setting the Working Speed and Pressure	5 - 4
5.2.1 Setting the speed and pressure for the shifter	5 - 4
5.2.2 Setting the working speed and pressure for orientation	5 - 4
5.2.3 Setting the working speed and pressure for tool unclamping	5 - 4
6. LIMIT SWITCHES (LS)	6 - 1
6.1 Tool Clamping SL's (LS02, LS03)	6 - 1
6.1.1 Mounting position	6 - 1
6.1.2 Construction and adjustment	6 - 2
6.2 Orientation LS (LS05)	6 - 3
6.2.1 Mounting position	6 - 3
6.2.2 Construction and adjustment	6 - 4
6.3 Shifter LS (LS06, LS07)	6 - 5
6.3.1 Mounting positions	6 - 5
6.3.2 Construction and adjustment	6 - 6
7. SETTING	7 - 1
7.1 Setting the Spring Force of the Tool Clamping Disc Springs	7 - 1
8. DISASSEMBLY AND REASSEMBLY OF THE PARTS	8 - 1
8.1 Disassembly and Reassembly of the Spindle Head	8 - 1
8.2 Disassembly and Reassembly of the Cylinder for Collet Unclamping	8 - 15
8.3 Disassembly and Reassembly of the Spindle Head	8 - 17

	Page
8.4 Disassembly and Reassembly of the Tool Clamping Unit (Ball Collet)	8 - 20
8.5 Disassembly and Reassembly of the Middle Shaft	8 - 20
9. PERIODIC INSPECTIONS	9 - 1
9.1 Daily Inspection	9 - 1
9.2 Quarterly Inspection	9 - 4
9.3 Others	9 - 4

MC100 (2M)

FEED AXIS UNIT

FANUC SYSTEM 7M

21A

CONTENTS

	Page
1. GENERAL	1 - 1
2. FEED AXIS DRIVE MECHANISM	2 - 1
2.1 X Axis	2 - 1
2.2 Y Axis	2 - 2
2.3 Z Axis	2 - 5
2.4 Coupling	2 - 6
2.5 Ball Screw	2 - 10
3. CONTROL SEQUENCE	3 - 1
4. LIMIT SWITCHES (LS)	4 - 1
4.1 Mounting Positions	4 - 1
4.2 Construction and Functions	4 - 2
4.2.1 X Axis	4 - 2
4.2.2 Y Axis	4 - 3
4.2.3 Z Axis	4 - 4
5. MACHINE ORIGIN	5 - 1
5.1 Machine Zero Return System	5 - 1
5.2 Zero Point Adjustment	5 - 2
5.2.1 Y Axis	5 - 2
5.2.2 X Axis	5 - 6
5.2.3 Z Axis	5 - 11
6. ADJUSTMENT	6 - 1
6.1 Ball Screw Pre-tension Adjustment	6 - 1
6.1.1 X Axis	6 - 1

	Page
6.1.2 Y Axis	6 - 1
6.1.3 Z Axis	6 - 2
6.2 Adjusting the Tension of the Y Axis Timing Belt	6 - 2
6.3 Adjusting the Backlash of the Y Axis Resolver Driver Gear	6 - 6
6.4 Feed Axis Backlash	6 - 8
6.4.1 Measuring Backlash	6 - 8
6.4.2 Eliminating Backlash	6 - 10
6.5 Dogs	6 - 12
6.5.1 Relation between Dogs and Limit Switches	6 - 12
6.5.2 Mounting Positions and Functions of Dogs	6 - 13
6.5.3 Adjusting the Dogs	6 - 14
6.6 Pitch Error Compensation	6 - 17
6.7 Gibs	6 - 19
6.7.1 X Axis	6 - 19
6.7.2 Y Axis	6 - 20
6.7.3 Z Axis	6 - 21
7. DISASSEMBLY AND RE-ASSEMBLY PROCEDURES INDIVIDUAL SECTIONS	7 - 1
7.1 Removal and Mounting of Table Base	7 - 1
7.2 Removal and Mounting of Saddle	7 - 2
7.3 Removal and Mounting of Auto-Wind-Up Cover	7 - 3
8. PERIODIC CHECKS	8 - 1
8.1 Daily Checks	8 - 1
8.2 Checks Every 3 Months	8 - 2

MC 100
SIDE MAGAZINE ATC UNIT
2MM 61B

CONTENTS

	Page
1. INTRODUCTION	1 - 1
2. ATC DRIVE MECHANISM	2 - 1
2.1 Mechanism of Main Arm	2 - 1
2.2 Sub-arm Mechanism	2 - 4
2.3 Sub-pot Mechanism	2 - 7
2.4 Magazine Mechanism (A60-tool)	2 - 9
2.5 Magazine Mechanism (A99-tool)	2 - 13
2.6 Magazine Mechanism (A30-tool)	2 - 17
3. HYDRAULIC CIRCUIT	3 - 1
4. ATC CONTROL SEQUENCE	4 - 1
5. HYDRAULIC EQUIPMENT	5 - 1
5.1 Mounting Position of Hydraulic Equipment	5 - 1
5.2 Setting of Operation Speeds	5 - 7
6. LIMIT SWITCHES	6 - 1
6.1 Limit Switches Related to Arm	6 - 1
6.2 Limit Switches for A60-tool, A99-tool Magazines	6 - 12
6.3 Limit Switches for A30-tool Magazine	6 - 19
7. ADJUSTMENT	7 - 1
7.1 Mounting of ATC Unit on Machine Proper	7 - 1
8. ADJUSTMENT OF CHAIN TENSION	8 - 1
9. LUBRICATION	9 - 1
9.1 Chain Section for Tool Magazine Drive	9 - 1
9.2 Main Arm IN/OUT Slideways	9 - 1
9.3 Sub-arm IN/OUT Slideways	9 - 1
9.4 Sub-pot Drive Chain Section	9 - 1
10. DISASSEMBLY AND ASSEMBLY OF ATC UNIT	10 - 1
10.1 Dismounting and Mounting of Sub-pot Section and Main Arm Section on Machine Proper	10 - 1
10.2 Dismounting and Mounting of ATC Magazine Section and Sub-arm Section on Machine Proper	10 - 2
11. PERIODIC CHECKS	11 - 1

MC100 (2M)

HYDRAULIC - PNEUMATIC - LUBRICATING UNIT

HYDRAULIC UNIT

PNEUMATIC UNIT

LUBRICATING UNIT

70A

CONTENTS

	Page
1. HYDRAULIC AND PNEUMATIC PIPINGS	1-1
2. HYDRAULIC UNIT	2-1
2.1 Specifications	2-2
2.2 Main Dimensions	2-3
2.3 Name of Parts	2-4
2.4 Hydraulic Circuit	2-7
2.5 Construction and Functions of Devices	2-8
2.6 Routine Inspection	2-19
2.7 Periodic Inspection	2-20
2.8 Troubleshooting and Remedies	2-23
2.9 Disassembly	2-25
3. PNEUMATIC UNIT	3-1
3.1 Air Filter	3-2
3.1.1 Specifications	3-2
3.1.2 Construction and Operation	3-2
3.1.3 Disassembly and Assembly	3-3
3.2 Air Regulator	3-7
3.2.1 Specifications	3-7
3.2.2 Construction and Operation	3-7
3.2.3 Disassembly and Assembly	3-8
3.2.4 Pressure Gauge	3-9
3.3 Lubricator	3-11
3.3.1 Specifications	3-11

	Page
3.3.2 Construction and Operation	3-11
3.3.3 Oil Dropping Rate Adjustment and Oil Replenishment	3-12
3.3.4 Disassembly and Assembly	3-13
4. LUBRICATING OIL UNIT	4-1
4.1 Lubricating Oil Piping	4-1
4.2 Lubricating Oil Supply Device	4-1
4.2.1 Specifications	4-1
4.2.2 Name of Parts	4-3
4.2.3 Construction and Operation	4-4
4.2.4 Hydraulic Circuit	4-6
4.2.5 Delivery	4-7
4.2.6 Replacing Suction Filter	4-8

MC100 (2M)

SPINDLE TEMPERATURE CONTROL UNIT

OILMATIC KTC-15N-E

81A

CONTENTS

	Page
1. INTRODUCTION	1-1
1.1 Specifications	1-2
2. CONSTRUCTION AND FUNCTIONS	2-1
2.1 Construction	2-1
2.2 Function of Each Component	2-2
3. LUBRICATING OIL AND REFRIGERANT GAS CIRCULATING CIRCUITS	3-1
4. PRINCIPLE OF OPERATION	4-1
5. ELECTRICAL SYSTEM	5-1
5.1 Electrical Circuits	5-1
5.2 Electrical Parts	5-2
5.3 Control Panel	5-4
6. CHECK AND MAINTENANCE	6-1
6.1 Cleaning of the Condenser	6-1
7. TROUBLESHOOTING AND REPAIRS	7-1
7.1 If the Refrigerant Gas Compressor Stops	7-1
7.2 If the Oil Pump Stops	7-1
7.2.1 Overload protection for the oil pump	7-1
7.2.2 Overload protection for the compressor	7-2
7.2.3 Causes of overloads on the oil pump	7-2
7.2.4 Causes of overloads on the compressor	7-3
7.2.5 Other causes	7-3
7.3 Trouble with the Automatic Temperature Controller (ATA controller)	7-4
7.4 When Oil Temperature Control does not Work	7-4

	Page
8. Line Filter	8 - 1
8.1 Filter construction	8 - 1
8.2 Cleaning the filter	8 - 2

MC100 (1M)

PALLET MAGAZINE UNIT

130A

CONTENTS

	Page
1. OUTLINE	1-1
2. PALLET MAGAZINE DRIVE SEQUENCE	2-1
2.1 Stand-By Conditions	2-1
2.1.1 Machine Side	2-1
2.1.2 Pallet Magazine Side	2-1
2.2 Drive Sequence	2-1
3. PALLET MAGAZINE DRIVE MECHANISM	3-1
3.1 Arm for Pallet Loading and Unloading	3-1
3.2 Pallet Carrier	3-2
3.2.1 Construction of Carrier	3-2
3.2.2 Pallet Fixing Pin	3-2
3.2.3 Adjusting the Level of the Carrier	3-3
3.2.4 Positioning Adjustment of the Carriers ..	3-3
3.3 Magazine Indexer	3-5
3.4 Carrier Stopper	3-6
4. HYDRAULIC SYSTEM	4-1
4.1 Hydraulic Circuit	4-1
4.2 Hydraulic Devices	4-1
4.3 Cylinder Mounting Position	4-3
4.3.1 Cylinder for Pallet Loading and Unloading	4-3
4.3.2 Cylinder for Magazine Indexer	4-4
4.3.3 Cylinder for Carrier Stopper	4-4

	Page
4.4 Cylinder Speed Adjustment	4-5
5. LIMIT SWITCHES	5-1
5.1 LSs for Pallet Loading and Unloading	5-1
5.1.1 Construction and Adjusting Method	5-1
5.1.2 Mounting Position	5-2
5.2 LSs for Pallet Carrier Stopper	5-3
5.2.1 Construction and Adjusting Method	5-3
5.2.2 Mounting Position	5-4
5.3 LSs for Pallet Carrier	5-5
5.3.1 Construction and Adjusting Method	5-5
5.3.2 Mounting Position	5-8
5.4 LSs for Magazine Indexer	5-12
5.4.1 Construction and Adjusting Method	5-12
5.4.2 Mounting Position	5-12
5.5 LSs for Detecting the Presence of Pallet	5-14
5.5.1 Construction and Adjusting Method	5-14
5.5.2 Mounting Position	5-14
5.6 LSs for Checking the Pallet Changing Posi- tion and for Interlock	5-16
5.6.1 Construction and Adjusting Method	5-16
5.6.2 Mounting Position	5-17
6. DRIVEN CHAIN	6-1
7. INTERLOCK AND EMERGENCY STOP	7-1
7.1 Interlock	7-1
7.2 Emergency Stop	7-1

	Page
8. PERIODIC CHECKS	8-1
8.1 Daily Checks Prior to Operation	8-1
8.2 Monthly Checks and Maintenance	8-1
8.3 Semiannual Checks and Maintenance	8-2

* * * * *

MC100 (1M)

AUTOMATIC SPLASH GUARD UNIT

171A

CONTENTS

	Page
1. General	1 - 1
2. Main Dimensions	2 - 1
3. Drive Mechanism	3 - 1
3.1 Driving Method	3 - 1
3.2 Drive Chain	3 - 1
4. Pneumatic Unit	4 - 1
4.1 Pneumatic Unit	4 - 1
4.2 Pneumatic Circuit	4 - 2
4.3 Cylinder	4 - 3
5. Limit Switch	5 - 1
5.1 Construction and Adjusting Method	5 - 1
5.2 Mounting Position	5 - 2
6. Fixed Terminal Bracket	6 - 1
7. Periodic Checks	7 - 1
7.1 Pneumatic Unit	7 - 1
7.2 Drive Chain	7 - 1