

VERTICAL MACHINING CENTER  
**VR-40**

---

---

OSP5020M/OSP500M-G

---

**OPERATION & MAINTENANCE MANUAL**  
(1st Edition)

TABLE OF CONTENTS

PAGE

TO ENSURE SAFE OPERATIONS

INTRODUCTION

SECTION 1 GENERAL INFORMATION ..... 1

- 1. Machine Specifications ..... 1
- 2. Dimensional Drawings ..... 3
- 3. Installation Plan ..... 4
- 4. Table Dimensions ..... 5
- 5. Names of Main Components ..... 6
- 6. Hand Tools ..... 7
- 7. Precautions When the 8,000 min<sup>-1</sup> {rpm} Specification is Selected ..... 8
  - 7-1. When Starting the Spindle ..... 8
  - 7-2. Service Life ..... 8
  - 7-3. Changing the Spindle Unit ..... 8
  - 7-4. Imbalanced Tools ..... 8

SECTION 2 HANDLING AND INSTALLATION OF MACHINE ..... 9

- 1. Site Selection Guidelines ..... 9
- 2. Foundation Requirements ..... 9
- 3. Foundation Plan ..... 10
- 4. Foundation Plates and Foundation Bolts (Optional) ..... 11
- 5. Preparation Before Delivery ..... 12
  - 5-1. Power Requirements ..... 12
  - 5-2. Compressed Air Supply ..... 12
  - 5-3. Lubricating and Hydraulic Oil ..... 13
- 6. Handling Procedures ..... 14
  - 6-1. Lifting the Machine ..... 14
  - 6-2. General Precautions for Lifting ..... 15
  - 6-3. Lifting the Coolant Tank ..... 15
- 7. Machine Transportation by Truck ..... 16
- 8. Before Removing Z-axis Drive Motor ..... 16
- 9. Machine Installation ..... 17
  - 9-1. Temporary Installation ..... 17
  - 9-2. Assembling the Units and Parts Shipped Separately ..... 18
  - 9-3. Leveling the Machine ..... 18

	<u>PAGE</u>
SECTION 3 PREPARING THE MACHINE FOR OPERATION .....	20
1. Lubrication .....	20
1-1. Lubrication Chart .....	21
1-2. Lubrication Chart Symbols .....	22
1-3. Lubricating Oil Specifications .....	23
2. Supplying Oil and Inspection .....	24
2-1. Spindlehead Lubricating Oil Cooling Unit (optional) .....	24
2-2. Lubrication of Optional Lubricator .....	25
SECTION 4 OPERATIONS .....	26
1. Operation Panels .....	26
1-1. Operation Panels Arrangement (1/2) .....	26
1-2. Operation Panels Arrangement (2/2) .....	27
2. Manual Operations .....	28
2-1. Power ON/OFF .....	28
2-2. Emergency Stop .....	31
2-3. Spindle Rotation in Neutral (Spindle Release) .....	32
2-4. Spindle Orientation .....	33
2-5. Clamping and Unclamping the Tool in Spindle .....	35
2-5-1. Clamping/Unclamping Operation .....	35
2-5-2. Reference (MOLYKOTE 321) .....	37
2-6. Spindle Speed .....	40
2-6-1. Spindle Speed Selection .....	40
2-6-2. Spindle Speed-Torque/Output Diagrams .....	41
2-7. Spindle Operations .....	42
2-7-1. Operation Procedures .....	42
2-7-2. Spindle Operations: Start/Stop, Clockwise/Counterclockwise (CW/CCW) .....	43
2-8. X-, Y- and Z-Axis Feed .....	44
2-8-1. Rapid Feed Operation Procedure .....	45
2-8-2. Manual Cutting Feed Operation Procedure .....	46
2-8-3. Automatic Axis Feed Operation .....	46
2-8-4. Machining Range .....	47
2-9. Manual Pulse Feed .....	48

	<u>PAGE</u>
2-10. Coolant Supply Unit .....	50
2-10-1. Specifications .....	50
2-10-2. Operation Procedure .....	52
2-10-3. Cleaning .....	53
2-11. Chip Conveyor (Coil Screw, Kit Specification) .....	54
2-12. Chip Bucket (Kit Specification) .....	55
2-13. Work Light (Kit Specification) .....	56
2-14. Oil Mist Coolant Supply System (Optional) .....	57
2-15. Nozzle Chip Air Blower (Kit Specification) .....	58
2-16. Through-the-Tool Coolant Supply System (Optional) .....	59
2-17. End Lamp, Error Lamp and Automatic Power Shut-off Operations (Kit Specification) .....	61
<b>SECTION 5 INSPECTION, MAINTENANCE AND ADJUSTMENTS .....</b>	<b>62</b>
1. Periodical Inspection Schedule .....	62
2. Adjustment for Regulator, Lubricator and Air Filter .....	63
3. Adjustment of Automatic Tool Changer (ATC) .....	64
4. Air Filter Cleaning for Spindlehead Cooling Unit .....	65
<b>SECTION 6 AUTOMATIC TOOL CHANGER (ATC) .....</b>	<b>66</b>
1. Cutting Tools .....	66
2. Dimensions of Tool Shank and Pull Stud .....	68
2-1. Tool Shank Dimensions .....	70
2-2. Pull Stud Dimensions .....	73
3. Tooling for ATC .....	75
3-1. Maximum Size of Tools Stored in Magazine With Adjacent Tools .....	75
3-2. Maximum Size of Tools Stored in Magazine Without Adjacent Tools .....	76
3-3. Tooling Interference .....	77
4. Setting Tools into the ATC Magazine .....	78
5. Manual Magazine Indexing Operation .....	79
6. Manual ATC Operation .....	80
6-1. One Step Advance and One Step Reverse .....	80
6-2. One Cycle Start and Return Cycle Start .....	81
6-3. Precautions for Manual ATC Operation .....	81

	<u>PAGE</u>
7. ATC Gripper No./Tool No. Table (Setting Tools) .....	82
7-1. Memory-random ATC Specification .....	82
7-1-1. Setting (1) .....	83
7-1-2. Setting (2) .....	85
8. Initial Conditions for Continuous ATC Operation .....	89
9. Automatic Tool Change Sequence .....	90
10. ATC Operation Sequence Diagram .....	94
11. Safety Precautions for ATC Operation .....	96
12. Other Precautions for ATC Operation .....	96
 SECTION 7 APPENDED DRAWINGS .....	 98
1. Spindle Nose Dimensions .....	98
2. Pneumatic Circuit Diagram .....	99
3. Skeleton Drawing .....	100
3-1. Spindle Drive Mechanism .....	100
3-2. X-, Y- and Z-axis Drive Mechanism .....	101
3-3. ATC Drive Mechanism .....	103
4. Arrangement of Limit Switches - Spindlehead .....	104
5. Arrangement of Limit Switches - Machine .....	105
6. Arrangement of Limit Switches - ATC .....	106
7. Arrangement of Limit Switches, Motors and Lamps, etc - Machine .....	107
8. Spare Parts List .....	108