




Mazak

MAINTENANCE MANUAL

MTV-655/60N, 80N

Manual No. : S540MA0010E

**MAINTENANCE
MANUAL**

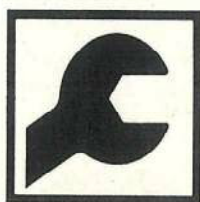

MAINTENANCE MANUAL

MTV-655/60N, 80N

Manual No. : S540MA0010E

Serial No. :

Before using this machine and equipment, fully understand the contents of this manual to ensure proper operation. Should any questions arise, please ask the nearest Technical/Service Center.

IMPORTANT NOTICE

1. Be sure to observe the safety precautions described in this manual and the contents of the safety plates on the machine and equipment. Failure may cause serious personnel injuries or material damage. Please replace any missing safety plates as soon as possible.
2. No modifications are to be performed that will affect operation safety. If such modifications are required, please contact the nearest Technical/Service Center.
3. For the purpose of explaining the operation of the machine and equipment, some illustrations may not include safety features such as covers, doors, etc. Before operation, make sure all such items are in place.
4. This manual was considered complete and accurate at the time of publication, however, due to our desire to constantly improve the quality and specification of all our products, it is subject to change or modification. If you have any questions, please contact the nearest Technical/Service Center.
5. Always keep this manual near the machinery for immediate use.
6. If a new manual is required, please order from the nearest Technical/Service Center with the manual No. or the machine name, serial No. and manual name.

Issued by Manual Publication Section, Yamazaki Mazak Corporation, Japan

CONTENTS

1.	INTRODUCTION	1-1
1-1	List of Related Manuals and Documents	1-1
1-2	Pagination	1-1
1-3	Numbering of Figures and Tables	1-2
2.	SAFETY GUIDELINES	2-1
2-1	General	2-1
2-2	Basic Safety Items	2-1
2-3	Clothing and Personal Safety	2-3
2-4	Safety Items Related to Operation	2-3
2-5	Safety Considerations Relating to Holding Workpieces and Tooling	2-5
2-6	Safety Items Related to Maintenance	2-6
2-7	Safety Items Related to the Workplace	2-7
2-8	Safety Device	2-8
2-9	Safety Plates	2-10
3.	OUTLINE OF THE MACHINE	3-1
3-1	Machine Construction	3-1
4.	REGULAR INSPECTION AND MAINTENANCE	4-1
4-1	General	4-1
4-2	Table of Inspection and Maintenance Items	4-2
4-3	Daily Inspection and Maintenance	4-5
4-3-1	Inside the Machine	4-6
4-3-2	Outside the Machine	4-7
4-3-3	Checking Oil Levels	4-8
4-3-4	Checking Pressures	4-9
4-3-5	Changing or Replenishing Oils	4-10
4-3-6	Around the Machine	4-11

4-4	Weekly Inspection and Maintenance	4-12
4-4-1	Outside the Machine	4-12
4-4-2	Changing or Replenishing Oils	4-14
4-4-3	Around the Machine	4-15
4-5	Monthly Inspection and Maintenance	4-15
4-5-1	Around the Machine	4-15
4-6	Every Six-Month Inspection and Maintenance	4-16
4-6-1	Changing or Replenishing Oils	4-17
4-6-2	Around the Machine	4-18
4-7	Every Year Inspection and Maintenance	4-29
4-7-1	Changing or Replenishing Oils	4-29
4-7-2	Around the Machine	4-31
4-8	Inspection and Maintenance before Stopping the Machine for a Long Time	4-40
4-9	Inspection and Maintenance before Starting the Operation after Stopping the Machine for a Long Time	4-41
5.	MAINTENANCE OF MAJOR UNITS	5-1
5-1	Spindle	5-1
5-1-1	Troubleshooting	5-1
5-1-2	Construction of the Spindlehead	5-4
5-1-3	Changing the Solenoid Valve	5-5
5-2	X-axis, Y-axis, and Z-axis	5-6
5-2-1	Troubleshooting	5-6
5-2-2	Construction of the Axis Drive Systems	5-7
5-3	ATC	5-8
5-3-1	Troubleshooting	5-8
5-3-2	Construction of the ATC	5-9
5-4	Magazine	5-10
5-4-1	Troubleshooting	5-10
5-4-2	Construction of the Magazine	5-11

5-5	Hydraulic System	5-12
5-5-1	Troubleshooting	5-12
5-5-2	Maintenance of the Hydraulic Unit	5-13
5-5-3	Changing the Hydraulic Valve	5-15
5-5-4	Hydraulic Circuit Diagram	5-18
5-6	Pneumatic System	5-21
5-6-1	Troubleshooting	5-21
5-6-2	Maintenance of the FRL (Air) Unit	5-21
5-6-3	Pneumatic Circuit Diagram	5-23
5-7	Centralized Lubrication Unit	5-25
5-7-1	Troubleshooting	5-25
5-7-2	Maintenance of the Centralized Lubrication Unit	5-25
5-7-3	Centralized Lubrication Circuit Diagram	5-26
5-8	Spindle Cooling Unit	5-27
5-8-1	Troubleshooting	5-27
5-8-2	Construction of the Spindle Cooling Unit	5-28
5-8-3	Spindle Cooling Circuit Diagram	5-29
5-8-4	Cleaning the Filter in the Spindle Cooling Fluid Collection Circuit	5-30
5-9	Coolant System	5-32
5-9-1	Troubleshooting	5-32
5-9-2	Construction of the Coolant System	5-33
5-9-3	Cleaning the Coolant Discharge Nozzles	5-34
5-10	Covers	5-35
5-10-1	Troubleshooting	5-35
5-10-2	Construction of Machine Covers	5-35
5-10-3	Maintenance of the X-axis Slideway Cover	5-36
5-10-4	Maintenance of the Y-axis Slideway Cover	5-38

5-11	NC Unit and Electrical Control Unit	5-39
5-11-1	Troubleshooting	5-39
5-11-2	Construction of the NC System	5-40
5-11-3	Maintenance of the NC Unit and Electrical Control Unit	5-41
5-11-4	Changing the Proximity Sensor	5-43
6.	INSTALLATION	6-1
6-1	Precautions on Installing the Machine	6-1
6-2	Preparing for Installation	6-1
6-2-1	Environmental Requirements	6-1
6-2-2	External Power Source Requirements	6-3
6-2-3	Air Source Requirements	6-5
6-2-4	Items to Be Confirmed when Carrying the Machine	6-5
6-2-5	Foundation Work	6-6
6-3	Installation	6-8
6-3-1	Precautions on Installation	6-8
6-3-2	Procedure to Lift the Machine	6-9
6-3-3	Unpacking, Inspection and Cleaning	6-11
6-3-4	Location of the Shipping Brackets	6-12
6-3-5	Installing the Machine	6-13
6-4	Connecting to the Power and Air Sources	6-15
6-4-1	Connecting to the Power Source	6-15
6-4-2	Grounding	6-16
6-4-3	Connecting to the Air Source	6-17
6-5	Test Run	6-18
6-5-1	Checking the Machine before Starting Test Run	6-18
6-5-2	Electric Inspection before Switching the Power on	6-19
6-5-3	Checking the Parameter Settings	6-20
6-5-4	Checking the Machine in Manual Operation	6-20
6-5-5	Breaking in Operation	6-20

7.	APPENDIX	7-1
7-1	List of Sensors, Limit Switches, and Oiling Points	7-1
7-2	List of Standard Service Tools	7-2
7-3	List of Wearable Parts	7-4