

OKK

OPERATION MANUAL

For

Auto Mill

MHA 350 / 450 P

OKK CORPORATION

3-21-9, Toyosaki, Kita-ku
Osaka, Japan

MHA35 / 45P-O

April 92-P

INSTRUCTION MANUAL

CONTENTS

SECTION 1

The operation coordinate system	1
---------------------------------------	---

SECTION 2

Powering on the Machine Check	2
-------------------------------------	---

SECTION 3

Changing the rotation speed of the spindle	4
3-1 Changing the lever position to select the spindle's rotation	4

SECTION 4

Console	6
4-1 Functions of console switches and lamps	8
4-2 Load meter display (CRT)	16

SECTION 5

List of auxiliary functions	17
-----------------------------------	----

SECTION 6

PLC switches	18
--------------------	----