

SYSMAC
C-series and CVM1 PCs
SYSMAC Support Software

OPERATION MANUAL

OMRON

SYSMAC C-series and CVM1 PCs

SYSMAC Support Software

Operation Manual: CVM1 PCs

Produced May 1996

TABLE OF CONTENTS

PRECAUTIONS	xiii
1 Intended Audience	xiv
2 General Precautions	xiv
3 Safety Precautions	xiv
4 Operating Environment Precautions	xiv
5 Application Precautions	xv
6 Software Operating Precautions	xvi
 PART 1:	
INTRODUCTION	1
 SECTION 1	
Saving and Retrieving Data	3
1-1 File Formats	4
1-2 Saving and Retrieving DOS Files	4
 SECTION 2	
CVM1 Models	7
2-1 Main Differences between CVM1 Models	8
 PART 2:	
OFFLINE OPERATIONS	9
 SECTION 3	
Programming	11
3-1 Getting Started	12
3-2 Programming in Ladder Form	22
3-3 Storing and Checking Programs	64
3-4 Saving and Retrieving Programs	71
3-5 Searching Ladder Diagrams	75
3-6 Editing Ladder Programs	84
3-7 Editing I/O Comments	88
3-8 Programming in the Mnemonic Display Mode	94
 SECTION 4	
Editing DM	103
4-1 Introduction	104
4-2 Reading/Writing DM Data	104
4-3 DM Menu Operations	105
 SECTION 5	
Editing I/O Tables	115
5-1 Introduction	116
5-2 I/O Table Errors	118
5-3 Writing I/O Tables	119
5-4 Checking I/O Tables	126
5-5 Saving/Retrieving I/O Tables	127
5-6 Clearing I/O Tables	129
5-7 Customizing CPU Bus Units	129
5-8 I/O Allocations to Special I/O Units	131

SECTION 6

Utility Operations	133
6-1 The Utility Menu	134
6-2 Displaying Data Lists	135
6-3 Changing Addresses	139
6-4 Printing Data Lists and Programs	147
6-5 Memory Card Operations	154
6-6 Program Conversion	161
6-7 Data Trace	169
6-8 PC Setup	171
6-9 Comparing Programs	199
6-10 Editing PC IDs	200
6-11 Customization	209

SECTION 7

System Setup	217
7-1 Overview	218
7-2 System Setup Parameters	219

SECTION 8

File Management	225
8-1 File Management Operations	226
8-2 DOS File Operations	226
8-3 LSS File Operations	233

SECTION 9

Option Menu	239
9-1 Introduction	240
9-2 Registering a Utility	240
9-3 Deleting a Utility	242
9-4 Changing a Registered Utility	243
9-5 Starting a Utility	244

PART 3:

ONLINE OPERATIONS 245

SECTION 10

Monitoring	247
10-1 Introduction	248
10-2 Transferring Programs	251
10-3 Clearing Data Areas	254
10-4 Searching in Ladder Diagrams	255
10-5 AI Searches	255
10-6 Changing the Display Mode	258
10-7 Changing Set Values	259
10-8 Pausing Displays	262
10-9 Differentiation Monitoring	268
10-10 Cross-referencing	271
10-11 Clearing Errors	273
10-12 Monitoring Data	273
10-13 Online Editing	286
10-14 Monitoring Interrupt Programs	289
10-15 Reading the Cycle Time	290
10-16 Checking Memory Usage	291
10-17 Monitoring Other Nodes	292

TABLE OF CONTENTS

SECTION 11

DM Editing	295
11-1 The DM Menu	296
11-2 Saving DM/EM Data	298
11-3 Retrieving DM/EM Data	299
11-4 Transferring DM/EM Data	300
11-5 Comparing DM/EM Data	302

SECTION 12

Editing I/O Tables	305
12-1 Introduction	306
12-2 Transferring/Comparing I/O Tables	309
12-3 Displaying I/O Tables	310
12-4 Creating I/O Tables	314
12-5 Changing I/O Tables	314
12-6 Verifying I/O Tables	316

SECTION 13

Utility Operations	319
13-1 The Utility Menu	320
13-2 Memory Card Operations	320
13-3 Data Tracing	330
13-4 Displaying and Setting the Clock	339
13-5 Customization	339
13-6 Displaying Errors	341
13-7 Protecting UM	344

PART 4:

NETWORKS AND CPU BUS UNITS ... 347

SECTION 14

Network-related Operations	349
14-1 Network Support Tables	350
14-2 Data Links	350
14-3 Routing Tables	350
14-4 Support for CPU Bus Units	350
14-5 Network Diagnosis	350
14-6 Support for SYSMAC BUS/2	351

SECTION 15

Support for SYSMAC NET Data Links	353
15-1 Overall Procedure	354
15-2 Offline Data Link Table Menu	354
15-3 Online Data Link Table Menu	359

SECTION 16

Support for SYSMAC LINK Data Links	369
16-1 Overall Procedure	370
16-2 Offline Data Link Table Menu	370
16-3 Online Data Link Table Menu	380

SECTION 17	
Routing Tables	397
17-1 Overview	398
17-2 Overall Input and Transfer Procedure	398
17-3 Network Communication Range	399
17-4 Offline Routing Table Operations	400
17-5 Online Routing Table Operations	406
SECTION 18	
Support for CPU Bus Units	415
18-1 CPU Bus Unit Operations	416
18-2 Communications Unit Settings	416
18-3 Software Switch Settings	424
18-4 CPU Bus Unit System Setup	427
18-5 CPU Bus Unit Software Switches	428
SECTION 19	
Diagnosing Networks	431
19-1 Overview	432
SECTION 20	
Support for SYSMAC BUS/2 Systems	443
20-1 Overview	444
20-2 Displaying Status	445
20-3 Test	446
20-4 Reading the Cycle Time	447
20-5 Slave Connection Status	448
20-6 Switching the Line Mode	450
PART 5:	
APPENDICES	451
Appendices	
A Error Messages	453
B Data File Extensions	461
C PC Data Areas	463
D Function Codes	465
E Alphabetic List of Mnemonics	471
F Offline Operations	475
G Online Operations	481
H Network Operations	485
I Correcting Converted Programs	489
Glossary	529