


PROFESSIONAL 5

OPERATION MANUAL

SCREEN EDITION

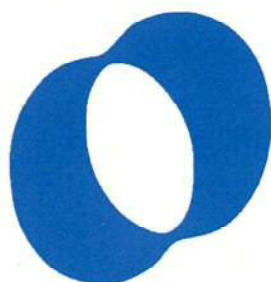

MAKINO

Screens - Contents

Screens - Contents

1. Basic Knowledge

1.1	Outline.....	B1-2
1.1.1	Screen Display Area	B1-2
1.1.2	Common Information Display Area.....	B1-3
1.1.3	Button Area	B1-4
1.2	Outline of Operation Screens	B1-5
1.3	Starting Up Controller	B1-7
1.3.1	Splash Window	B1-7
1.3.2	Machine Parameter Check Dialog Box	B1-10
1.4	Shutting Down Controller	B1-11
1.5	Viewing Info Header	B1-12
1.5.1	Execution Program Information.....	B1-13
1.5.2	Machine Condition Lamps	B1-14
1.5.3	Selected Screen Information	B1-15
1.6	Viewing NC Status Bar	B1-16
1.7	Changing Operation Screen	B1-19
1.7.1	Using Screen Selection Buttons.....	B1-19
1.7.2	Using MDI Keyboard Function Keys	B1-20
1.8	Screen Operation Buttons	B1-21
1.8.1	Active/Inactive Status of Screen Operation Buttons	B1-21
1.8.2	Changing Screen Operation Buttons.....	B1-21
1.9	Using Floating Function Buttons.....	B1-24

2. Main Screen

2.1	Outline	B2-2
2.2	Viewing Feed Axis Coordinates.....	B2-3
2.2.1	Absolute Coordinates	B2-3
2.2.2	Relative Coordinates	B2-3
2.2.3	Machine Coordinates.....	B2-4
2.2.4	All Coordinates.....	B2-4
2.2.5	Handle Display.....	B2-5
2.3	Viewing Program.....	B2-6
2.4	Viewing Machine Information	B2-7
2.5	Viewing Modal Information.....	B2-8
2.6	Presetting Relative Coordinates.....	B2-10
2.6.1	Using [Preset] Button.....	B2-10
2.6.2	Touching Relative Coordinate Display.....	B2-11
2.7	Resetting Relative Coordinates for Each Axis	B2-12
2.7.1	Using [Origin] Button.....	B2-12
2.7.2	Touching Relative Coordinate Display.....	B2-13
2.8	Resetting Relative Coordinates for All Axes	B2-14
2.9	Presetting Work Coordinate System	B2-15
2.10	List of Screen Operation Buttons	B2-16

3. Program Edit Screen

- 3.1 Outline..... B3-2
 - 3.1.1 Program Edit ScreenB3-2
 - 3.1.2 Editing Two Programs at Same TimeB3-5
 - 3.1.3 Program List Screen.....B3-8

- 3.2 Manipulating Programs in NC Memory B3-10
 - 3.2.1 Creating New NC Programs B3-10
 - 3.2.2 Selecting NC Programs B3-13
 - 3.2.3 Changing NC Program Numbers B3-16
 - 3.2.4 Deleting NC Programs..... B3-17

- 3.3 Manipulating Programs Outside NC Memory B3-19
 - 3.3.1 Starting Editing of Programs..... B3-19
 - 3.3.2 Ending Editing of Programs..... B3-20

- 3.4 Editing Programs..... B3-21
 - 3.4.1 Entering Programs..... B3-21
 - 3.4.2 Moving Cursor B3-24
 - 3.4.3 Selecting Program range..... B3-25
 - 3.4.4 Inserting Programs B3-26
 - 3.4.5 Changing Program Words B3-28
 - 3.4.6 Deleting Programs B3-30
 - 3.4.7 Copying Programs B3-34
 - 3.4.8 Cutting Programs..... B3-35
 - 3.4.9 Pasting Programs B3-36
 - 3.4.10 Program Insertion 2 B3-39
 - 3.4.11 Searching for Words B3-47
 - 3.4.12 Program Rewind B3-48
 - 3.4.13 Moving to End of Program..... B3-49
 - 3.4.14 Searching for Sequence Number B3-50
 - 3.4.15 Jumping to Specified Line B3-51
 - 3.4.16 Replacing Words in Program..... B3-52
 - 3.4.17 Copying All Content to New Program..... B3-55
 - 3.4.18 Copying Specified Range to New Program..... B3-56
 - 3.4.19 Moving Specified Range to New Program B3-57

3.5	Using Fixed Programs	B3-58
3.5.1	Creating Fixed Program Groups.....	B3-59
3.5.2	Renaming Fixed Program Groups.....	B3-60
3.5.3	Deleting Fixed Program Groups	B3-60
3.5.4	Creating Fixed Programs.....	B3-61
3.5.5	Renaming Fixed Programs	B3-62
3.5.6	Deleting Fixed Programs	B3-62
3.5.7	Copying Fixed Programs	B3-63
3.6	Manipulating Program List Screen	B3-64
3.6.1	Selecting Multiple NC Programs.....	B3-64
3.6.2	Changing Order on Program List Screen	B3-66
3.6.3	Displays Groups According to Comments.....	B3-68
3.7	Using Program Restart.....	B3-70
3.7.1	Displaying Program Restart Information	B3-70
3.7.2	Restarting Program.....	B3-71
3.8	Displaying Machine Information	B3-74
3.8.1	Displaying Current Coordinates.....	B3-74
3.8.2	Displaying Modal Information	B3-74
3.8.3	Displaying Machine Information	B3-75
3.9	Making Display Settings.....	B3-76
3.9.1	Setting Program Display.....	B3-76
3.9.2	Changing Program Text Font Size.....	B3-79
3.10	List of Screen Operation Buttons	B3-80
3.10.1	Program Edit Screen	B3-80
3.10.2	Alarm List Screen	B3-83

4. Makino Data Center Screen

4.1	Outline.....	B4-2
4.1.1	Function Outline.....	B4-2
4.1.2	Screen Outline.....	B4-4
4.1.3	Definition of Terms.....	B4-5
4.2	Viewing Folder/File Information	B4-6
4.2.1	Viewing Folder Tree.....	B4-8
4.2.2	Viewing Folder List.....	B4-9
4.2.3	Viewing Used Capacity/Available Capacity	B4-11
4.2.4	Relationship of Machine Data Types and File Names	B4-12
4.3	Manipulating Folder Tree.....	B4-14
4.4	Changing File List Order	B4-15
4.5	Refreshing File/Folder Information	B4-17
4.6	Copying & Pasting Files/Folders	B4-18
4.6.1	Viewing Pasted Dialog Boxes.....	B4-22
4.6.2	Manipulating Pasted Dialog Boxes.....	B4-23
4.6.3	Viewing Copy Progress Bar.....	B4-24
4.7	Editing NC Programs.....	B4-25
4.8	Creating New O Numbers	B4-26
4.9	Creating New NC Program Files	B4-27
4.10	Creating New Folders.....	B4-28
4.11	Changing O Numbers.....	B4-29
4.12	Renaming Files	B4-31
4.13	Renaming Folders	B4-33

4.14	Deleting O Numbers	B4-35
4.15	Deleting Folders/Files	B4-36
4.15.1	Deleting Folders from Folder Tree.....	B4-36
4.15.2	Deleting Folders/Files from File List.....	B4-37
4.16	Using M198 to Perform DNC Operation	B4-39
4.16.1	Function Specifications	B4-39
4.16.2	Viewing M198 Folder Information.....	B4-40
4.16.3	Viewing M198 Folder Information.....	B4-41
4.16.4	Viewing M198 Folder Information.....	B4-42
4.16.5	Using M198 Sub Program Call to Perform DNC Operation.....	B4-43
4.16.6	Viewing M198 Progress Bar	B4-45
4.17	Using DNC Schedule to Perform DNC Operation ...	B4-46
4.17.1	Viewing DNC Schedule List.....	B4-46
4.17.2	Adding Files	B4-49
4.17.3	Deleting DNC Files	B4-50
4.17.4	Changing DNC File Order.....	B4-51
4.17.5	Setting M00 Insertion.....	B4-52
4.17.6	Editing DNC Files	B4-53
4.17.7	Changing DNC Schedule Start Position	B4-54
4.17.8	Executing DNC Schedule	B4-55
4.17.9	Viewing DNC Progress Bar	B4-57
4.17.10	Changing DNC Schedule List Display Size.....	B4-58
4.17.11	Saving DNC Schedule in File	B4-59
4.17.12	Reading DNC Schedule File.....	B4-61
4.18	Connection with Host Computer.....	B4-62
4.18.1	Making Connection	B4-63
4.18.2	Host Computer Settings.....	B4-66
4.18.3	Making Windows CE Network Settings	B4-68
4.18.4	Host Computer Side Common Folder Settings	B4-72
4.18.5	Precautions on Direct Connection.....	B4-73
4.19	Selecting Multiple Files/Folders.....	B4-75
4.19.1	Selection from File List	B4-75
4.19.2	Using Keyboard	B4-76
4.19.3	Selecting All Screen Operation Buttons	B4-77

4.20 Changing Settings..... B4-78

4.20.1 Changing Display/Operation Settings B4-78

4.20.2 Changing Data File Settings..... B4-79

4.20.3 Changing Copy Settings..... B4-80

4.20.4 Changing M198 Settings B4-82

4.20.5 Changing DNC Settings B4-84

4.20.6 Changing Maintenance Settings B4-85

4.21 List of Screen Operation Buttons..... B4-86

5. Tool Offset Screen

5.1	Outline	B5-2
5.2	Confirming Tool Offset Values	B5-3
5.2.1	Tool Offset Memory A	B5-3
5.2.2	Tool Offset Memory B	B5-3
5.2.3	Tool Offset Memory C	B5-4
5.2.4	Changing Pages	B5-4
5.3	Confirming Machine Information	B5-5
5.3.1	Viewing Feed Axis Coordinates.....	B5-6
5.3.2	Viewing Programs.....	B5-7
5.3.3	Viewing C Code Status	B5-7
5.3.4	Viewing Modal Information	B5-8
5.3.5	Viewing Machine Information.....	B5-9
5.4	Searching for Tool Offset Numbers	B5-10
5.4.1	Entering Tool Offset Number in Search Dialog Box	B5-10
5.4.2	Directly Entering Tool Offset Number in Input Area.....	B5-11
5.5	Setting Tool Offset Values	B5-12
5.5.1	Changing Input Mode	B5-12
5.5.2	Using Entered Value as Setting.....	B5-13
5.5.3	Adding Entered Value to Existing Tool Offset.....	B5-14
5.5.4	Entering Feed Axis Relative Coordinate Values.....	B5-19
5.5.5	Deleting Tool Offset Values.....	B5-22
5.6	Calculation Function	B5-25
5.7	Preset Function.....	B5-26
5.8	Indexing Specified Pot Tool to Spindle.....	B5-27
5.9	Screen Display Settings	B5-28
5.10	List of Screen Operation Buttons	B5-30

- 6. Work Offset Screen**
- 6.1 Outline..... B6-2
- 6.2 Confirming Work Zero Point Offset Values B6-3
- 6.3 Confirming Machine Information..... B6-4
 - 6.3.1 Viewing Feed Axis Coordinates.....B6-5
 - 6.3.2 Viewing Programs.....B6-6
 - 6.3.3 Viewing G Code Status.....B6-6
 - 6.3.4 Viewing Modal InformationB6-7
 - 6.3.5 Viewing Machine InformationB6-8
- 6.4 Searching for Work Coordinate System..... B6-9
 - 6.4.1 Using Search Dialog Box.....B6-9
 - 6.4.2 Directly Entering Search Conditions in Input Area B6-10
- 6.5 Setting Work Zero Point Offset ValuesB6-11
 - 6.5.1 Changing Input ModeB6-11
 - 6.5.2 Using Entered Value as Setting..... B6-12
 - 6.5.3 Adding Entered Value to Existing Work Zero Point Offset..... B6-13
 - 6.5.4 Using Measured Value as Setting B6-17
- 6.6 Calculation Function..... B6-22
- 6.7 Screen Display Settings B6-23
- 6.8 List of Screen Operation Buttons..... B6-25

7. Tool Data Screen

7.1	Outline	B7-2
7.2	Display Content.....	B7-4
7.2.1	Text Color.....	B7-4
7.2.2	Background Color.....	B7-4
7.2.3	Display Items	B7-4
7.3	Selecting ATC Magazine to be Displayed.....	B7-19
7.4	Entering Data	B7-20
7.5	Expand/Fold Multiple Cutters	B7-21
7.5.1	[Expand All Cutter] Screen Button	B7-21
7.5.2	Expand Cutter in Tool Data Display Area	B7-21
7.5.3	[Fold Cutter] Screen Button	B7-22
7.5.4	Fold Cutter in Tool Data Display Area.....	B7-22
7.6	Resetting Alarms/Warnings	B7-23
7.7	Searching for Tools	B7-25
7.8	Changing Order	B7-26
7.9	Displaying Specified Tools.....	B7-28
7.10	Copying Tool Data.....	B7-30
7.11	Moving Tool Data	B7-32
7.12	Deleting Tool Data.....	B7-34
7.13	Saving Tool Data in Files.....	B7-35
7.13.1	File Format.....	B7-36
7.14	Reading Tool Data from Files	B7-38

Screens - Contents

7.15	Adjusting Data Display Area Split Position.....	B7-39
7.15.1	Moving Split Position	B7-39
7.15.2	Automatically Adjusting Split Position.....	B7-39
7.16	Automatically Adjusting Header Width.....	B7-41
7.17	Setting Display Items.....	B7-42
7.17.1	Add Items to Display.....	B7-43
7.17.2	Deleting Items from Display.....	B7-44
7.17.3	Changing Item Display Order	B7-45
7.18	Setting Direction of Cursor Movement After Input...	B7-46
7.19	Changing Font Size in Data Display Area.....	B7-47
7.20	Indexing Specified Pot Tool to Spindle.....	B7-48
7.21	List of Screen Operation Buttons.....	B7-50

8. Tool Monitor Screen

8.1	Outline	B8-2
8.2	Machine Condition Display Content	B8-5
8.3	Spindle Tool Data Display Content	B8-6
8.3.1	Tool Life.....	B8-6
8.3.2	SL Upper Value.....	B8-7
8.3.3	SL Lower Value.....	B8-7
8.3.4	AC (Option).....	B8-8
8.3.5	Study Coefficient.....	B8-8
8.4	Turning TL Mode On/Off.....	B8-9
8.4.1	TL Mode On	B8-9
8.4.2	TL Mode Off	B8-9
8.5	Turning SL Upper Mode On/Off.....	B8-10
8.5.1	SL Upper Mode On	B8-10
8.5.2	SL Upper Move Off	B8-10
8.6	Turning SL Lower Mode On/Off.....	B8-11
8.6.1	SL Lower Mode On	B8-11
8.6.2	SL Lower Mode Off	B8-11
8.7	Turning AC Mode On/Off.....	B8-12
8.7.1	AC Mode On	B8-12
8.7.2	AC Mode Off	B8-12
8.8	Turning Study Mode On/Off.....	B8-13
8.8.1	Study Mode On	B8-13
8.8.2	Study Mode Off	B8-13
8.9	Spindle Load Graph Display Content	B8-14
8.10	Feed Axis Load Graph Display Content	B8-15

Screens - Contents

- 8.11 Display for Tool Monitor Alarms B8-16
 - 8.11.1 SL or AC Alarms B8-16
 - 8.11.2 TL or BTS Alarms B8-16

- 8.12 Displaying Past Alarm Status..... B8-17

- 8.13 List of Screen Operation Buttons..... B8-18

Screens

9. Function Screen

9.1	Outline	B9-2
9.2	Turning Functions On/Off	B9-3
9.2.1	Turning Functions On	B9-3
9.2.2	Turning Functions Off	B9-3
9.3	Changing Pages	B9-4
9.3.1	Changing to Previous Page	B9-4
9.3.2	Changing to Next Page.....	B9-4
9.4	Function Display Settings.....	B9-5
9.4.1	Changing Function Display Order	B9-6
9.4.2	Setting Function Display/Non-Display Setting.....	B9-6
9.4.3	Setting Enable/Disable for On/Off Buttons	B9-6
9.5	List of Screen Operation Buttons	B9-7
9.5.1	Function List Operation Buttons	B9-7
9.5.2	Display Setting Operation Buttons.....	B9-7

10. Product Counter Screen

- 10.1 Outline..... B10-2
 - 10.1.1 Product Counter Screen B10-2
 - 10.1.2 Run Time Screen B10-3
 - 10.1.3 Service Counter Screen B10-3

- 10.2 Viewing Product Counter..... B10-4
 - 10.2.1 Product Counter Display Procedure..... B10-4
 - 10.2.2 Details of Display Content B10-4

- 10.3 Setting Product Counter Functions..... B10-6
 - 10.3.1 Property Setting Dialog Box B10-6
 - 10.3.2 Assigning Name..... B10-8
 - 10.3.3 Setting Counter Value..... B10-8
 - 10.3.4 Setting Count Conditions..... B10-9
 - 10.3.5 Setting Target value B10-11
 - 10.3.6 Setting Operation when Target Value is Reached..... B10-12
 - 10.3.7 Enabling/Disabling Counter B10-12

- 10.4 Resetting Product Counter B10-13

- 10.5 Changing Product Counter Screen Display B10-14
 - 10.5.1 Screen Setting Dialog Box..... B10-14
 - 10.5.2 Changing Text Font Size B10-15
 - 10.5.3 Changing Counter Display Method B10-15

- 10.6 Manipulating Run Time Counter B10-16
 - 10.6.1 Displaying Run Time Counter..... B10-16
 - 10.6.2 Resetting Run Time Counter B10-16

- 10.7 Manipulating Service Counter B10-17
 - 10.7.1 Displaying Service Counter B10-17
 - 10.7.2 Saving Service Counter Record in File B10-17

10.8	Viewing NC Information	B10-18
10.8.1	Viewing Feed Axis Coordinates.....	B10-19
10.8.2	Viewing Programs.....	B10-20
10.8.3	Viewing G Code Status.....	B10-20
10.8.4	Viewing Modal Information	B10-21
10.8.5	Viewing Machine Information.....	B10-22
10.9	List of Screen Operation Buttons	B10-23

11. Setting Screen

11.1	Outline.....	B11-2
11.2	Confirming Parameter Settings	B11-4
11.3	Changing Parameter Settings	B11-6
11.3.1	Changing Parameter Settings	B11-6
11.3.2	Undoing Parameter Changes.....	B11-7
11.4	List of Screen Operation Buttons.....	B11-8

12. Alarm Screen

12.1	Outline	B12-2
12.1.1	Alarm List Screen	B12-2
12.1.2	Alarm Details Screen	B12-3
12.2	Viewing Alarm History	B12-4
12.3	Confirming Alarm Details.....	B12-5
12.3.1	Displaying Alarm Details Screen	B12-5
12.3.2	Checking Alarm Details.....	B12-5
12.3.3	Changing Alarm Information Display Settings.....	B12-9
12.3.4	Changing Displayed Alarm Data	B12-11
12.3.5	Displaying Alarm List Screen	B12-12
12.4	Resetting Alarms.....	B12-13
12.4.1	Alarm Reset from Alarm List Screen	B12-13
12.4.2	Alarm Reset from Alarm Details Screen	B12-13
12.5	Retrying Alarm Operation.....	B12-14
12.5.1	Retry Operation from Alarm List Screen.....	B12-14
12.5.2	Retry Operation from Alarm Details Screen	B12-14
12.6	Checking Alarm Filter	B12-16
12.7	List of Screen Operation Buttons	B12-18
12.7.1	Alarm List Screen	B12-18
12.7.2	Alarm Details Screen	B12-19

13. Machine Condition Screen

- 13.1 Outline..... B13-2
- 13.2 Confirming Cause of Abnormal Condition..... B13-3
- 13.3 Confirming Machine Condition B13-5
 - 13.3.1 Confirming Selected Spindle Range B13-5
 - 13.3.2 Confirming ATC Arm Standby Status..... B13-5
 - 13.3.3 Confirming ATC Magazine Manual Intervention Status..... B13-5
 - 13.3.4 Confirming Table Pallet Number..... B13-6
 - 13.3.5 Confirming APC Arm Standby Status B13-6
 - 13.3.6 Confirming APC Manual Intervention Status B13-6
- 13.4 Confirming Auto Grease Lubrication Status B13-7
 - 13.4.1 Confirming Condition B13-8
 - 13.4.2 Cycle Count Setting B13-9
- 13.5 Confirming Marposs Signal Condition B13-10
- 13.6 Confirming Optical Renishaw Signal Condition B13-12
- 13.7 List of Screen Operation Buttons..... B13-14
 - 13.7.1 Machine Condition Display Screen Buttons B13-14
 - 13.7.2 Grease Lubrication Screen Buttons B13-14
 - 13.7.3 Marposs Condition Screen Button..... B13-14
 - 13.7.4 Optical Renishaw Condition Screen Button B13-15

14. Input Output Screen

14.1	Outline	B14-2
14.2	Display Content.....	B14-4
14.3	Searching for Signals with Address	B14-6
14.4	Searching for Signals with Signal Name	B14-7
14.5	Changing Display Mode	B14-8
14.5.1	Selecting One Screen Display	B14-8
14.5.2	Selecting Two Screen Display	B14-8
14.5.3	Displaying Signal Content.....	B14-8
14.6	Converting Address Data to Value.....	B14-9
14.7	List of Screen Operation Buttons	B14-11

15. Maintenance Screen

15.1	Outline.....	B15-2
15.1.1	Solenoid Maintenance Screen	B15-3
15.1.2	Servo Maintenance Screen	B15-5
15.1.3	Data Maintenance Screen	B15-7
15.2	Confirming Signal Status	B15-8
15.2.1	Confirming Maintenance Item Signal Status	B15-8
15.2.2	Confirming Relational Signal Status.....	B15-9
15.3	Changing Maintenance Mode.....	B15-10
15.4	Turning Solenoid and Other Signals On/Off.....	B15-11
15.5	Moving Servo Axis.....	B15-14
15.5.1	Reference Point Return	B15-14
15.5.2	Inching Operation	B15-17
15.5.3	Index Operation	B15-21
15.5.4	Jog Operation	B15-24
15.6	Confirming Maintenance Errors	B15-27
15.7	Changing Unit Data	B15-29
15.8	List of Screen Operation Buttons.....	B15-32
15.8.1	Maintenance Screen Operation Buttons	B15-32
15.8.2	Solenoid Maintenance Screen Operation Buttons	B15-33
15.8.3	Servo Maintenance Screen Operation Buttons.....	B15-33

15.9	Maintenance Screens	B15-34
15.9.1	V33 ATC	B15-34
15.9.2	V56 ATC (Chain Type ATC Magazine: ATC40, 60)	B15-36
15.9.3	V56 ATC (Disk Type ATC Magazine: ATC15, 25).....	B15-38
15.9.4	V77 ATC (Chain Type ATC Magazine: #40-ATC30, 40, 80 #50-ATC20, 30, 40).....	B15-39
15.9.5	V77 ATC (Disk Type ATC Magazine: #40-ATC20).....	B15-41
15.9.6	V33, V56 APC	B15-43
15.9.7	Non-Contact Auto Tool Measuring Unit	B15-44
15.9.8	Data Maintenance.....	B15-45

Screens

16. Macro Variable Screen

16.1	Outline.....	B16-2
16.2	Confirming Custom Macro Variable Values	B16-4
16.2.1	Selecting Displayed Custom Macro Variables	B16-5
16.2.2	Changing Between One Screen/Two Screen Display.....	B16-6
16.3	Confirming Machine Information.....	B16-7
16.3.1	Viewing Feed Axis Coordinates.....	B16-8
16.3.2	Viewing Programs.....	B16-9
16.3.3	Viewing G Code Status.....	B16-9
16.3.4	Viewing Modal Information	B16-10
16.3.5	Viewing Machine Information	B16-11
16.4	Searching for Custom Macro Variables	B16-12
16.4.1	Using Search Dialog Box.....	B16-12
16.4.2	Directly Entering Search Conditions in Input Area	B16-13
16.5	Setting Custom Macro Variable Values.....	B16-14
16.5.1	Changing to Input Mode	B16-14
16.5.2	Setting Entered values	B16-14
16.5.3	Setting to "Empty".....	B16-15
16.5.4	Retrieving and Setting Axis Coordinate Values.....	B16-16
16.6	Using User Setting List.....	B16-21
16.6.1	Displaying User Setting List	B16-21
16.6.2	Registering Arbitrary Macro Variable to User Setting List.....	B16-21
16.6.3	Writing User Setting List Content to File	B16-27
16.6.4	Reading User Setting List Content from File.....	B16-28
16.7	Screen Display Settings	B16-30
16.8	List of Screen Operation Buttons.....	B16-32

17. Machining Result Screen

17.1	Outline	B17-2
17.1.1	List Display Screen	B17-2
17.1.2	Graph Display Screen.....	B17-3
17.2	Changing Screen Display.....	B17-4
17.3	Viewing List of Machining Result Data	B17-5
17.3.1	Display Items	B17-5
17.4	Checking Machining Time Ratio.....	B17-6
17.4.1	Display Items	B17-6
17.5	Changing Order of Data	B17-7
17.6	Checking Machining Result Data Filter	B17-8
17.7	Machining Result List Settings	B17-12
17.7.1	Setting Hide/Show for Display Items	B17-12
17.7.2	Changing Item Display Order	B17-13
17.7.3	Changing Font Size	B17-14
17.8	List of Screen Operation Buttons	B17-15

18. Regular Maintenance Screen

- 18.1 Outline..... B18-2
 - 18.1.1 Regular Maintenance Item List Screen B18-2
 - 18.1.2 User Setting Screen B18-3

- 18.2 Displaying List of Maintenance Items B18-5
 - 18.2.1 Outline of Maintenance Item List..... B18-5
 - 18.2.2 Displaying Maintenance Items B18-5
 - 18.2.3 Changing Maintenance Item List Order B18-6

- 18.3 Recording Completion of Maintenance..... B18-7
 - 18.3.1 When All Maintenance Items Have Been Completed B18-7
 - 18.3.2 When Part of Maintenance Items Have Been Completed B18-7
 - 18.3.3 Selecting Multiple Items..... B18-8

- 18.4 Displaying Regular Maintenance Log B18-9

- 18.5 Setting User Maintenance Items B18-10
 - 18.5.1 Clearing User Setting Items B18-12
 - 18.5.2 Resetting Previous Maintenance Date..... B18-12

- 18.6 List of Screen Operation Buttons..... B18-13
 - 18.6.1 Maintenance Item List Operation Buttons..... B18-13
 - 18.6.2 User Set Maintenance Item Operation Buttons B18-13

19. Parameter Screen

19.1	Outline	B19-2
19.1.1	Parameter List Screen	B19-2
19.1.2	Parameter Check Screen	B19-3
19.2	Confirming Parameter Settings	B19-5
19.2.1	Confirming Parameter Settings	B19-5
19.2.2	Filtering Parameter List Display.....	B19-7
19.3	Changing Parameter Settings	B19-8
19.3.1	Releasing Password Lock	B19-8
19.3.2	Changing Parameter Settings	B19-10
19.4	Using Function Number Help	B19-11
19.5	Checking Difference with Original Parameter.....	B19-12
19.5.1	Displaying Parameter Check Screen.....	B19-12
19.5.2	Confirming Parameter Check Content	B19-13
19.5.3	Displaying Parameter List Screen	B19-15
19.6	Saving Original Parameters	B19-16
19.7	Returning to Original Value	B19-17
19.7.1	Returning Selected Parameter to Original Value.....	B19-17
19.7.2	Returning All Parameters to Original Values	B19-18
19.8	List of Screen Operation Buttons	B19-20
19.8.1	Parameter List Screen	B19-20
19.8.2	Parameter Check Screen	B19-20

20. Help Screen

20.1	Outline.....	B20-2
20.2	Displaying M Code Details	B20-4
20.3	Displaying Version.....	B20-5
20.3.1	Version Installed	B20-5
20.3.2	Applicable Models for Software Installed	B20-6
20.3.3	Language(s) Installed	B20-6
20.3.4	List of Installed Files	B20-6
20.3.5	Applying Mask to Installed File List	B20-7
20.4	List of Screen Operation Buttons.....	B20-8
20.4.1	M Code List Screen Operation Buttons.....	B20-8
20.4.2	Version Screen Operation Buttons	B20-8

21. Screen Customization

21.1	Outline	B21-2
21.2	Setting Screen Select Button Arrangement	B21-4
21.2.1	Allocating Screen Select Buttons to Screen	B21-5
21.2.2	Deleting Screen Select Buttons from Screen	B21-7
21.2.3	Returning to Initial Settings	B21-8
21.2.4	Deleting All Allocated Screens	B21-8
21.2.5	Setting Operation Screen at Start Up	B21-8
21.2.6	Setting Display of Last Operation Screen at Start Up	B21-8
21.3	Setting Floating Function Buttons	B21-10
21.3.1	Deleting Allocated Floating Function Buttons	B21-12
21.3.2	Allocating Flexible Switches	B21-12
21.3.3	Allocating One-Shot Functions	B21-12
21.3.4	Allocating Execution Files	B21-13
21.4	Setting Keyboard	B21-14
21.4.1	Setting Keyboard	B21-14
21.4.2	Setting Screen Displayed when Function Key is Pressed	B21-15
21.4.3	Setting CNC Function Screen Displayed by Function Key	B21-17
21.4.4	Deactivating Operation Screen Changes by Function Keys	B21-18
21.5	Setting Display Font	B21-19