

TC-31A

OPERATION MANUAL

Please read this manual carefully before starting operation.

brother

Operation CONTENTS

CHAPTER 1 GENERAL PRECAUTIONS..... 1-1

1-1 Precautions of First Importance 1-2

- 1-1-1 When feeding an axis 1-2
- 1-1-2 When indexing the magazine 1-2
- 1-1-3 When performing an automatic operation..... 1-2
- 1-1-4 When performing a maintenance work or setup..... 1-3
- 1-1-5 In case of machine trouble or danger 1-4
- 1-1-6 Operate the machine correctly 1-4

1-2 Precautions on Safety 1-5

- 1-2-1 Before turning on the machine 1-6
- 1-2-2 Before starting an operation 1-6
- 1-2-3 During an operation..... 1-7
- 1-2-4 If a machine trouble occurs during an operation 1-7
- 1-2-5 When turning off the machine 1-7
- 1-2-6 Other precautions..... 1-8

1-3 Person Allowed for Operation 1-9

- 1-3-1 Operation Qualifications 1-9
- 1-3-2 Working area 1-10

CHAPTER 2 GENERAL SYSTEM DESCRIPTION 2-1

2-1 Main Features..... 2-2

- 2-1-1 ATC (Automatic tool changer) 2-2
- 2-1-2 Tapping cycle..... 2-3

2-2 Basic Configuration 2-4

- 2-2-1 Basic configuration..... 2-4
- 2-2-2 Machine rear 2-5

2-3 Table Size and Machining Volume 2-6

- 2-3-1 Table top surface dimensions 2-6
- 2-3-2 Machining volume..... 2-7
- 2-3-3 Jig design area..... 2-8

2-4 CNC Unit Specifications 2-11

2-5 Machining Capability 2-13

2-6 Safety Devices 2-14

- 2-6-1 Main safety devices..... 2-14

CHAPTER 3 OPERATION -----	3-1
3-1 Turning on the Power -----	3-2
3-1-1 Preliminary checks -----	3-2
3-1-2 Turning on the power -----	3-3
3-2 Turning off the Power -----	3-5
3-2-1 Checks before turning off the power -----	3-5
3-2-2 Turning off the power supply -----	3-5
3-3 Operation Panel Overview -----	3-6
3-4 Screen Layout -----	3-7
3-5 Switches -----	3-8
3-6 Keys -----	3-11
3-7 Cautions on Workpiece and Tool Setting -----	3-20
3-7-1 Limitation of tool holder -----	3-21
3.8 Setting and Removing a Tool on and From the Magazine ---	3-23
3-8-1 Setting a tool on magazine -----	3-24
3-8-2 Removing a tool from the magazine -----	3-26
 CHAPTER 4 MANUAL OPERATION -----	 4-1
4-1 Manual Operation -----	4-2
4-2 Zero Point Return -----	4-3
4-3 Axis Feed -----	4-4
4-3-1 Rapid traverse -----	4-4
4-3-2 Jog feedrate -----	4-5
4-3-3 Step feed -----	4-6
4-4 Starting and Stopping Spindle -----	4-7
4-5 Tool Change -----	4-8
4.6 Magazine Rotation -----	4-9
 CHAPTER 5 DATA BANK -----	 5-1
5-1 Overview of Data Bank -----	5-2
5-2 Data Input, Modification and Reference -----	5-4
5-3 Tool Registration -----	5-5
5-3-1 Tool Registration With Auxiliary Code -----	5-18
5-3-2 Setting Tool Length -----	5-19
5-3-3 Setting Tool Life -----	5-22

5-4	Setting Tool Pattern -----	5-24
5-5	Setting Primary Hole Drilling Diameter for Tapping -----	5-27
5-6	Setting Cutting and Tool Conditions -----	5-30
5-7	Setting User Parameters -----	5-35
5-8	Setting Machine Parameters -----	5-37
5-9	Data Bank -----	5-39
5-9-1	Tool pattern -----	5-39
5-9-2	Drill diameters for tapping primary hole -----	5-41
5-9-3	Drill diameters for tapping primary hole by rolled tap -----	5-45
5-9-4	Cutting conditions 1 (hole producing tools) -----	5-47
5-9-5	Cutting conditions 2 (milling tools) -----	5-57
5-9-6	Cutting conditions 3 (except tool) -----	5-62
5-9-7	User parameter 1 (switch1) -----	5-76
5-9-8	User parameter 2 (switch2) -----	5-91
5-9-9	User parameter 3 (Communication) -----	5-97
5-9-10	User parameter 4 (Extrl In Signal) -----	5-101
5-9-11	User parameter 5 (Extrl Out Signal) -----	5-102
5-9-12	User parameter 6 (Z measurement) -----	5-103
5-9-13	User parameter 7 (Zero measurement) -----	5-108
5-9-14	User Parameter 8 (Auto THRM DISP CMP) -----	5-110
5-9-15	User Parameter 9 (Quick Table) -----	5-111
5-9-16	List of external input signals and functions -----	5-113
5-9-17	Details of external input signals -----	5-120
5-9-18	List of external output signals and functions -----	5-122
5-9-19	Details of external output signals -----	5-133
5-9-20	Machine parameter -----	5-142

CHAPTER 6 MDI OPERATION ----- 6-1

6-1	Setting Data -----	6-2
6-2	Operation by Data Entetered -----	6-4
6-2-1	Setting a coordinate system -----	6-4
6-2-2	Providing an output of external signal -----	6-5
6-2-3	Setting a tool in the spindle -----	6-5
6-2-4	Turning on and off coolant supply -----	6-6
6-2-5	Running and stopping the spindle -----	6-6
6-2-6	Feeding an axis -----	6-7
6-3	Setting Tools to Be Mounted on the Magazine (1) -----	6-8
6-4	Drilling -----	6-10
6-5	Tapping -----	6-12

CHAPTER 7	MEMORY OPERATION	7-1
7-1	Outline of Memory Operation and Its Procedure	7-2
7-1-1	Types of memory operation	7-2
7-1-2	Memory operation procedure	7-3
7-2	Setting Tools to Be Mounted on The Magazine (2)	7-4
7-2-1	Assigning the main tool	7-4
7-2-2	Setting the spare tool	7-5
7-2-3	Setting tool type	7-7
7-3	Test Operation	7-8
7-3-1	Dry run	7-8
7-3-2	Single operation	7-10
7-3-3	Machine lock	7-10
7-4	Cycle Operation	7-11
7-5	Memory Operation	7-12
7-6	Setting the Starting Point	7-15
7-6-1	Display of start point setting	7-16
7-6-2	Start point setting procedure	7-17
7-6-3	Cautions on starting point setting	7-19
7-7	Running a Schedule Program	7-22
7-8	Setting a Schedule Program Number	7-23
7-9	Feed Hold and Emergency Stop	7-24
7-9-1	Feed hold	7-24
7-9-2	Emergency	7-24
7-10	Reset	7-26
CHAPTER 8	PRODUCTION MONITOR SCREEN	8-1
8-1	Work counter	8-2
8-1-1	Work counter screen setting	8-2
8-1-2	Setting items	8-4
8-1-3	Work counter activating command in a program	8-8
8-2	Time display	8-11
8-2-1	Time display	8-11
8-2-2	Operation log	8-13
8-3	Communication status display	8-14
8-4	Thermal measurement data	8-16
8-5	Measurement results	8-18

8-5-1	Display the Measurement results -----	8-18
8-5-2	Deletion of measurement results -----	8-20
CHAPTER 9 Position Screen -----		9-1
9-1	Position screen outline -----	9-2
9-2	PRESENT POS screen -----	9-3
9-3	MODAL screen -----	9-4
9-4	ENLARGEMENT screen -----	9-7
CHAPTER 10 C AXIS -----		10-1
10-1	About Quick Table -----	10-2
10-2	Manual Operation -----	10-2
10-2-1	C-axis Rotation -----	10-2
10-2-2	Indexing Inside Pallet to Outside -----	10-4
10-3	MDI Operation -----	10-5
10-4	Memory Operation -----	10-6
10-4-1	Switches Relating C Axis -----	10-6
10-4-2	PALLET SELECT Switch Settings and Motions -----	10-7
10-4-3	Setting of Starting Point -----	10-10
10-4-4	Dry Run Operation -----	10-10
10-4-5	Single Operation -----	10-11
CHAPTER 11 ALARM SCREEN -----		11-1
11-1	Alarm Message Screen -----	11-2
11-2	Alarm Log Screen -----	11-3
11-2-1	Log List Screen -----	11-3
11-2-2	Detailed Display Screen -----	11-4
11-2-3	I/O Display Screen -----	11-5
11-3	Battery Fault alarm -----	11-10
11-4	Display of alarm messages -----	11-11
11-5	Alarm stop level and reset level -----	11-12
11-5-1	Alarm stop level -----	11-12

11-5-2 Alarm reset level	11-13
11-6 *Axis display	11-13
11-7 Alarm Messege	11-14
11-8 Servo error message	11-79
11-9 Resetting ATC	11-83

OPTION

12-1 COOLANT UNIT	12-1-1
1 Cautions for Handling.....	12-1-2
2 Sketch Drawing.....	12-1-3
3 Operation Procedure.....	12-1-4
12-2 MANUAL PULSE GENERATOR	12-2-1
1 Cautions	12-2-2
2 Overall view	12-2-2
3 Operation procedure.....	12-2-3
12-3 INDICATION LAMP	12-3-1
1 External View	12-3-2
2 Function of indicator lamps	12-3-3
12-4 AUTOMATIC CENTERING UNIT	12-4-1
1 Cautions	12-4-2
2 Shapes Measured.....	12-4-3
3 Mounting the automatic centering tool	12-4-4
4 Motion check.....	12-4-5
5 Dismounting an automatic centering tool.....	12-4-6
6 Setting Data Banks of Automatic Centering.....	12-4-7
6-1 Tool menu.....	12-4-7
6-2 Magazine tools	12-4-8
6-3 Parameter.....	12-4-9
7 Checking before Starting.....	12-4-12
8 Operating Procedure.....	12-4-12
8-1 Automatic centering menu	12-4-13
8-2 Corner.....	12-4-14
8-3 Parallel.....	12-4-18
8-4 Center of a circle (groove).....	12-4-22
8-5 Center of a circle (boss)	12-4-26
8-6 Z level.....	12-4-32
8-7 Probe Offset	12-4-36
8-7-1 Probe Offset Value	12-4-36
8-7-2 Probe Offset Value (CORNER)	12-4-36
8-8 Probe Offset Value (CIRCLE-3POINTS)	12-4-42
8-9 Automatic coordinate setting with [F4] key	12-4-50

9	Motion Switchover and Motion Display	12-4-51
9-1	Mode switchover	12-4-51
9-2	Motion display	12-4-51
12-5	ZERO MEASUREMENT	12-5-1
1	Before zero measurement.....	12-5-5
2	Setting of data on zero measurement	12-5-5
3	Operation of zero measurement	12-5-9
3-1	Corner.....	12-5-9
3-2	Parallel.....	12-5-11
3-3	Circle.....	12-5-14
3-4	Z LEVEL.....	12-5-19
3-5	Rotation.....	12-5-20
4	Handling of Measurements.....	12-5-22
4-1	Measurement display.....	12-5-22
4-2	Reflecting measurements in working coordinate system	12-5-22
5	Mounting and dismounting of probe	12-5-23
12-6	TOOL BREAKAGE DETECTION UNIT	12-6-1
1	Predictions for Handling.....	12-6-2
2	Sketch Drawing	12-6-2
3	User Parameter (Switch 1) Setting	12-6-3
3-1	Tool breakage detection option	12-6-3
3-2	Tool breakage detection return position	12-6-4
4	How to Use the Tool Breakage Detection Unit.....	12-6-5
4-1	MDI operation	12-6-5
4-2	Memory operation.....	12-6-6
4-3	Precautions for programming.....	12-6-8
4-4	When an alarm has occurred.....	12-6-9
5	Troubleshooting.....	12-6-9
12-7	AUTOMATIC INTERMITTENT	12-7-1
1	Cautions	12-7-2
2	General View	12-7-2
3	Recommended Lubricant.....	12-7-3
4	Alarm (EXTERNAL ERROR 23)	12-7-3
12-8	AUTOMATIC DOOR	12-8-1
1	Outline	12-8-2
2	Functions	12-8-2
3	Operation Switches.....	12-8-2
4	Automatic Operation.....	12-8-3
5	Door Controller Parameter Settings	12-8-5
6	Alarm messages	12-8-5
7	Automatic Door Safety Device	12-8-6
8	Area Sensor	12-8-6
9	Door Stop Conditions.....	12-8-7

12-9	Rotation Axis (Index Table)	12-9-1
1	Manual Operation.....	12-9-2
1-1	Manual operation mode.....	12-9-3
1-1-1	High-speed operation.....	12-9-3
1-1-2	Low-speed operation.....	12-9-4
1-1-3	Step rotation.....	12-9-4
1-2	Machine and Index Table zero returns.....	12-9-5
1-2-1	Machine zero return	12-9-5
2	MDI Operation.....	12-9-9
2-1	Input data for MDI operation.....	12-9-9
2-2	Execution of MDI operation.....	12-9-13
2-2-1	Setting the working zero position.....	12-9-13
2-2-2	Arbitrary Indexing (rotation axis(Index Table) positioning)	12-9-13
2-2-3	Arbitrary Indexing (cutting movement).....	12-9-14
3	Rotation axis(Index Table)Parameter Setting.....	12-9-15
4	Program To Use Index Table	12-9-16
4-1	Creation of machining data to use Index.....	12-9-16
4-2	Rotation axis (Index Table) working zero position	12-9-16
4-3	Rotation axis (Index Table)indexing plane setting job	12-9-18
4-3-1	Angle.....	12-9-18
4-3-2	Working zero position.....	12-9-19
4-3-3	Indexing return height.....	12-9-20
4-3-4	Tool return	12-9-21
4-3-5	Job 10 AXIS MOVEMENT and rotation axis	12-9-22
4-4	Motion program	12-9-23
4-4-1	Classification of rotation axis (Index Table)operations.....	12-9-23
4-4-2	Rotation axis(Index Table)cutting specification in motion motion..	12-9-25
4-5	Current position screen	12-9-26
4-6	A-axis and B-axis provided with the clamp mechanism	12-9-28
4-6-1	A-axis and B-axis rotation(servo off type when clamped B axis)...	12-9-28
4-6-2	A axis and B axis rotation(Servo on type when clamped B axis)	12-9-28
4-6-3	Operation with rotation axis remaining unclamped).....	12-9-29
12-10	Z Axis Measurement System.....	12-10-1
1	Cautions	12-10-2
2	Installation	12-10-4
2-1	Installation of the Tool Length Measurement Device.....	12-10-4
2-2	Installation of Reference Tool	12-10-6
3	Parameter	12-10-7
3-1	Setting	12-10-8
4	Z-axis Thermal Displacement Offset	12-10-12
4-1	Offset Capacity.....	12-10-12
4-2	For Correct Thermal Displacement Offset	12-10-12

4-3	Command.....	12-10-14
4-4	Operation.....	12-10-17
4-5	Thermal Measurement Data Screen	12-10-20
4-6	Outputting Thermal Displacement Measurement Data to the Computer	12-10-21
4-7	Example Parameter Setting and Alarm.....	12-10-22
4-8	Example Offset	12-10-23
5	Tool Breakage Detection.....	12-10-29
5-1	Command	12-10-29
5-2	OPERATION	12-10-30
6	Automatic Tool Length Measurement	12-10-32
6-1	Command	12-10-32
6-2	Operation.....	12-10-34
Appendix List of Alarm.....		12-10-37