


HSC 105 linear

HEIDENHAIN iTNC 530

TECHNICS >> MECHANICS

Manual on maintenance and service works.

Only for service people of the manufacturer and for qualified staff.

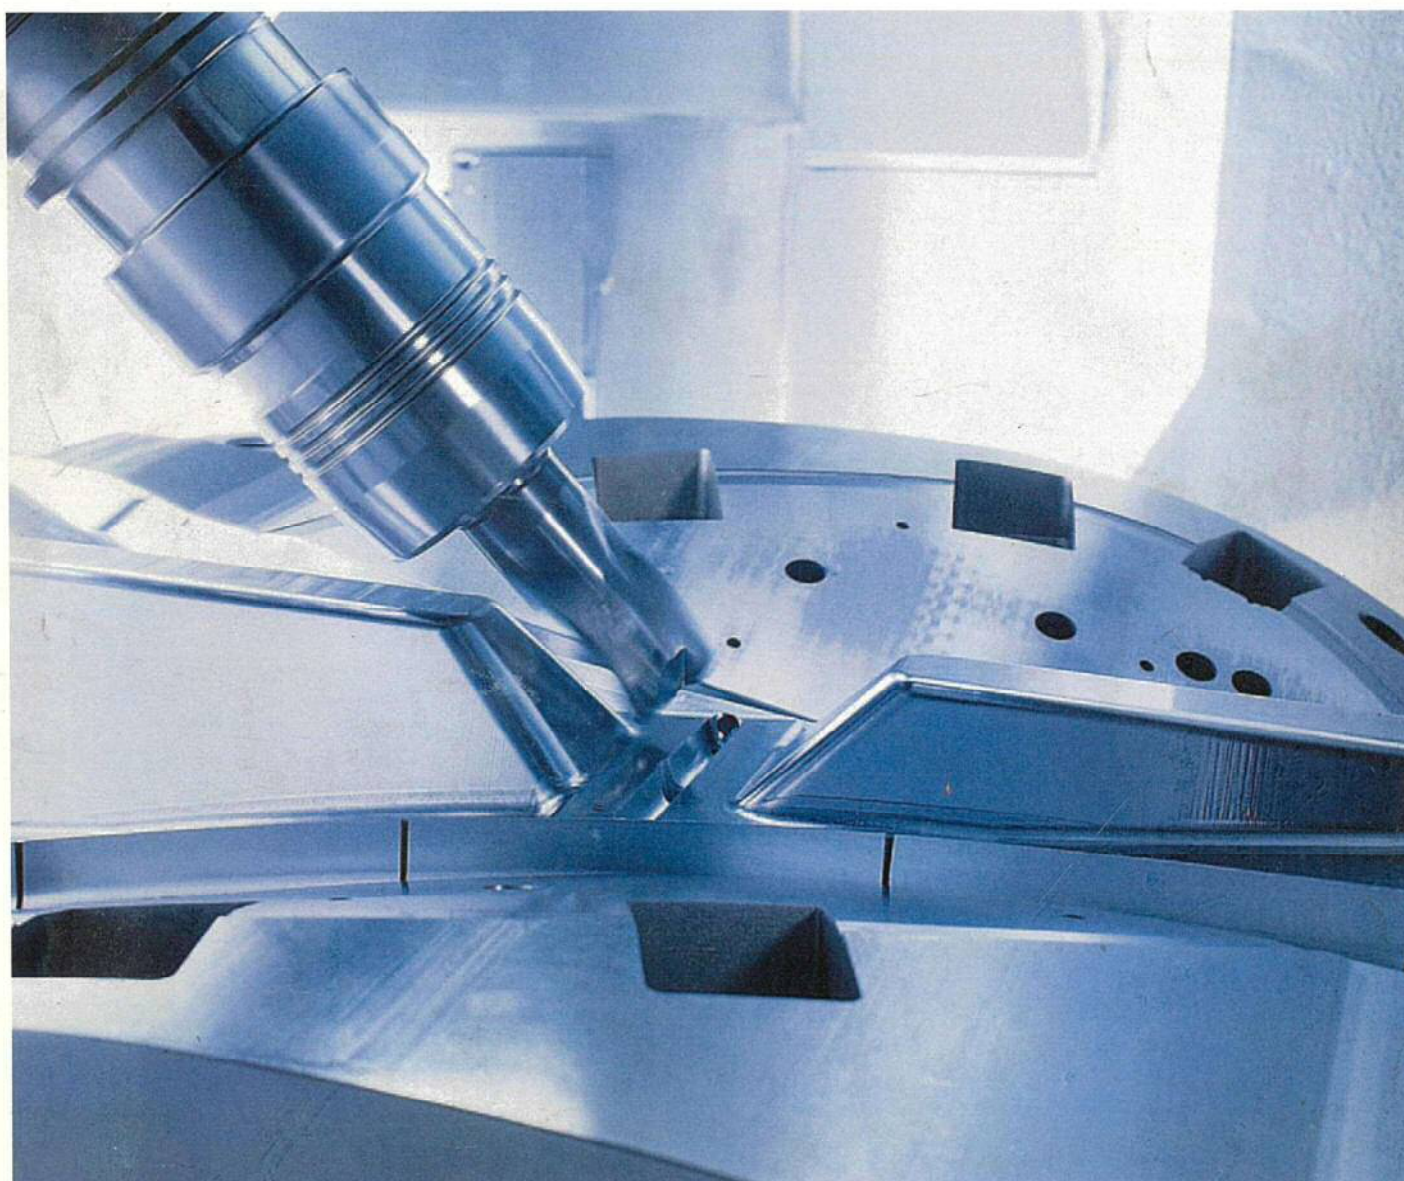

DECKEL MAHO SEEBACH GMBH

Neue Straße 61, D-99846 Seebach
Tel. +49 [0] 3692981 0, Fax +49 [0] 3692881 2408

DMG

CONTENS

General information

Safety instructions

Drawings of mech. assembly groups

Wiring diagrams and unit lists
cooling lubricant system

Wiring diagrams and unit lists of
lubrication system

Wiring diagrams and unit lists
cooling

Wiring diagrams and unit lists of
hydraulics / pneumatics

Dictionary

Wear parts lists

Inform. concerning third party docum

1

2

3

4

5

6

7

8

9

10

11

12

Contents

1 General information

1.1	Basic information	1-3
1.1.1	Prerequisites	1-3
1.1.2	Protection of the environment and ground water	1-3
1.1.3	Company responsibility	1-3
1.1.4	Qualification of personnel	1-4
1.1.5	Maintenance, repair	1-4
1.2	Documentation scope	1-5
1.3	Technical/mechanical documentation	1-6
1.3.1	General	1-6
1.3.2	Contents	1-6
1.3.3	Symbols	1-7
1.4	Warranty	1-8
1.5	Warranty exclusion	1-8
1.6	Anti-virus program	1-8
1.7	Machine collision	1-9
1.7.1	Machine during the warranty period	1-9
1.7.2	Behaviour in the event of a collision	1-9
1.8	Declaration of conformity	1-10
1.9	Directives, standards	1-10
1.9.1	EC Directives	1-10
1.9.2	EN Standards	1-10

2 Safety instructions

2.1	General Safety Instructions	2-3
2.1.1	Hazards	2-3
2.1.2	Machine status	2-3
2.1.3	Personnel	2-4
2.1.4	Noise protection	2-6
2.2	General information about health and safety at work	2-6
2.2.1	Machine safety area	2-6
2.2.2	Accessible machining compartment	2-6

2.3	Safety devices	2-7
2.3.1	General	2-7
2.3.2	Cabin	2-7
2.3.3	Emergency Stop button	2-8
2.3.4	SMARTkey® (operating mode selection)	2-8
2.3.5	Agreement key	2-8
2.3.6	Speed checks	2-9
2.3.7	Workpiece clamping	2-9
2.4	Workpiece machining	2-9
2.5	Hazardous substances	2-10
2.5.1	Explosive / flammable substances	2-10
2.5.2	Emissions	2-10
2.5.3	Working with magnesium	2-11
2.5.4	Coolant lubricants not mixable with water	2-11
2.6	Fire protection	2-12
2.6.1	Fire extinguishing system	2-12
2.7	Media supply	2-13
2.7.1	Hydraulic group	2-13
2.7.2	Coolant lubricant system	2-13
2.7.3	Chip disposal / Chip conveyor	2-13
2.8	Tools and tool change	2-14
2.8.1	Tools	2-14
2.8.2	Manual tool change	2-14
2.8.3	Automatic tool change	2-14
2.9	Operation	2-15
2.10	Operating modes (OM)	2-16
2.10.1	Operating mode 2	2-17
2.10.2	Operating mode 3	2-18
2.10.3	Operating mode 4	2-19
2.10.4	Underlying directives and standards	2-20
2.11	Maintenance and service	2-21
2.11.1	Vertical or angled axes	2-22
2.12	Transport and installation	2-22
2.13	Behaviour in dangerous situations and in case of accidents	2-23
2.13.1	Behaviour in dangerous situations	2-23

3 Drawings of mechanical assembly groups

4 Wiring diagrams and equipment lists - Cooling/lubrication

4.1	Cooling/lubrication 2918_15_001040_02	4-3
4.2	Cooling/lubrication - Internal coolant supply (IKUEZ) 2918_15_001042_02	4-16

5	Wiring diagrams and equipment lists - Lubrication	
5.1	Central lubrication 2918_15_001030_01	5-3
6	Wiring diagrams and equipment lists - Cooling	
6.1	Cooling 2918_15_001051_01	6-3
7	Connection diagrams and equipment lists - Hydraulics / pneumatics	
7.1	Hydraulic diagram, standard 2918_15_001013_01	7-3
7.2	Hydraulic diagram with B axis & milling circular table 2918_15_001014_01	7-12
7.3	Hydraulic diagram 5 axes with clamping hydraulics, machining compartment 2918_15_001015_01	7-23
7.4	Pneumatics 2918_15_001020_03	7-35
9	Wear parts lists	
10	Inform. concerning third party documentation	