

CNC SYSTEMS

OSP-U100M

OSP-U10M

MX-V/MD-V/MA-V/

MB-V/MF-V SERIES

MAINTENANCE MANUAL (5th Edition)

Pub. No. 4194-E-R4 (ME34-040-R5) Jan. 2002

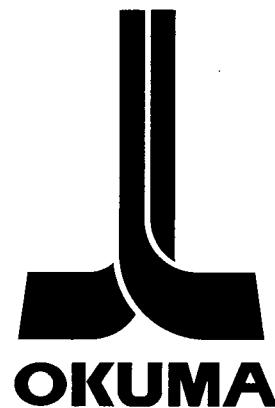


TABLE OF CONTENTS

PAGE

SECTION 1	OUTLINE OF OSP	1
1.	System Configuration	1
2.	I/O Link and Servo Link	2
3.	Construction and Outline of Units	3
3-1.	CPU Unit	3
3-2.	NC Rack	3
3-3.	NC PCB's	4
3-4.	Power Supply Unit	5
3-5.	FieldNet Unit (I/O Unit)	6
3-6.	Servo Unit	18
3-7.	Motors and Position Encoders	18
3-8.	Floppy Disk Drive Unit	18
3-9.	Operation Panel	19
3-10.	Cooling Unit	19
3-11.	Control Enclosure	19
SECTION 2	MAINTENANCE AND INSPECTION	20
1.	Inspection during Installation	20
1-1.	Installation Site	20
1-2.	Environmental Requirements	20
1-3.	Primary Power Supply	21
1-4.	Input Voltage Range Including Voltage Variation	21
1-5.	Momentary Voltage Variation Rate and Power Source Inductance	22
2.	Daily Inspection	24
2-1.	Daily Inspection	24
2-2.	Every Three-month Inspection	24
2-3.	Cleaning the Floppy Disk Drive	24

	<u>PAGE</u>
SECTION 3 TROUBLES AND TROUBLESHOOTING	26
1. General Check Procedure When Trouble Occurs	26
2. Trouble Analysis	27
3. Checking the Input/Output Signals	28
3-1. Checking the Input/Output Signals at the CHECK DATA Screen	28
4. CPU Status Indication	31
5. Power Supply Unit Status Indication	33
6. Inspection of Overload Relay	35
7. Releasing Travel-end Limit	36
8. Check by Machine Diagnosis Messages	37
 SECTION 4 SELF-DIAGNOSTIC FUNCTION	 38
1. Alarm and Error Display	39
2. Check Data Display	40
2-1. NC Axis Data	42
2-2. Machine Axis Data	43
2-3. I/O Check	44
3. CNC Diagnostic Screen	97
4. Machine Diagnostic Screen	97
 SECTION 5 MACHINE OPERATION CONDITIONS, DIAGNOSIS MESSAGES, AND LOGIC TABLES	 98
1. Machine Operation Conditions	98
2. Machine Diagnosis Messages	100
3. ATC/APC Operation	120
4. ATC/ACP Logic Table	123
4-1. How to Read Logic Tables	123
4-2. ATC Logic Table	126
4-3. APC Logic Table	139

	<u>PAGE</u>
SECTION 6 PLC MONITOR FUNCTION	158
1. Outline of PLC Monitor Function	158
2. Calling the PLC Monitor Function	159
3. Function Details	160
3-1. PLC Data Display Function	160
3-2. Ladder Diagram Monitor Function	171
3-3. Data Trace Function	180
 SECTION 7 PLC PROGRAM INSTRUCTIONS	 192
1. Outline of PLC Program Instructions	192
1-1. Basic Instructions	192
1-2. Application Instructions	192
1-3. System Function Module	203
 SECTION 8 INSTALLING SOFTWARE	 213
1. Outline of Install	213
2. Glossary of Technical Terms	214
2-1. Flash Memory (FR)	214
2-2. Memory Disk (MD)	214
2-3. Install	214
2-4. Package Floppy Disk	215
2-5. Custom Floppy Disk	215
2-6. System Backup Floppy Disk	215
2-7. Work Disk	215
3. Media Necessary for Installing Software	216
3-1. Control Floppy Disks	216
3-1-1. Kinds of Control Floppy Disks	216
3-1-2. Configuration of Control Floppy Disks	219
3-2. System Backup Floppy Disk	221
3-3. Work Disk	221
4. Steps for Installing Software	222

	<u>PAGE</u>
5. Procedure for Installing Software	223
5-1. Checking the Hardware Configuration	223
5-1-1. Checking the UCMB	223
5-2. MD Initialization Processing	224
5-2-1. Cases Requiring MD Initialization Processing	224
5-2-2. Procedure	224
5-3. Data Backup	226
5-3-1. Cases Requiring Data Backup Operation	226
5-3-2. Backup of the System Data	226
5-3-3. Backup of the User Files	226
5-3-4. Backup Procedure	226
5-4. Installing the Control Software	229
5-4-1. Use Order of Floppy Disks	229
5-4-2. Operation Procedure	230
5-5. Loading the Backup Data	232
5-5-1. Backup Data Loading Procedure	232
 SECTION 9 CHANGING THE BATTERY	 234
1. Battery Life Warning	234
2. Changing the Battery	235
 SECTION 10 APPENDIX	 239
1. Accessories	239
1-1. Check Sheet (Control System)	239
1-2. OSP Control Card	239
1-3. Floppy Disks	239
2. NC Operation Panel	240
3. Machine Operation Panel	243
4. Other Operation Panels	245
5. Machine Electrical Parts Layout (MA-550V/650V, MD-550/650V)	251
6. Machine Electrical Parts Layout (MA-550/650V, MD-550/650V)	254