

OSP7000L OSP700L

OPERATION MANUAL (3rd Edition)

Pub. No. 3811-E-R1 (LE32-038-R3) Apr. 1995

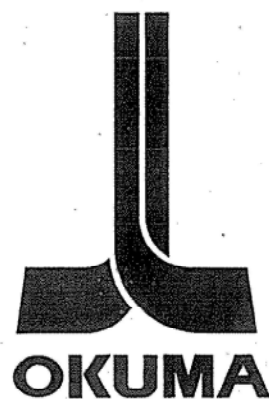


TABLE OF CONTENTS

	<u>PAGE</u>
SECTION 1 OUTLINE	1
1. OSP7000L/OSP700L SPECIFICATIONS	2
SECTION 2 OPERATION	11
1. BASIC CONSTRUCTION OF OPERATION PANELS	17
2. OUTLINE OF CONTROLS ON OPERATION PANELS	22
2-1. Controls on NC Operation Panel	22
2-2. Machine Operation Panel	27
2-3. Setting Keys on Machine Operation Panel	33
3. FUNDAMENTAL MACHINE OPERATION PROCEDURE	35
3-1. Manual Operations	35
3-2. Preparation of Machine for Operation	46
3-2-1. Tool Setting	46
3-2-2. Setting Zero Offsets	50
3-2-3. Setting Tool Offsets	63
3-2-4. Setting Turret Position Error Compensation Value	81
3-3. Automatic Operations	83
3-4. Manual Data Input (MDI) Operation	96
3-5. Interlock Functions	103
SECTION 3 APPLICATIONS	106
1. OVERVIEW	106
1-1. CMOS Memory	106
1-2. File Management	106
1-2-1. CMOS Memory (Data Bank)	107
1-2-2. Files	107
1-2-3. Program Name or Number	108
1-3. Construction of Part Program (Format)	111
1-4. Math Operation Function for Parameter Data Input	113

	<u>PAGE</u>
2. APPLICATION OF OPERATIONS - AUTOMATIC MODE OPERATION	116
2-1. Program Selection and Operation	116
2-1-1. Selection from the Directory Display Page	116
2-1-2. Direct Designation of Programs	119
2-2. Sequence Restart	122
2-2-1. To Restart the Sequence by Designating the Sequence Number (Name)	122
2-2-2. To Restart the Sequence by Designating The Block Counter	128
2-2-3. Remarks on Carrying Out Sequence Restart Operation	130
2-3. Sequence Number Search Operation	132
2-4. Operation Resumption after Manual Operation Intervention	136
2-5. Other Operations while in Automatic Mode Operation	139
2-5-1. To Carry Out Manual Operation to Remove Chips or to Measure Dimensions (Program Stop/Optional Stop)	139
2-5-2. Block Delete	140
2-5-3. Checking New Program (Machine Lock, Dry Run)	141
2-6. Scheduled Operation	142
2-6-1. Selection and Execution of Schedule Program	144
2-6-2. Schedule Program Number Search	147
2-7. CRT Display while in Operation	149
2-7-1. Display of Actual Position Data	151
2-7-2. Display of Part Program	155
2-7-3. Display of Data in One Block	159
2-7-4. Display of Various Check Data	162
2-8. Tool Layout Function	172
2-8-1. Display Data	172
2-8-2. Operating Procedure	172
2-8-3. Supplements	174
3. AVAILABLE OPERATIONS IN EDIT AUX MODE	175
3-1. Transfer of Main Program File	177
3-1-1. Machining Program Backup Procedure (FD0: → MD1:)	177
3-1-2. Writing Part Program Files (MD1: → FD0:)	181
3-1-3. Verifying the Main Program File	184
3-1-4. Reading Main Program Data (optional)	189
3-1-5. How to Set a Tape in the Tape Reader	192

	<u>PAGE</u>
3-1-6. Punching Out the Stored Program (optional)	194
3-1-7. Verifying the Data Punched Out (optional)	198
3-1-8. Precautions on Tape Read-in, Punch-out and Verifying Operations	203
3-1-9. Backup of the Main Program File (MD1: → MD1:)	210
3-2. Edition of Main Program Data	213
3-3. Fundamental Editing Operation	214
3-4. Application of Fundamental Editing Operation	226
3-5. Extended Function of Editing	233
4. OTHER PROGRAM OPERATION FUNCTIONS	251
4-1. Setting and Displaying Date	251
4-2. Setting and Displaying Time	253
4-3. Displaying the Directory of Files in Memory and Floppy Disk	255
4-4. Display of Available Memory/Floppy Disk Capacity	258
4-5. Displaying the List of Program File in Memory or Floppy Disk	260
4-6. Initializing the Memory	265
4-7. Initializing the Floppy Disk	266
4-8. Deleting Files in Memory or Floppy Disk	268
4-9. Renaming Files	272
4-10. Protection of Specified Files	275
5. MS-DOS FILE CONVERSION FUNCTION	279
5-1. Overview	279
5-2. MS-DOS File Name Designation Procedure	280
5-3. Operation	281
5-4. Operation Details of Each Function	283
5-4-1. DIR	283
5-4-2. COPY	285
5-4-3. RENAME	287
5-4-4. File Deletion	288
5-4-5. FREE	289
5-4-6. PROTECT	289
5-4-7. Program Input	290
5-4-8. Program Output	292
5-4-9. MS-DOS QUIT	293
5-5. Character Codes	294
5-6. Other Precautions	295

	<u>PAGE</u>
6. RS232C INTERFACE	296
6-1. Specifications	296
6-2. Operation Procedure	298
6-2-1. Connectable External Devices and Their Symbolic Designations	299
6-2-2. Read Operation	302
6-2-3. Verify Operation	302
6-2-4. Punch Operation	302
6-2-5. Print Operation	302
6-3. Parameter Setting	303
6-4. Pin Assignment of RS232C Interface	304
6-5. Signal Description	306
6-6. External Device Connection	308
6-7. DC Code Control	313
6-8. Slave Station Function	317
7. TAPE DATA INPUT/OUTPUT FUNCTION	321
7-1. OVERVIEW	321
7-2. FUNCTION APPLICATION	322
7-3. INPUT/OUTPUT TAPE FORMAT OF SETTING DATA	322
7-4. OPERATION PROCEDURES	334
8. DIRECTORY-SELECTION-BASED FILE OPERATION FUNCTION	342
8-1. Overview	342
8-2. Creating and Editing Commands	348
8-3. Use of the Previous Command	354
8-4. Selecting Files From Directories (OSP Format)	355
8-5. Selecting Files From Directories (MS-DOS Format)	363
9. OPERATION IN PARAMETER MODE	369
9-1. Overview	369
9-1-1. Parameter	369
9-1-2. Outline of Parameter Setting	369
9-1-3. Parameters Requiring Power Reapplication	374
9-2. User Parameter	375
9-2-1. Variable Soft-Limit	375
9-2-2. Chuck	385
9-2-3. Tailstock	387

	<u>PAGE</u>
9-2-4. Tool Interference Area	388
9-2-5. Droop	392
9-3. Common Variables	393
9-4. System Parameter	394
9-4-1. Stroke End Limit	395
9-4-2. Backlash	396
9-4-3. Zero Offset of Position Encoder	396
9-4-4. Stroke Offset	397
9-4-5. Unit Amount and Acceleration Unit Amount	399
9-5. Optional Parameter (Long Word)	401
9-6. Optional Parameter (Word)	414
9-7. Optional Parameter (Bit)	431
9-8. Turret Indexing Angle	462
9-9. Spindle Control Parameters	463
9-10. Coolant Output Pattern Switching Parameter	466
9-11. Air-Blow Output Pattern Switching Parameter	468