

**TC-31A
TC-22A
TC-S2A
TC-32A
TC-R2A
TC-20A
TC-S2B**

PROGRAMMING MANUAL

Please read this manual carefully before starting operation.

brother

CONTENTS

Conversational Programming

Chapter 1

Outline of Conversational Programming ----- 1-1

1.1	Making a program in conversational programming -----	1-2
1.2	Outline of programming -----	1-3
1.2.1	Two type of programs -----	1-3
1.2.2	Composition of a program made in conversational mode and programming flow	1-5
1.3	From creating a program to executing it -----	1-6
1.3.1	Step1 (preparation for program creation) -----	1-8
1.3.2	Step2 (machining data input) -----	1-8
1.3.3	Step3 (workpiece machining order setting) -----	1-10
1.3.4	Step4 (tool pattern setting) -----	1-11
1.3.5	Step5 (setting the cutting conditions) -----	1-11
1.3.6	Step6 (operation preparation) -----	1-12
1.3.7	Step7 (tool mounting) -----	1-14
1.3.8	Step8 (test operation) -----	1-15

Chapter 2 Machining Data ----- 2-1

2.1	What is machining data? -----	2-2
2.2	Setting the machining data -----	2-3
2.2.1	Setting procedure -----	2-3
2.2.2	Keys used for machining data input -----	2-5
2.3	Setting the working zero point -----	2-6
2.3.1	Normal setting procedure -----	2-6
2.3.2	Setting by [WZRT] key -----	2-7
2.4	Setting the return height -----	2-11
2.5	Setting the number of workpieces -----	2-12
2.6	Setting the workpiece material -----	2-13
2.7	Defining the processes -----	2-13

2.8	Setting the drilling processes -----	2-14
2.8.1	Center hole drilling -----	2-14
2.8.2	Drilling -----	2-16
2.8.3	Tapping -----	2-17
2.8.4	Reaming -----	2-18
2.8.5	Counter bore drilling -----	2-20
2.8.6	Counter bore tapping -----	2-21
2.8.7	Counter bore reaming -----	2-22
2.8.8	Tapping by rolled tap -----	2-24
2.8.9	Counter bore tapping by rolled tap -----	2-24
2.9	Setting the milling processes -----	2-30
2.9.1	Face milling -----	2-30
2.9.2	Facing -----	2-35
2.9.3	Pocketing -----	2-41
2.9.4	Contouring -----	2-51
2.9.5	Chamfering -----	2-66
2.10	Setting the non-cutting processes -----	2-90
2.10.1	Coolant -----	2-90
2.10.2	Axis feed -----	2-90
2.10.3	Signal output -----	2-90
2.10.4	Subprogram call -----	2-91
2.10.5	Program stop -----	2-91
2.10.6	Coordinate system setting -----	2-92
2.11	Motion call -----	2-97
2.11.1	Motion call -----	2-97
2.11.2	Motion program edit -----	2-99
2.11.3	Cautions on operation by motion program -----	2-100
2.11.4	Thread cutting motion (option) -----	2-136
2.11.5	Zero measurement (option) -----	2-142
2.11.6	One - way tapping -----	2-148
2.12	Ending a main program -----	2-149
2.13	Setting a subprogram -----	2-149
2.14	Ending an edit -----	2-149
2.15	Comment setting -----	2-151
2.16	Re - editing machining data -----	2-152
2.16.1	Search -----	2-152
2.16.2	Insertion -----	2-153
2.16.3	Deletion -----	2-154
2.16.4	Transfer of process with [DEL] or [F4] key -----	2-154
2.16.5	Function key -----	2-155

Chapter 3 Schedule Program -----	3-1
3.1 Role of schedule program -----	3-2
3.2 Schedule program edit -----	3-2
3.3 Schedule program re - edit -----	3-3
 Chapter 4 Machining Order -----	 4-1
4.1 Modifying the machining order -----	4-2
4.2 Details of the machining order -----	4-3
4.3 Machining order and coordinate system setting -----	4-8
4.4 Execution of a non-cutting process between cutting process -----	4-13
4.4.1 Program (process flow) -----	4-13
4.4.2 Classification of cutting process and non-cutting processes -----	4-13
4.4.3 Example of execution of non-cutting processes -----	4-14
 Chapter 5 Tool Pattern -----	 5-1
5.1 Tool pattern modification -----	5-2
 Chapter 6 Cutting Conditions -----	 6-1
6.1 Cutting condition modification -----	6-2
 Chapter 7 Operation Preparation -----	 7-1
7.1 Preoperation procedure -----	7-2
7.2 Tool assignment procedure -----	7-2
7.2.1 Assignment procedure -----	7-2
7.2.2 In case the point checked by [?] key cannot be calculated -----	7-4
7.2.3 Tool assignment screen and information -----	7-5
7.2.4 Selection of required tools -----	7-7
7.2.5 Forced assignment -----	7-8
7.2.6 Changing a machining function -----	7-10
7.2.7 Tool check -----	7-10
7.3 Compensation for cutting position -----	7-11
7.3.1 Position of compensation -----	7-11
7.3.2 Compensation setting procedure -----	7-12
7.4 Compensation for workpiece height variation -----	7-14
7.5 Auxiliary function setting -----	7-15

7.6	Dwell setting -----	7-16
7.7	Reassignment -----	7-17
7.7.1	When a forced assignment or function change is made -----	7-17
7.7.2	When a process is inserted in or deleted from the machining data -----	7-18
7.7.3	When assignment data is renewed -----	7-18
7.8	Setting of return height for tool change -----	7-20

Chapter 8 Memory Status ----- 8-1

8.1	Memory status display -----	8-2
8.2	Format of memory -----	8-3
8.3	Machining data memory display -----	8-4
8.3.1	Machining data memory display -----	8-4
8.3.2	Deleting machining data -----	8-5
8.3.3	Copying / Checking machining data -----	8-6
8.4	Schedule program memory display -----	8-7
8.4.1	Schedule program memory display -----	8-7
8.4.2	Deleting schedule programs -----	8-8
8.4.3	Copying / Checking schedule programs -----	8-8
8.5	Data bank memory display -----	8-8
8.5.1	Data bank memory display -----	8-8
8.5.2	Changing effective DATA NO. -----	8-9
8.5.3	Deleting DATA BANK -----	8-9

Chapter 9 In-process Edit ----- 9-1

9.1	Program edit or modification during a machine operation -----	9-2
9.2	Program reference during a machine operation -----	9-2

Chapter 10 External Program I/O ----- 10-1

10.1	Computer (Master station TC) -----	10-2
10.1.1	Input from computer -----	10-3
10.1.1.1	Input from computer - Program -----	10-4
10.1.1.2	Input from computer - Data bank -----	10-7
10.1.1.3	Input from computer - All data -----	10-11
10.1.2	Computer output menu -----	10-12
10.1.2.1	Output to computer - Program -----	10-12
10.1.2.2	Output to computer - Data bank -----	10-16
10.1.2.3	Output to computer - All data -----	10-19
10.1.3	Computer data delete menu -----	10-20

10.1.3.1	Computer data deletion - Program -----	10-21
10.1.3.2	Computer data deletion - Data bank -----	10-23
10.1.4	Maintenance Menu -----	10-26
10.1.4.1	Maintenance - Output All Data -----	10-27
10.1.4.2	Maintenance - Input All Data -----	10-28
10.1.4.3	Maintenance - Output All Data Bank -----	10-29
10.1.4.4	Maintenance - Output Check Data -----	10-30
10.1.4.5	Maintenance - Delete All Data -----	10-31
10.2	PTP / PTR (Master Station TC) -----	10-32
10.2.1	PTR input menu -----	10-33
10.2.1.1	Input from PTR - Program -----	10-34
10.2.1.2	Input from PTR - Data bank -----	10-37
10.2.1.3	Input from PTR - All data -----	10-40
10.2.2	PTP output menu -----	10-41
10.2.2.1	Output to PTP -----	10-41
10.2.2.2	Output to PTP - Data bank -----	10-43
10.2.2.3	Output to PTP - All data -----	10-45
10.2.3	Maintenance menu -----	10-46
10.2.3.1	Maintenance - All data output -----	10-46
10.2.3.2	Maintenance - All data input -----	10-46
10.2.3.3	Maintenance - All data bank output -----	10-46
10.2.3.4	Maintenance - Check data output -----	10-46
10.3	Input/output by computer (T/C slave station) -----	10-47
10.4	List of character codes used for communication -----	10-48
10.5	Protocol of PTP/PTR -----	10-49
10.5.1	Tape format -----	10-49
10.5.2	List of communication method -----	10-50
10.6	Computer communication protocol type 1 -----	10-51
10.7	Computer communication protocol type 2 -----	10-56
10.7.1	External device communication function -----	10-56
10.7.2	File list and operation range -----	10-56
10.7.3	Remote protocol command list -----	10-58
10.7.4	Control format -----	10-58
10.8	List of computer communication models -----	10-67
10.9	Data compatibility with other models (TC-215, 217, etc) -----	10-70
10.10	Internal data cord table -----	10-72
 Chapter 11 Option -----		 11-1
11.1	Memory capacity expansion -----	11-2