

Cat. No. V004-E1-2

NT-series
NT20M/NT600M

Support Tool

OPERATION MANUAL

OMRON

NT-series NT20M/NT600M Support Tool

Operation Manual

Revised August 1993

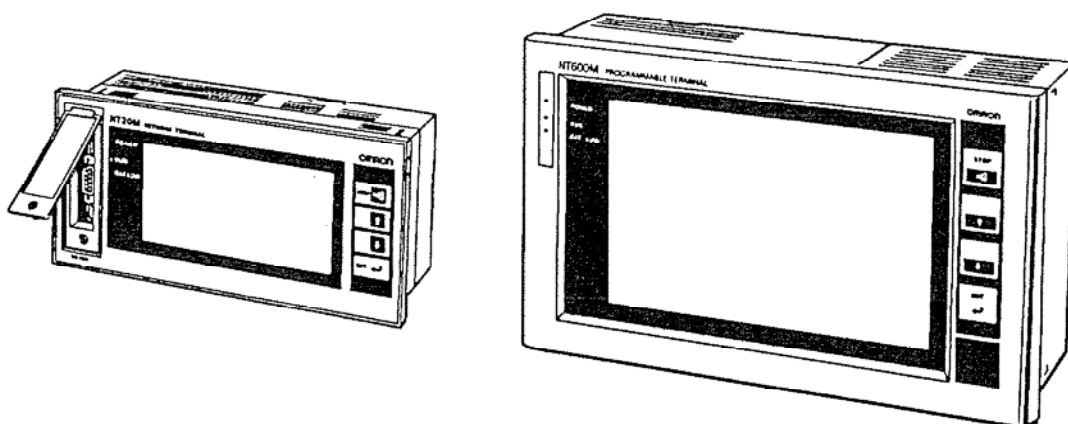


TABLE OF CONTENTS

SECTION 1

Introduction	1
1-1 Terminology and NT-series Manuals	2
1-2 Using Older Models	2
1-3 System Configuration	3
1-4 Creating a Work Disk	4
1-5 Starting and Exiting	5
1-6 Main Menu	5
1-7 File Selection	6
1-8 Screen Selection	7
1-9 Inputting Screen Comments, File Names, and Titles	10
1-10 Editing Screens	11
1-11 Inputting Character Strings and Numbers	12
1-12 Basic Operation	13
1-13 Tool Settings	15
1-14 Environment Settings	16
1-15 Direct Connection	17

SECTION 2

Creating Screens	21
2-1 Inputting Character Strings	22
2-2 Numeral Displays	28
2-3 Character String Displays	34
2-4 Lamps	40
2-5 Touch Switches	46
2-6 Bar Graphs	51
2-7 Editing Memory Tables	59
2-8 Numeral Editing	62
2-9 Polylines	71
2-10 Circles	73
2-11 Continuous and Overlapping Screens	75
2-12 Screen Attributes	78
2-13 Screen Check	80
2-14 Marks	82
2-15 Stand-alone Operation	85
2-16 Edit	87

SECTION 3

Managing Screen Data	89
3-1 Copying Screens	90
3-2 Deleting Screens	91
3-3 Changing Screen Comments	92
3-4 Reading Data from Other Files	93

SECTION 4

Managing File Data	95
4-1 Copying Files	96
4-2 Deleting Files	97
4-3 Changing File Titles	98
4-4 Saving PT Histories in Files	98
4-5 Setting Initial Screens	99

SECTION 5

Printing 101

- 5-1 Printing Features 102
- 5-2 Printing from the File Selection Display 102
- 5-3 Printing from the Screen Selection Display 103

SECTION 6

Transmitting Data 105

- 6-1 Connecting to the PT 106
- 6-2 Transmitting Data 106
- 6-3 Receiving Data 110
- 6-4 Deleting PT Screens 114

SECTION 7

PROM Writer Operations 117

- 7-1 Connecting to a PROM Writer 118
- 7-2 Transmitting Data to a PROM Writer 118
- 7-3 Transmitting Data with Verification to a PROM Writer 119
- 7-4 Receiving Data from a PROM Writer 120

Appendix: Special Characters 123