

HORIZONTAL BANDSAW
HDA-250
OPERATOR'S MANUAL



CONTENTS

SECTION 1 — INSTALLATION

Foundation	1-1
Lifting	1-1
Cleaning	1-1
Leveling and anchoring	1-2
Removing shipping bracket	1-2
Supplying hydraulic oil	1-3
Supplying cutting fluid	1-3
Wiring connection	1-4

SECTION 2 — CONTROLS

Main control panel	2-1
Sub-control panel	2-4
Blade tension controller	2-6
Blade drive unit	2-6
Motion detector	2-7
Feed error detector	2-7
Cutoff length preset device	2-7

SECTION 3 — OPERATION

Installing saw blade	3-1
Adjusting blade guide	3-3
Loading and positioning the work	3-4
Setting cutoff length, feed-times and number of cut pieces	3-5
Cutting the work	3-7
Manual cutting	3-9
Cutting multiple work	3-10
Machine stop and restarting	3-11
Running-in new saw blade	3-13

SECTION 4 — MAINTENANCE

Daily maintenance	4-1
Periodic maintenance	4-2
Replacing blade inserts and backup rollers	4-4
Adjusting runout detector	4-4
Adjusting cutting load detector	4-5
Troubleshooting	4-6

SPECIFICATIONS	5-1
----------------------	-----

HOW TO UNFOLD SAW BLADE	6-1
-------------------------------	-----