

A large, stylized white graphic on an orange background, resembling a stylized 'M' or a series of radiating lines.

Mazak

MAINTENANCE MANUAL

QUICK TURN SMART 200

QUICK TURN SMART 250

QUICK TURN SMART 200M

QUICK TURN SMART 250M

MANUAL No. : HB07MA0023E

NC Unit : MAZATROL SMART

**MAINTENANCE
MANUAL**



MAINTENANCE MANUAL

QUICK TURN SMART 200

QUICK TURN SMART 250

QUICK TURN SMART 200M

QUICK TURN SMART 250M

MANUAL No. : HB07MA0023E

NC Unit : MAZATROL SMART

Before using this machine and equipment, fully understand the contents of this manual to ensure proper operation. Should any questions arise, please ask the nearest Technical Center or Technology Center.

IMPORTANT NOTICE

1. Be sure to observe the safety precautions described in this manual and the contents of the safety plates on the machine and equipment. Failure may cause serious personal injury or material damage. Please replace any missing safety plates as soon as possible.
2. No modifications are to be performed that will affect operation safety. If such modifications are required, please contact the nearest Technical Center or Technology Center.
3. For the purpose of explaining the operation of the machine and equipment, some illustrations may not include safety features such as covers, doors, etc. Before operation, make sure all such items are in place.
4. This manual was considered complete and accurate at the time of publication, however, due to our desire to constantly improve the quality and specification of all our products, it is subject to change or modification. If you have any questions, please contact the nearest Technical Center or Technology Center.
5. Always keep this manual near the machinery for immediate use.
6. If a new manual is required, please order from the nearest Technical Center or Technology Center with the manual No. or the machine name, serial No. and manual name.

Issued by *Manual Publication Section, Yamazaki Mazak Corporation, Japan*

CONTENTS

Page

1	INTRODUCTION	1-1
1-1	Machine Overview	1-1
1-1-1	Intended use of the machine	1-1
1-1-2	Operating position.....	1-1
1-1-3	Features.....	1-2
1-2	List of Manuals to Be Used.....	1-4
1-3	Numbering System for Pages.....	1-4
1-4	Numbering System for Figures and Tables	1-4
1-5	Distinction between Standard and Optional Specifications.....	1-5
1-6	Confirmation of Spindle Development-Wise Specifications	1-5
2	SAFETY PRECAUTIONS	2-1
2-1	Rule	2-1
2-2	Basic Safety Items.....	2-1
2-3	Clothing and Personal Safety	2-3
2-4	Safety Items Related to Operation	2-4
2-5	Safety Items Related to Gripping Workpiece and Tooling	2-6
2-6	Safety Items Related to Gripping Workpiece and Tooling (in Milling)	2-7
2-7	Safety Items Related to Maintenance	2-7
2-8	Safety Items Related to Workplace	2-8
2-9	Safety Items Related to Chip Conveyor.....	2-9
2-10	Safety Equipment	2-9

2-11	Remarks on the Cutting Conditions Recommended by the NC	2-9
2-12	Safety Nameplates	2-10
2-13	Location and Function of Safety Devices	2-15
3	OUTLINE OF THE MACHINE	3-1
3-1	Major Components	3-1
3-2	Maintenance Cover	3-6
4	REGULAR INSPECTION AND MAINTENANCE.....	4-1
4-1	General.....	4-1
4-2	MAINTENANCE CHECK Display	4-3
4-3	Maintenance/Inspection Items.....	4-4
4-4	Supplying Oil and Coolant	4-9
4-5	Processing of the Lubricant Collection Tube	4-14
5	MAINTENANCE OF MAJOR MACHINE UNITS.....	5-1
5-1	Headstock/Hydraulic Chuck	5-1
5-1-1	Construction and operation.....	5-1
5-1-2	Greasing and lubrication.....	5-3
5-1-3	Checking the headstock for disturbed accuracy in the event of collision.....	5-7
5-1-4	Cleaning.....	5-8
5-1-5	Chuck assembly interface.....	5-10
5-2	Turret.....	5-13
5-2-1	Construction and operation (QT-Smart200/250)	5-13
5-2-2	Construction and operation (QT-Smart200M/250M).....	5-16
5-2-3	Adjustment.....	5-22

5-2-4	Cleaning.....	5-26
5-2-5	Turret unit internal maintenance	5-27
5-3	TOOL EYE (Option).....	5-28
5-3-1	Construction and operation.....	5-28
5-3-2	Checking and adjustment	5-29
5-4	X- and Z-Axes	5-32
5-4-1	Construction and operation.....	5-32
5-4-2	Zero-point setting method	5-33
5-4-3	Lubrication	5-39
5-4-4	Adjustment.....	5-39
5-5	Tailstock	5-41
5-5-1	Construction and operation.....	5-41
5-5-2	Disassembly	5-41
5-5-3	Adjustment.....	5-42
5-5-4	Greasing	5-46
5-5-5	Cleaning up chips on tailstock periphery	5-47
5-6	Hydraulic Unit and Hydraulic Circuit	5-49
5-6-1	Construction and operation.....	5-49
5-6-2	Checkups before starting hydraulic unit.....	5-58
5-6-3	Inspection when starting hydraulic unit.....	5-58
5-6-4	Inspection and maintenance of hydraulic unit.....	5-59
5-6-5	Line filter for the hydraulic cylinder	5-61
5-7	Lubrication Unit and Lubrication Circuit	5-63
5-7-1	Construction and operation (grease lubrication)	5-63

5-7-2	Maintenance and check of the grease-lubricating pump	5-64
5-7-3	Construction and operation (oil lubrication)	5-67
5-8	Coolant System	5-72
5-8-1	Construction and operation.....	5-72
5-8-2	Checking and replenishment	5-74
5-8-3	Cleaning.....	5-75
5-8-4	Replacement.....	5-78
5-8-5	Method of pulling out the coolant tank	5-78
5-8-6	Maintenance of chip conveyor	5-83
5-9	Air Unit.....	5-85
5-9-1	Construction and operation.....	5-85
5-9-2	Replacement.....	5-92
5-9-3	Additional air unit for linear scale (option).....	5-93
5-10	Headstock Cooling Unit and Headstock Cooling System	5-97
5-10-1	Cooling of 18.5 kW and 26.0 kW spindles	5-97
5-10-2	Cooling of 15.0 kW spindle	5-101
5-10-3	Control panel cooling	5-102
5-11	Steady Rest (Option)	5-103
5-11-1	Construction and operation.....	5-103
5-11-2	Greasing	5-103
5-11-3	Wipers for the steady rest duct	5-104
5-11-4	Cleaning up chips on steady rest periphery.....	5-104
5-11-5	Replacing the limit sensor used to check the connecting position of the steady rest	5-106
5-11-6	Replacing the bracket (supporter) used for steady rest mounting	5-108

5-12	Way Cover.....	5-113
5-12-1	Procedure for removing the Z-axis way cover	5-115
5-12-2	Procedure for removing the X-axis way cover	5-127
5-12-3	Procedure for removing the W-axis way cover	5-128
5-13	Milling Holder.....	5-129
5-13-1	Checking for secure mounting of cutting tools and holders	5-129
5-13-2	Checking for the turret, milling holders, and cutting tools to scan for chips	5-129
5-13-3	Checking for the entry of coolant into milling through holder	5-129
5-13-4	Checking for the looseness of eccentric pin mounting bolts	5-129
5-13-5	Run adjustment of a tool.....	5-129
5-14	Automatic Operator Door Opening/Closing Device (Option)	5-131
5-14-1	Actuator belt tension adjustment	5-131
5-14-2	Actuator stroke study	5-134
5-14-3	Procedures for door controller error.....	5-137
5-14-4	Replacing the safety sensor (contact pressure sensor).....	5-139
5-15	Coolant Temperature Control (Option)	5-141
5-15-1	Construction and operation.....	5-141
5-15-2	Cleaning the filter.....	5-142
5-15-3	Discarding the coolant fluid.....	5-142
5-16	Others.....	5-143
5-16-1	CNC unit	5-143
5-16-2	Electrical control cabinet.....	5-145
5-16-3	Procedure for replacing the proximity sensor	5-150
5-16-4	Replacing the LED lamp	5-151

5-16-5	Wipers.....	5-154
5-16-6	Front door glass.....	5-155
5-16-7	Procedure for replacing the bellows cover.....	5-155
5-17	List of Consumption Goods	5-158
6	INSTALLATION	6-1
6-1	Preparation for Installation.....	6-1
6-1-1	Environmental requirements.....	6-1
6-1-2	Power requirements.....	6-2
6-1-3	Air source (Air consumption amount)	6-4
6-1-4	Foundation work	6-4
6-1-5	Foundation parts.....	6-5
6-1-6	Delivering the machine	6-6
6-2	Machine Installation.....	6-8
6-2-1	Precautions for machine installation	6-8
6-2-2	Unpacking, inspection and cleaning	6-11
6-2-3	Location of transit clamps	6-12
6-2-4	Installation procedure	6-15
6-3	Connecting the Power Supply Cable and Air Supply Hose	6-17
6-3-1	Connecting the power supply cable.....	6-17
6-3-2	Grounding	6-19
6-3-3	Connecting the air hose.....	6-20
6-4	Coolant Tank Installation	6-22
6-5	Trial Operation.....	6-29
7	TROUBLESHOOTING.....	7-1

7-1	Troubleshooting Procedures	7-1
7-1-1	If the tool has come into contact with the workpiece, chucks or other sections.....	7-1
7-1-2	If the source of the trouble cannot be located.....	7-1
7-2	Troubleshooting for Each Unit	7-2
7-2-1	Headstock.....	7-2
7-2-2	Chuck.....	7-3
7-2-3	Turret	7-4
7-2-4	TOOL EYE (option).....	7-4
7-2-5	X-axis.....	7-5
7-2-6	Z-axis	7-5
7-2-7	Tailstock.....	7-5
7-2-8	Hydraulic unit.....	7-6
7-2-9	Grease lubrication unit.....	7-7
7-2-10	Oil lubrication unit	7-8
7-2-11	Coolant unit.....	7-8
7-2-12	Air unit (☆)	7-8
7-2-13	Headstock cooling unit.....	7-8
7-2-14	Wiper for the door and wiper for the way cover	7-9
7-2-15	Milling holder.....	7-9
7-2-16	Steady rest.....	7-9
7-2-17	Automatic operator door opening/closing device.....	7-10
7-2-18	Coolant temperature control	7-11