



Maintenance Manual

Manual of Basic Maintenance
(For maintenance technician)
(CHMER CONTROLLER)
(CNC-E3C) C version
For XY70R04

CONTENTS

1. Safety instruction.....	1- 1
1.1 General instruction.....	1- 1
1.2 Safety precautions during operation.....	1- 2
1.3 Safety operating process and environment for the operator.....	1- 8
1.4 Machine stopping method.....	1- 9
1.5 Safety checklist during EDM.....	1-10
2. Regular maintenance instruction.....	2- 1
2.1 Starting check , daily check.....	2- 2
2.2 Weekly check.....	2- 8
2.3 Monthly check.....	2-10
2.4 Half-year check.....	2-12
2.5 Yearly check.....	2-17
2.6 Exchange pump motor.....	2-23
2.7 Maintenance for the carbon brush of DC servo motor.....	2-24
3. Troubleshooting.....	3- 1
3.1 Troubleshooting & adjustment of poor electronic discharge.....	3- 1
3.2 Content for general trouble shooting and its description.....	3- 2
3.3 Repairing instruction for general troubles.....	3-11
4. Machine body system.....	4- 1
4.1 CM-434C 3D system drawing.....	4- 1
4.2 CM-855C 3D assembly system.....	4-25
4.3 CM-A53C 3D system drawing.....	4-45
5. Function description for internal setting parameters.....	5- 1
5.1 Parameter description.....	5- 1
5.2 Description for hot key screen.....	5- 8
5.3 Error message.....	5-10
5.4 I/O message.....	5-12

6. CNC repairing circuits and contents.....	6- 1
7. Installation confirmation table.....	7- 1
8. FAGOR scale wiring.....	8- 1
8.1 RSF scale wiring.....	8- 2
8.2 SPCC3 SERIAL PCB jump pin setting.....	8- 3

version:E1B0006C