

Cincom K12/16

(1F5P)

(1F6P)

(1F7P)

Maintenance Manual

CITIZEN WATCH CO., LTD.
Precision Machinery Division

Maintenance Manual

0. Table of Contents

This table of contents does not go into details. Please refer to the table of contents for detailed headline listed on the top of each chapter.

0. Table of Contents.....	0-1
1. Outline.....	1-1
1.1 Outline of This Manual.....	1-3
1.2 Target Reader	1-4
2. Safety Precautions	2-1
2.1 Safety Signs	2-3
2.2 Emergency Stop Button.....	2-7
2.3 Safety Devices.....	2-8
2.4 Specifications of Safety Operations.....	2-13
2.5 General Precautions during Operation	2-14
2.5.1 Before starting the machine	2-15
2.5.2 Safety during preparation operation	2-16
2.5.3 Safety at machine start	2-16
2.5.4 Safety during automatic operation.....	2-17
2.5.5 Safety during maintenance.....	2-18
2.5.6 Safety at end of operation	2-18
2.6 Action of Emergency Situations.....	2-19
2.6.1 Emergency situations requiring evacuation	2-19
2.6.2 Power failure	2-19
2.6.3 Resuming operation	2-19
2.7 Notes for Prevention of Accident	2-20
2.7.1 Notes for prevention of electric shock accident	2-20
2.7.2 Notes for prevention of injury or death	2-20
2.7.3 Notes for prevention of fire	2-21
2.7.4 Notes for prevention of machine damage.....	2-22

Code No.	C-K1216 V VI VII 3E1-0000	MFG No.	K1216/0001 ~	Issue Date	2005.3
-------------	------------------------------	------------	--------------	---------------	--------

3. Machine Structure	3-1
3.1 Machine Components.....	3-4
3.2 Spindle Unit	3-8
3.3 Guide Bushing	3-9
3.4 Tool Post	3-10
3.5 Back Spindle Device.....	3-11
3.6 Z Axis Feed Structure	3-12
3.7 X, Y Axes Feed Structure	3-13
3.8 One-Point Back Machining Feed Structure	3-14
3.9 Lubrication Device	3-15
3.10 Coolant Device	3-20
3.11 Pneumatic device	3-21
4. Periodical Check	4-1
4.1 Periodical Check.....	4-3
4.1.1 Daily Check	4-4
4.1.2 Monthly Check	4-8
4.1.3 Semi-Annual Check	4-11
4.1.4 Removing Chips.....	4-14
4.2 Oil and Grease Supply	4-16
4.2.1 Lubricant Table	4-16
4.2.2 Precautions on Lubrication and Replacement of Lubricant.....	4-17
4.2.3 Cross Reference Table of Lubricant.....	4-19
4.3 Consumable Parts	4-20
5. Troubleshooting.....	5-1
5.1 Procedure for Detecting Trouble	5-3
5.1.1 Overview	5-3
5.1.2 Procedure for Detecting Trouble	5-3
5.2 Status Screen	5-5
5.2.1 Operation in Status Screen	5-5
5.2.2 Reading Addresses and Data on Status Screen	5-6
5.3 Alarms	5-7
5.3.1 Alarms and Messages.....	5-7
5.3.2 Alarm Messages List.....	5-8
5.3.3 Operator Messages.....	5-13
5.4 Warning Messages.....	5-14
5.4.1 Warnings and messages.....	5-14
5.4.2 Warning Messages List.....	5-14
5.5 Troubleshooting.....	5-17
5.5.1 Action Against the Message "1000 Emergency button pushed"	5-17
5.5.2 Resetting Power Circuit Overcurrent Trip	5-18
5.5.3 Resetting Coolant Pump Motor Thermal Trip	5-21
5.5.4 Resetting External Device Alarm	5-23
5.5.5 Resetting Interference Area Alarm	5-25
5.5.6 Resetting Invalid Back Spindle Chuck Operation	5-27

5.5.7 Resetting Back Spindle Orient Alarm	5-28
5.5.8 Restoration from Other Alarms.....	5-29
5.6 Machine Part Faults.....	5-41
5.6.1 Machine Start Failure	5-41
5.6.2 Main Spindle Rotation Failure	5-42
5.6.3 Failure of Tool Spindle Rotation — Optional	5-42
5.6.4 Back Spindle Rotation Failure	5-43
5.6.5 Abnormal Condition Around Guide Bushing	5-44
5.7 Appendix.....	5-48
5.7.1 Timer Setup	5-48
5.7.2 Specifying Keep Relay	5-50
5.7.3 Setting the Data Table	5-52
5.7.4 Setting the P-CODE Variables	5-55
5.7.5 Zero Return.....	5-59
5.7.6 Mechanical Adjustment	5-61
5.7.7 Software Version.....	5-62
5.7.8 Dedicated NC Parameter	5-63
5.7.9 Electrical Device Layout	5-77
5.7.10 Terminal Layout	5-81
5.7.11 Relay Board Component Layout	5-82
5.7.12 Control Box Component Layout	5-83
6. Parts List	6-1
7. Wiring Diagram	7-1
8. Ladder I/O List.....	8-1
Appendix Relocating the NC Machine.....	App-1
Selecting the Installation Site	App-3
Preparation for Transporting	App-6
Transportation.....	App-9
A. Hoist sling	App-9
B. Forklift truck	App-11
Installing the NC Machine	App-12
Notes on using water-soluble coolant	App-19
Pre-operation Check	App-20