


Mazak

PARAMETER LIST
ALARM LIST
for
MAZATROL M PLUS

OPERATING MANUAL

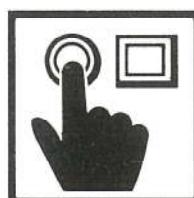

PARAMETER LIST

for

MAZATROL M PLUS

Manual No. : H733SA0014E

Serial No. :

Before using this machine and equipment, fully understand the contents of this manual to ensure proper operation. Should any questions arise, please ask the nearest Technical/Service Center.

IMPORTANT NOTICE

1. Be sure to observe the safety precautions described in this manual and the contents of the safety plates on the machine and equipment. Failure may cause serious personal injury or material damage. Please replace any missing safety plates as soon as possible.
2. No modifications are to be performed that will affect operation safety. If such modifications are required, please contact the nearest Technical/Service Center.
3. For the purpose of explaining the operation of the machine and equipment, some illustrations may not include safety features such as covers, doors, etc. Before operation, make sure all such items are in place.
4. This manual was considered complete and accurate at the time of publication, however, due to our desire to constantly improve the quality and specification of all our products, it is subject to change or modification. If you have any questions, please contact the nearest Technical/Service Center.
5. Always keep this manual near the machinery for immediate use.
6. If a new manual is required, please order from the nearest Technical/Service Center with the manual No. or the machine name, serial No. and manual name.

Issued by *Manual Publication Section, Yamazaki Mazak Corporation, Japan*

CONTENTS

	Page
INTRODUCTION	1
1. PRELIMINARY REMARKS	2
2. FORMAT OF PARAMETER TABLES	2
3. PRECAUTIONS	3
4. USER PARAMETER	4
POINT CUTTING PARAMETER	
D1 to D108	4 ~ 18
LINE/FACE/3D CUTTING PAR	
E1 to E108	19 ~ 35
USER PARAMETER No. 1	
F1 to F108	36 ~ 54
On addresses G1 to G16 of the USER PARAMETER No. 2	55
USER PARAMETER No. 2	
G1 to G52	56 ~ 66
USER PARAMETER No. 3	
H1 to H108	67 ~ 79
USER PARAMETER No. 4	
I1 to I16	80 ~ 81
5. MACHINE PARAMETER	82
MACHINE PARAMETER No. 1	
J1 to J108	82
MACHINE PARAMETER No. 2	
K1 to K108	83 ~ 95
MACHINE PARAMETER No. 3	
L1 to L108	96 ~ 114
MACHINE PARAMETER No. 4	
M1 to M18	115 ~ 119
MACHINE PARAMETER No. 5	
N1 to N16	120 ~ 123
MACHINE PARAMETER No. 6	
S1 to S16	124 ~ 126

ALARM LIST

for

MAZATROL M PLUS

Manual No. : H733SA0022E

Serial No. :

Before using this machine and equipment, fully understand the contents of this manual to ensure proper operation. Should any questions arise, please ask the nearest Technical/Service Center.

IMPORTANT NOTICE

1. Be sure to observe the safety precautions described in this manual and the contents of the safety plates on the machine and equipment. Failure may cause serious personnel injuries or material damage. Please replace any missing safety plates as soon as possible.
2. No modifications are to be performed that will affect operation safety. If such modifications are required, please contact the nearest Technical/Service Center.
3. For the purpose of explaining the operation of the machine and equipment, some illustrations may not include safety features such as covers, doors, etc. Before operation, make sure all such items are in place.
4. This manual was considered complete and accurate at the time of publication, however, due to our desire to constantly improve the quality and specification of all our products, it is subject to change or modification. If you have any questions, please contact the nearest Technical/Service Center.
5. Always keep this manual near the machinery for immediate use.
6. If a new manual is required, please order from the nearest Technical/Service Center with the manual No. or the machine name, serial No. and manual name.

Issued by Manual Publication Section, Yamazaki Mazak Corporation, Japan

CONTENTS

	Page
Introduction	1
1. General Outline	2
2. Machine-Status Indicator Lamps	2
3. Alarm Display	2
4. Color of Alarm Display and its Elimination	2
5. Structure of the Alarm List	3
6. Precautions	4
7. Alarm List	5