

Service Manual

Screw Compressor

ASK SIGMA CONTROL

9_5734 07 E

Manufacturer:

KAESER KOMPRESSOREN GmbH

96450 Coburg • PO Box 2143 • GERMANY • Tel. +49-(0)9561-6400 • Fax +49-(0)9561-640130

<http://www.kaeser.com>

1	Regarding this document	
1.1	Using the Document	1
1.2	Additional Documents	1
1.3	Copyright	1
1.4	Symbols and Identification	1
1.4.1	Warnings	1
1.4.2	Other instructions and symbols	2
2	Technical Specification	
2.1	Nameplate	3
2.2	Options	3
2.3	Weight	3
2.4	Temperature	4
2.5	Ambient Conditions	4
2.6	Ventilation	5
2.7	Pressure	6
2.8	Free Air Delivery	6
2.9	Cooling Oil Recommendation	6
2.10	Cooling Oil Charge	7
2.11	Motors and Power	7
2.11.1	Drive motor	7
2.12	Sound Pressure Level	8
2.13	Power Supply	8
2.14	Power Supply Specifications	9
2.14.1	Mains frequency: 50 Hz	9
2.14.2	Mains frequency: 60 Hz	10
2.14.3	Supply conditions at 400V/3/50Hz	11
3	Safety and Responsibility	
3.1	Basic Information	12
3.2	Specified Use	12
3.3	Improper Use	12
3.4	User's Responsibilities	12
3.4.1	Observe statutory and universally accepted regulations	12
3.4.2	Qualified personnel	13
3.4.3	Inspection Schedules and Accident Prevention Regulations	13
3.5	Dangers	14
3.5.1	Safely Dealing with Sources of Danger	14
3.5.2	Safe Machine Operation	16
3.5.3	Organisational Measures	17
3.5.4	Danger Areas	17
3.6	Safety Devices	17
3.7	Safety Signs	18
3.8	In Emergency	19
3.8.1	Fire fighting	19
3.8.2	Remove any cooling oil from your person.	19
3.9	Warranty	19
3.10	Environmental Protection	20
4	Design and Function	
4.1	Cabinet	21
4.2	Functional Description of the Machine	21
4.3	Floating relay contacts	22
4.4	Options	23
4.4.1	Machine mountings	23
4.4.2	Optional Filter Monitoring Set	23

4.5	Operating and Control Modes	23
4.5.1	Operating modes of the machine	23
4.5.2	Control Modes	24
4.6	Safety Devices	25
4.7	SIGMA CONTROL Keys and Indicators	25
5	Installation and Operating Conditions	
5.1	Safety	28
5.2	Installation Conditions	28
5.2.1	Place of installation and distances	28
5.2.2	Ensure adequate ventilation.	29
5.2.3	Exhaust duct design	29
5.3	Operating the Machine in an Air System.	30
6	Installation	
6.1	Safety	31
6.2	Reporting Transport Damage	31
6.3	Making the Compressed Air Connection	31
6.4	Making the Power Supply Connection	32
6.5	Options	33
6.5.1	Ânchoring the machine	33
7	Initial Start-up	
7.1	Safety	34
7.2	Instructions to be Observed before before Every Start-Up	34
7.3	Check Installation and Operational Conditions	35
7.4	Setting the Overload Protection Cut-Out	36
7.5	Pouring Cooling Oil into the Airend	36
7.6	Check Direction of Rotation	37
7.7	Starting the Machine for the First Time	37
7.8	Setting the Setpoint Pressure	37
7.9	Checking the Door Interlock Switch	38
7.10	Changing the display language	38
8	Operation	
8.1	Switching On and Off	40
8.1.1	Switching on	40
8.1.2	Shutdown	40
8.2	Switching Off in an Emergency and Switching On again	41
8.3	Remote On and Off Switching	41
8.4	Switching On and Off with the Clock	42
8.5	Acknowledging Alarm and Warning Messages	43
9	Fault Recognition and Rectification	
9.1	Basic Information	45
9.2	Alarm Messages (machine shutdown)	45
9.3	Warning Messages (yellow LED lights)	48
9.4	Other Faults	52
10	Maintenance	
10.1	Safety	53
10.2	Maintenance Schedule	53
10.2.1	Logging maintenance work	53
10.2.2	Resetting maintenance interval counters	54
10.2.3	Regular maintenance tasks	54
10.2.4	Cooling Oil: Change Interval	55
10.2.5	Regular service work	56

10.3	Cooler: Cleaning or Renewing the Filter Mats	56
10.4	Cleaning or Replacing the Control Cabinet Filter Mats	57
10.5	Cooler Maintenance	58
10.6	Air Filter Maintenance	59
10.7	Drive Motor Maintenance	60
10.8	Maintaining the Drive Belts	60
10.9	Checking the Pressure Relief Valve	61
10.10	Checking the Excess Temperature Safety Shutdown Function	62
10.11	Checking the Cooling Oil Level	62
10.12	Venting the Machine (depressurizing)	63
10.13	Topping up the Cooling Oil	65
10.13.1	Venting the machine (depressurizing)	65
10.13.2	Topping up with cooling oil and trial run	66
10.14	Changing the Cooling Oil	67
10.15	Changing the Oil Filter	70
10.16	Changing the Oil Separator Cartridge	71
10.17	Document maintenance and service work	73
11	Spares, Operating Materials, Service	
11.1	Note the Nameplate	74
11.2	Ordering Consumable Parts and Operating Materials	74
11.3	SIGMA AIR SERVICE	74
11.4	Service Addresses	75
11.5	Spare Parts for Service and Repair	75
12	Decommissioning, Storage and Transport	
12.1	Putting Out of Operation	78
12.2	Packing	78
12.3	Storage	78
12.4	Transporting	79
12.4.1	Safety	79
12.4.2	Transporting with a forklift truck	79
12.4.3	Transporting with a crane	79
12.5	Disposal	80
13	Annex	
13.1	Pipeline and instrument flow diagram (P+I diagram)	81
13.2	Pipe and Instrument Flow Diagram (P+I diagram): MODULATING control mode	87
13.3	Dimensional Drawing	93
13.4	Electrical Diagram	96