


MACHINE MANUAL

SD-1014 ZNC

November 8, 2000
Version 1.02

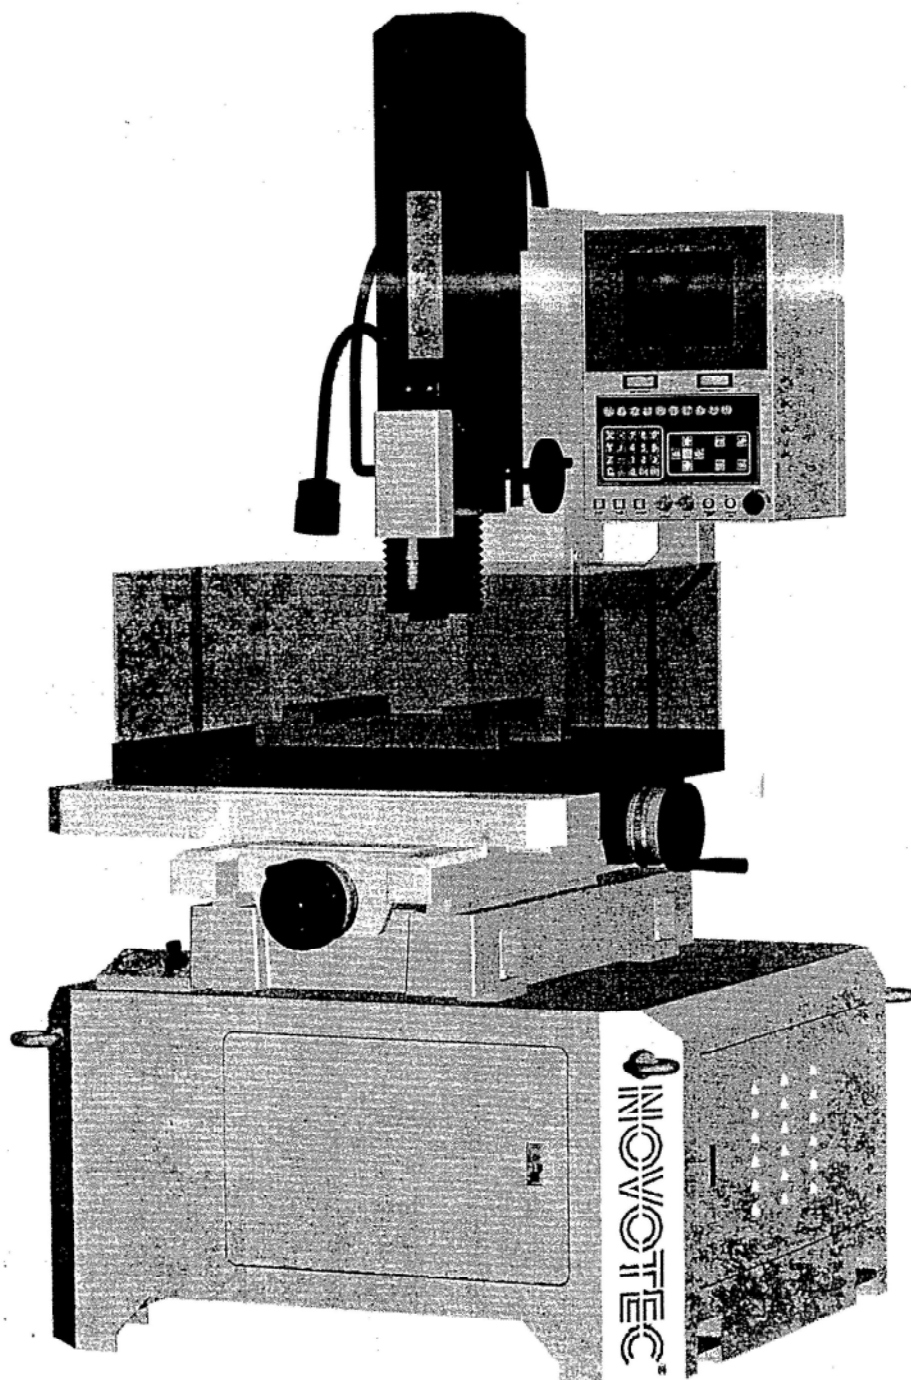

NOVOTEC[®]

Table of contents

1	INTRODUCTION	5
1.1	FOREWORD.....	5
1-2	DESCRIPTION OF THE MACHINE	6
1-3	MACHINE SPECIFICATIONS.....	7
1-4	MANUFACTURER'S DETAILS	8
1-5	ORDERING ADDITIONAL COPIES OF MANUAL.....	8
2	INSTALLATION.....	9
2-1	PREPARATION.....	9
2-1.1	Requirements for the installation area	9
2-2	MOVING THE MACHINE	10
2-2.1	Safety instructions for moving	10
2-2.2	Removing packaging	11
2-2.3	Using a fork-lift truck	11
2-2.4	Lifting the machine	12
2-2.5	Layout.....	13
2-3	CONNECTION TO POWER SUPPLY.....	14
2-3.1	Power supplies.....	14
2-3.2	Electrical connection	14
2-3.3	Air supply	15
2-3.4	Mounting the Z-axis motor	16
2-4	REPACKING.....	16
2-5	DISASSEMBLY	16

3	SAFETY INSTRUCTIONS.....	17
3-1	GENERAL	17
3-2	DANGER INDICATIONS.....	18
3-3	SAFETY FEATURES	20
3-4	PROPER USE	20
3-5	PERSONAL PROTECTION EQUIPMENT	21
3-6	HAZARDOUS AREAS ON THE MACHINE.....	21
3-6.1	Hazard symbols on the machine	22
3-6.2	High voltage area	23
3-6.3	Location of safety features	24
4	MAINTENANCE	25
4-1	MAINTENANCE CHECK.....	25
4-2	MACHINE MAINTENANCE.....	26
4-2.1	Lubricating guides.....	26
4-2.2	Replacing the filter in the water tank.....	26
4-2.3	Replacing the pump filter	27
4-2.4	Draining water from the air pump.....	27
4-3	LUBRICANTS	28
4-4	FLUID TO BE USED.....	28
4-5	WASTE PRODUCTS	28
4-6	CLEANERS.....	28
4-7	PARTS LIST.....	29

5.	OPERATION	31
5-1	PRINCIPAL MACHINE COMPONENTS.....	31
5-2	CONTROL PANEL OPERATION	32
5-2.1	Control panel.....	32
5-2.2	Keyboard.....	34
5-2.3	Machine buttons	35
5-2.4	Moving and adjusting the guide	36
5-3	FUNCTIONS.....	37
5-3.1	Operator screen.....	37
5-3.2	F1 - MEASURE	38
5-3.3	F2 - TECHNOLOGY.....	39
5-3.4	F3 - SAVE.....	40
5-3.5	F4 - POWER	40
5-3.6	F5 - CHOOSE.....	41
5-3.7	F6 - SPEED.....	43
5-3.8	F7 - SET COORDINATES	43
5-4	AIR PUMP OPERATION.....	44
5-5	START UP	45
5-5.1	Check list for machine start up.....	45
5-5.2	Installing the electrode.....	45
5-6	OPERATOR CONTROLS	47
5-6.1	Operation.....	47
5-6.2	Warning	47
6	FAULTS.....	49
6-1	FAULTS.....	49
6-1.1	Unstable operation.....	49
6-1.2	Electrode bending in operation	49
6-1.3	Electrode catching fire.....	49
6-1.4	Z axis vibration during operation.....	50
6-1.5	Abnormal electrode wear.....	50
6-1.6	Machined hole larger at the bottom of the work piece.....	50
6-1.7	Tapered machined hole	50
6-2	OTHER PROBLEMS.....	51