

Standard Machine
MHA460P

Maintenance
Instruction Manual

MAINTENANCE INSTRUCTION MANUAL

CONTENTS

Safety and maintenance

* For safe operation: General safety items	S - 1
* For safe use of the machine: Definition of signal words	S - 3
* Maintenance and inspection of the machine (Safety items)	S - 4
* Warning plates affixing location diagram	S - 7
* For improved machining accuracy	S - 8

1. Maintenance and Checking	1
1.1 Maintenance Table	2
1.2 Cleaning Machine Parts	3
2. Machine Lubrication and Oiling	4
2.1 Lubrication Control Diagram	5
2.2 Lubricant List	6
3. Pneumatic Equipment and Electric Parts	7
3.1 Pneumatic Equipment	7
3.1.1 Air Refining Equipment	8
3.2 Pneumatic Circuit Diagram	13
3.3 List and Layout of Pneumatic Equipment	14
4. Automatic Lubricating Unit	15
4.1 Specifications	15
4.2 Outline Drawing	16
4.3 Component and Functions	17
4.4 Operation Procedure	18
4.5 Maintenance Procedure	19
4.6 Cleaning	19
4.7 Lubricant System Diagram	21
5. Spindle Head Lubrication Unit	22
5.1 Specifications	22
5.2 Outline Drawing	23
5.3 Operating Procedures	24
5.4 Cleaning of The Spindle Head Lubricator	24

6. Coolant Unit and Chip Recovery Unit	25
6.1 Coolant Unit	25
6.1.1 Specifications of Coolant Unit	25
6.1.2 Coolant Unit Outlines	26
6.1.3 Operation of Coolant Unit	27
6.1.4 Maintenance, Inspection and Cleaning	27
6.1.5 Pump Troubleshooting	28
7. Spindle Head	29
7.1 Spindle Head Structural Diagram	29
7.2 Air Cylinder Adjustment	30
8. Feed System	31
8.1 Feed System Structure	31
8.2 Layout of Limit Switches and Linear Scales (option) on Each Axis	32
8.3 Functions of Each Axis Dog	33
8.4 Each Axis Zero Position	34
8.5 Adjustment of Zero-Return Dog (Option)	35
8.6 Adjustment of Linear Gib	36
8.7 Adjustment of Taper Gib for Each Axis	37