

CNC TURRET PUNCH PRESS

**VIPROS** <sup>US</sup>

304050/305072

# OPERATOR'S MANUAL

The logo for AMADA, featuring a stylized 'A' inside a circle followed by the word 'MADA' in a bold, sans-serif font.

VIP OPE US-E01-199409

---

This manual describes the installation, controls, operation, and maintenance of the VIPROS 304050/305072 CNC Turret Punch Press.

Be sure to read it carefully to obtain a thorough knowledge of proper and safe procedures before operating or maintaining the machine.

---

## CONTENTS

*(Each part of this manual has its own table of contents on its first page.)*

|          |                |     |
|----------|----------------|-----|
| Part I   | DESCRIPTION    | 1   |
| Part II  | INSTALLATION   | 13  |
| Part III | CONTROLS       | 19  |
| Part IV  | OPERATION      | 43  |
| Part V   | MAINTENANCE    | 107 |
| Part VI  | ALARMS         | 125 |
| Part VII | SELF-DIAGNOSIS | 141 |
| Appendix | TOOLING        | 171 |

---

Operator's Manual: VIPROS 304050/305072 CNC Turret Punch Press

© 1994 by AMADA CO., LTD.

No part of this publication may be photocopied or otherwise reproduced without the prior written permission of AMADA CO., LTD.

---

PART I

**DESCRIPTION**

---

|  |    |
|--|----|
| Identification of machine equipment    | 2  |
| Description of main equipment          | 3  |
| Safety & mechanical protection devices | 8  |
| Optional equipment                     | 10 |
| Machine & NC specifications            | 11 |

---

PART II

**INSTALLATION**

---

1. Location & foundation 14
2. Lifting & placing 14
3. Cleaning 15
4. Electrical connection 15
5. Air connection 15
6. Hydraulic & cooling water connections 17
7. Confirming electrical connection 18

---

PART III

**CONTROLS**

---

|  |    |
|--|----|
| Main control panel                     | 20 |
| PHNC panel                             | 33 |
| Carriage control panel                 | 35 |
| Turret subcontrol panel                | 36 |
| Switches on machine                    | 38 |
| Switches in electrical control cabinet | 40 |
| Input/output interface                 | 42 |
| Tape reader                            | 42 |

---

PART IV

**OPERATION**

---

|                                  |    |
|----------------------------------|----|
| Machine operating scheme         | 44 |
| Operating conditions             | 44 |
| Preparing for operation          | 46 |
| Manual zero-return               | 46 |
| Warm-up operation                | 47 |
| Tool change                      | 47 |
| Operation procedures             | 50 |
| MEMORY mode operation            | 50 |
| TAPE mode operation              | 53 |
| MDI mode operation               | 55 |
| MANUAL mode operation            | 58 |
| PHNC switch settings             | 60 |
| Stops & emergency stops          | 62 |
| Program management               | 66 |
| Program registration & deletion  | 66 |
| Program & sequence number search | 70 |
| Program editing                  | 72 |
| Program output to tape           | 77 |
| Program check                    | 78 |
| NC setup data                    | 79 |
| PHNC parameters                  | 83 |

---

PART V

**MAINTENANCE**

---

|                               |     |
|-------------------------------|-----|
| Daily maintenance             | 108 |
| Periodical maintenance        | 110 |
| Every week                    | 110 |
| Every month                   | 110 |
| Every 3 months                | 112 |
| Every 6 months                | 113 |
| Every 12 months               | 115 |
| Lubrication                   | 117 |
| Broken shear plate            | 119 |
| Major operation faults        | 121 |
| Fuses & motor breaker         | 122 |
| Registration of custom macros | 123 |

**DANGER!**

*Turn off the machine circuit breaker switch before inspecting or servicing the machine unless power is required for the inspection or servicing.*

---

PART VI

**ALARMS**

---

|                             |     |
|-----------------------------|-----|
| Alarms (Main control panel) | 126 |
| NC status messages          | 135 |
| Alarms (PHNC panel)         | 138 |

---

PART VII

**SELF-DIAGNOSIS**

---

|                                     |     |
|-------------------------------------|-----|
| Self-diagnosis (Main control panel) | 142 |
| Self-diagnosis (PHNC panel)         | 167 |

---

APPENDIX

**TOOLING**

---

|   |     |
|---|-----|
| Station arrangement                                       | 172 |
| 58-station turret   | 172 |
| 44-station turret (Option)                                | 173 |
| 66-station turret (Option)                                | 174 |
| Tool types  | 175 |
| Type A (1/2")   | 175 |
| Type B (1-1/4")   | 176 |
| Types C (2"), D (3-1/2") and E (4-1/2")                   | 177 |
| Mounting and dismounting punches and dies                 | 178 |
| Type A (1/2")   | 178 |
| Type B (1-1/4")   | 180 |
| Types C (2"), D (3-1/2") and E (4-1/2")                   | 182 |
| Keys and keyways in tools and turret stations             | 183 |
| Keys and keyways in tools                                 | 183 |
| Keys and keyways in turret stations                       | 184 |
| Maintenance of punches and dies                           | 185 |
| Disassembly and assembly of punches (Types A and B)       | 185 |
| Removal and installation of punch tips (Types C, D and E) | 186 |
| Re-grinding punches and dies                              | 187 |
| Adjustment of punch and die height                        | 187 |
| Lubrication   | 189 |
| Inspecting punches and dies                               | 189 |
| Inspecting worksheets                                     | 189 |
| Punch-to-die clearance                                    | 190 |
| Punching capacity   | 190 |
| Minimum hole diameter                                     | 192 |
| Precautions for punching thick worksheets                 | 192 |