

TWIN STAR LT200-M/MY

OPERATION & MAINTENANCE

(1st Edition)

Pub No. 5059-E (LE11-145-R1) July 2003

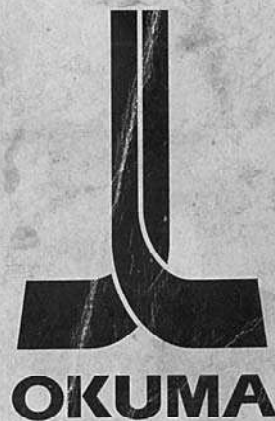


TABLE OF CONTENTS

SECTION 1 OUTLINE.....	1
1. Machine Specifications	1
1-1. Specification Table	1
1-2. Dimensional Drawing.....	3
SECTION 2 TRANSPORTATION AND INSTALLATION (RELOCATION)	5
1. Site Selection Guidelines.....	5
1-1. Care in Machine Transportation	5
2. Foundation Requirements	7
2-1. Precautions for Foundation Work.....	7
3. General Procedure for Installation.....	8
3-1. Installation Procedure	8
3-2. Precautions for Installation	8
4. Leveling the Machine.....	9
4-1. Leveling Procedure.....	9
5. Foundation Plan.....	10
6. Power Requirements and Fuse Capacity	11
6-1. Inspection of Cable Connection.....	11
7. Oils to Be Prepared before Installation	13
SECTION 3 OPERATION (OF CNC LATHE)	14
1. Before Starting Operations	14
1-1. NC Operation.....	14
1-2. Setting Zero Offsets.....	15
2. Machine Operation	27
2-1. Hydraulic Power Unit.....	27
2-2. Spindle Power-Torque Diagrams	31
2-3. Power-Torque Diagram of Rotary Tool Spindle	33
2-4. C-axis Brake.....	34
2-5. Hydraulic Power Chuck.....	35
2-6. Cutting Soft Top Jaws of Power Chuck.....	46
2-7. Precautions for Turret.....	47
2-8. Interlock.....	48
2-9. After Completion of a Day's Operation	50
2-10. Manually Operated Chuck	50
SECTION 4 INSPECTION/MAINTENANCE (FOR TROUBLE-FREE OPERATION)	56
1. Lubrication	57

1-1. Lubricating Oil Specification	59
1-2. Spindle Lubrication System	60
1-3. Lubrication System for Bed/Saddle/Cross-slide Slideways	60
2. Adjusting Centralized Lubrication Unit	61
2-1. Adjusting Pump Delivery	61
2-2. Maintenance and Countermeasure	61
2-3. Other Remarks	61
3. Lubrication and Cleaning of Spindle Cooling Unit	62
3-1. Right/left Spindle Cooling Unit	62
4. Removing Sludge from Coolant Unit	64
4-1. Procedure for Cleaning Separate Coolant Tank	65
4-2. Cleaning the Filter	65
4-3. Cleaning the Fine Chips Collection Bucket	65
5. Collecting Used Lubricating Oil	66
6. Tensioning Belts	67
6-1. Timing Belt for the YS-axis Servomotor	67
7. Other Maintenance Items	68
7-1. Cautions on Checking the X-axis Ball Screw and Related Parts	68
8. Troubleshooting	69
8-1. Trouble with Headstock	69
8-2. Trouble with Turret	70
8-3. Others	76
SECTION 5 SPARE PARTS LIST	77
1. Hydraulic Equipment	77
2. Electric Equipment (Mounted to the Machine)	78
3. Consumable Parts (Life Cycle: 8000 hrs or 3 years)	79
SECTION 6 TECHNICAL DATA	80
1. Chucking and Tooling	80
2. Toolholder Dimensions	82
3. Upper/Lower Turret Tool Interference Diagram (Interference Caused by Turret Rotation)	88
4. Working Ranges	89
5. Dimensions of Spindle Nose	99
6. Hydraulic Power Chuck and Cylinder	102
7. Hydraulic Circuit Diagram	106
8. Air Circuit Diagram	108