

OKK PNC/MIL

MITSUBISHI NUMERICAL CONTROL UNIT

MELDAS 320M/330M/320M-V/330M-V

INSTRUCTION MANUAL

OKK
OKK CORPORATION

ADVANCED AND EVER ADVANCING
MITSUBISHI ELECTRIC

CONTENTS

	Page
I OPERATION MANUAL	
1. SETTING AND DISPLAY UNIT OPERATION	I - 1
1-1 Appearance of 9-inch CRT Setting and Display Unit	I - 1
1-2 Functions of Display Areas	I - 3
1-3 Screen Transition Diagram	I - 5
1-3-1 Screen Transition when Power Is Turned On	I - 5
1-3-2 Screen Transition Diagram	I - 6
1-4 Screen Selection Procedure	I - 7
1-5 Data Setting Method	I - 10
2. POSITION AND SEARCH	I - 15
2-1 POSI	I - 16
2-1-1 Total Clear of CRT Screen	I - 17
2-1-2 Position Display Counter Zero and Origin Zero	I - 17
2-1-3 Manual Numerical Value Command (S, T, M)	I - 18
2-1-4 Displaying Automatic Operation Program	I - 23
2-2 COORDI	I - 24
2-2-1 Buffer Modification	I - 26
2-3 COMMAND	I - 31
2-3-1 Execution Program Monitor	I - 31
2-3-2 Execution Modal Monitor	I - 32
2-3-3 Total Integrating Time Display	I - 34
2-4 SEARCH	I - 35
2-5 RESEARCH	I - 35
2-6 COM-VAR	I - 36
2-6-1 Common Variable Display	I - 37
2-6-2 Common Variable Setting	I - 38
2-6-3 Common Variable Data Deleting	I - 38

	Page
2-7 LOC-VAR	I - 39
2-7-1 Local Variable Data Display	I - 41
3. SEARCH MENU	I - 42
3-1 SEARCH	I - 43
3-1-1 Memory Search	I - 44
3-1-2 Tape Search	I - 45
3-1-3 Collation Stop	I - 47
3-2 RESEARCH	I - 53
3-2-1 RESEARCH Operation Sequence	I - 54
3-2-2 RESEARCH Operation	I - 56
3-2-3 Restart Position Return Method	I - 60
3-2-4 Manual Numeric Command in the Program Restart	I - 61
3-2-5 Notes	I - 63
3-3 Machining Time Calculation	I - 64
3-3-1 Machining Time Calculation Setting	I - 66
3-3-2 Operation for Machining Time Calculation	I - 67
3-3-3 CRT Display Data during Machining Time Calculation	I - 73
3-3-4 Notes on Operation for Machining Time Calculation	I - 74
3-3-5 Operation for Machining Time Calculation on Graphic Screen	I - 76
3-3-6 Machining Time Calculation for Individual CNC Functions ...	I - 77
4. EDIT	I - 86
4-1 Function Outline	I - 86
4-2 Menu Function	I - 86
4-3 Program Edit Operation	I - 89
4-3-1 Data Display Update (One Screen Scroll)	I - 89
4-3-2 Data Display Update (One Line Scroll)	I - 90
4-3-3 Data Change	I - 91
4-3-4 Data Insertion ()	I - 93

	Page
4-3-5 Deletion of One Character (DELETE)	I - 95
4-3-6 Deletion of One Block (CLEAR BLOCK CAN)	I - 96
4-3-7 Deletion of Data on One Screen (SHIFT CLEAR BLOCK CAN)	I - 97
4-4 Edit Screen Extension Operation	I - 98
4-4-1 Edit Data Call (SEARCH)	I - 98
4-4-2 New Program Registration and Preparation (PROGRAM)	I - 104
4-5 Graphic Address Menu	I - 106
4-6 Voice Output Function	I - 115
4-6-1 Key Switch Voice Output	I - 116
4-6-2 Machining Program Voice Output	I - 117
4-7 Sequence Number Auto Addition	I - 125
4-7-1 Parameter Setting	I - 125
4-7-2 Edit Operation	I - 126
5. MDI	I - 129
5-1 Function Outline	I - 129
5-2 Menu Function	I - 129
5-3 MDI Data Setting	I - 130
5-4 Setting the MDI Running Start Position	I - 131
5-5 MDI Screen Extension Operation	I - 132
5-5-1 MDI Data Registration in Memory (MDI-ENT)	I - 132
6. TOOL OFFSET	I - 134
6-1 TOOL OFFSET	I - 135
6-1-1 Tool Offset Data Setting	I - 136
6-1-2 Tool Offset Data Clear	I - 137
6-1-3 Tool Offset Data Setting Modes (Absolute and Incremental) (System Version E and after)	I - 137
6-1-4 Manual Tool Length Measurement	I - 139
6-2 TOOL REGISTRATION	I - 143
6-2-1 Function Outline	I - 143

	Page
6-2-2 Tool Registration in Magazine Pot	I - 143
6-2-3 Tool Registration in HEAD, NEXT, and INDEX	I - 144
6-2-4 Tool Registration Data Clear	I - 145
6-2-5 Manual Numeric Command Operation on the TOOL REGISTRATION Screen (M, T)	I - 145
6-3 TOOL LIFE (This function is not provided for M320M.)	I - 146
6-3-1 Function Outline	I - 146
6-3-2 TOOL LIFE Screen Data Display	I - 148
6-3-3 TOOL LIFE Data Display and Setting (TOOL LIFE Data Screen Page 2)	I - 152
6-3-4 Clear of All TOOL LIFE Data (HEAD, NEXT, GROUP LIST Screen Page 1)	I - 153
6-4 WORK	I - 154
6-4-1 Work Coordinate System Offset Data Setting	I - 156
6-4-2 External Work Coordinate System Offset Data Setting	I - 156
6-4-3 Machine Position Data Display	I - 156
6-4-4 Manual Numeric Commands (M, T) on the Work Coordinate Offset Screen	I - 156
6-4-5 Work Coordinate Offset Data Setting Modes (Absolute and Incremental) (System Version E and after)	I - 157
7. PARAMETERS (USER)	I - 159
7-1 PLC-SW	I - 160
7-1-1 PLC Switch On and Off Operation	I - 160
7-2 CONTROL PARAMETER	I - 161
7-3 AXIS PARAMETER	I - 169
7-4 SETUP PARAMETER	I - 172
7-5 PROCESS PARAMETER	I - 175
8. DATA IN/OUT	I - 179
8-1 DATA INPUT	I - 180
8-1-1 Change of Input and Comparison	I - 181
8-1-2 Work Program Input	I - 182

	Page
8-1-3 Inputting Tool Offset Data	I - 184
8-1-4 Inputting Parameter Tape	I - 185
8-2 DATA OUTPUT	I - 186
8-2-1 Work Program Output	I - 189
8-2-2 Outputting Tool Offset Data	I - 192
8-2-3 Outputting Parameter Tape	I - 193
8-3 PROGRAM ERASE	I - 195
8-4 PROGRAM FILE	I - 200
8-5 PROGRAM COPY	I - 202
8-5-1 Work Program Copy	I - 202
8-5-2 Work Program Condense	I - 203
8-5-3 Work Program Merge	I - 204
8-5-4 Changing the Machining Program Number	I - 206
8-6 COMMUNICATION MONITOR	I - 207
8-6-1 Operation Method	I - 209
8-6-2 Specification Addresses	I - 210
8-7 INPUT/OUTPUT PARAMETER	I - 211
8-7-1 I/O BASE PARAMETER	I - 211
8-7-2 I/O DEVICE PARAM	I - 213
8-7-3 Computer Link Parameters	I - 217
8-8 RS-232C I/O Device Connection and Parameters	I - 221
8-8-1 Connection of Tape Reader, Tape Puncher, Printer, FLD	I - 221
8-8-2 Parallel Puncher Connection for Tape Data Output	I - 224
8-9 Data Protection	I - 225
8-9-1 Data Protection Key	I - 225
8-9-2 Edit Lock B, C	I - 228
9. DIAGNOSIS	I - 231
9-1 ALARM MESSAGE	I - 232

	Page
9-2 SERVO MONITOR	I - 235
9-2-1 Servo Monitor	I - 235
9-2-2 Spindle Monitor	I - 237
9-2-3 PLC Axis Monitor	I - 240
9-2-4 Servo Monitor (2) (Applicable to M320M-V/330M-V System Version B and later)	I - 242
9-2-5 Absolute Position Detection Monitor (Applicable to M320M-V/ 330M-V System Version B and later)	I - 244
9-2-6 Servo Diagnosis (Applicable to M320M-V-/330M-V System Version B and later)	I - 245
9-3 PLC Interface Diagnosis	I - 247
9-3-1 PLC-I/F Setting and Display	I - 247
9-3-2 PLC Device Data Display	I - 251
9-3-3 PLC Interface Signal Forcible Definition (Single-shot Type)	I - 253
9-3-4 PLC Interface Signal Forcible Definition (Modal Type)	I - 254
9-3-5 Diagnosis Executed When an Emergency Stop Status Occurs	I - 255
9-4 NC SPECIFICATION	I - 258
9-4-1 Additional Specification List	I - 258
9-4-2 Software Management Number List	I - 258
9-5 Power Illegal Monitor	I - 259
9-6 Key History	I - 260
9-7 Hardware Monitor 1 (M320M-V/330M-V only)	I - 261
10. GRAPHICS	I - 262
10-1 Function Outline	I - 262
10-2 Menu Function	I - 263
10-3 Use of TRACE Mode (☐ TRACE)	I - 265
10-4 Use of Check Modes	I - 267
10-5 GRF MODE (☐ GRF MODE)	I - 279
10-6 SCALE (☐ SCALE)	I - 281

	Page
10-6-1 Scale Change	I - 281
10-6-2 Display Position Change	I - 282
10-7 STANDARD (☐ STANDARD)	I - 288
10-8 ROTATION (☐ ROTATION)	I - 289
10-9 ERASE (☐ ERASE)	I - 290
10-10 PROGRAM (☐ PROGRAM)	I - 291
11. LADDER CIRCUIT MONITOR	I - 292
11-1 Parameter Setting	I - 292
11-2 Menu Functions	I - 293
11-3 Circuit Read Functions	I - 295
11-4 Displaying the Monitor Screen	I - 296
11-5 Circuit Monitor	I - 297
11-6 Various Monitor Operations	I - 299
11-7 Monitor Stop at the Monitor Stop Trigger Point	I - 300
11-8 Registration Monitor	I - 303
11-9 DEC $\longleftrightarrow$ HEX Current Value Monitor	I - 305
12. OTHER INFORMATION ON RUNNING AND OPERATION	I - 306
12-1 On-conditions of Stored Stroke Limit	I - 306
12-2 Deceleration Check	I - 308
12-2-1 Functions	I - 308
12-2-2 Deceleration Check Method	I - 309
12-3 Absolute Position Detection System	I - 311
12-4 Handle Interruption	I - 312
12-4-1 Outline	I - 312
12-4-2 Interruptible Conditions	I - 312
12-4-3 Interruption Effective Axis	I - 312
12-4-4 Axis Movement Speed Resulting from Interruption	I - 312
12-4-5 Locus Resulting after Handle Interruption	I - 313

	Page
12-4-6 Handle Interruption in Cutter Compensation	I - 317
12-4-7 Resetting the Distance of Interruption	I - 319
II MAINTENANCE	
1. DAILY MAINTENANCE	II - 1
1-1 Daily Maintenance Inspection of Tape Reader	II - 1
1-2 Checking the External View	II - 3
1-3 Checking the Inside of the Enclosure	II - 3
2. FAULT DIAGNOSIS AND ACTION	II - 4
2-1 Checking the Fault Occurrence Status	II - 4
2-2 Fault Examples	II - 5
3. BATTERY REPLACEMENT	II - 6
4. REFERENCE POINT RETURN ADJUSTMENT	II - 8
4-1 Reference Point Return Operation	II - 8
4-2 Setting the Grid Spacing	II - 10
4-2-1 Absolute Position Detection	II - 10
4-2-2 Relative Position Detection	II - 10
4-3 Setting the Grid Mask	II - 11
4-3-1 Setting	II - 11
4-3-2 Measuring the Grid Mask Quantity	II - 12
4-4 Setting the Reference Point Shift Distance	II - 13
4-5 Setting the Creep Speed for Return to Reference Point	II - 14
4-6 Reference Point Return Parameters	II - 16
5. MAINTENANCE FUNCTIONS	II - 17
5-1 Data Input/Output Function	II - 17
5-1-1 Data Format	II - 18
5-1-2 Output of CNC and APLC Data	II - 20
5-1-3 Input and Collation of CNC or APLC Data	II - 26
5-1-4 APLC Variable Area Clear	II - 31
5-1-5 Table of Error Messages	II - 32

III APPENDIXES

APPENDIX 1. MACHINE PARAMETERS (M320M/330M)	III - 1
1-1 Selecting Machine Parameters	III - 2
1-2 Base Specification Parameters	III - 4
1-3 Axis Specification Parameters	III - 24
1-4 Zero Return Parameters (Reference Point Return)	III - 31
1-5 Servo Parameters	III - 34
1-6 Machine Error Compensation	III - 48
1-6-1 Function Outline	III - 49
1-6-2 Setting Compensation Data	III - 52
1-6-3 Example of Using a Linear Axis as the Base Axis	III - 54
1-6-4 Example of Using a Rotation Axis as the Base Axis	III - 56
1-7 Macro File	III - 57
1-8 Spindle Parameters	III - 60
1-9 PLC Parameters	III - 70
1-10 PLC Specification Parameters	III - 73
1-11 PLC Servo Parameters	III - 78
APPENDIX 2. REGISTERING/EDITING THE FIXED CYCLE PROGRAM	III - 79
2-1 Fixed Cycle Operation Parameters	III - 79
2-2 Inputting the Fixed-cycle Program	III - 80
2-3 Outputting the Fixed-cycle Program	III - 81
2-4 Erasing the Fixed-cycle Program	III - 82
2-5 Standard Fixed Cycle Subprogram	III - 84
APPENDIX 3. RS-232C I/O DEVICE PARAMETER SETTING EXAMPLES AND CABLE CONNECTION	III - 90
APPENDIX 4. OPERATION MESSAGES ON CRT SETTING DISPLAY UNIT	III - 91
APPENDIX 5. LIST OF ALARMS	III - 103
5-1 Operation Alarms	III - 103
5-2 Stop Codes	III - 110

	Page
5-3 Servo Alarms	III - 113
5-4 Spindle Alarms	III - 122
5-5 MCP Alarms	III - 129
5-6 System Alarms	III - 133
5-7 Program Error Appendix	III - 137
5-8 Messages at Emergency Stop	III - 153
5-9 Computer Link Errors	III - 154
5-10 Absolute Position Detection Alarms	III - 160
APPENDIX 6. PLAYBACK	III - 170
6-1 Playback Operation	III - 171
6-1-1 Playback Screen	III - 171
6-1-2 Playback Editing	III - 173
6-1-3 Notes on Playback Operation	III - 175
6-1-4 Playback Counter Display	III - 175
6-1-5 Stored Coordinates	III - 176
6-2 Edit Operation	III - 177
6-2-1 Moving the Cursor	III - 177
6-2-2 Insertion of Block	III - 178
6-2-3 Deletion of Block	III - 178
6-2-4 ~ADD; Program Deletion ()	III - 178
6-2-5 Automagic Addition of Sequence Numbers in Playback Mode (M320M-V/320M-V System Version C and later)	III - 179
6-3 Limitations	III - 183
APPENDIX 7. MANUAL MEASUREMENT FUNCTION	III - 184
7-1 Outline of Function	III - 184
7-2 Tool Length Measurement	III - 184
7-2-1 Tool Length Measurement Procedure	III - 184
7-2-2 Tool Offset Memory Type II	III - 187
7-3 Tool Radius Measurement	III - 188

	Page
7-3-1 Tool Radius Measurement Procedure	III - 188
7-4 Work Measurement	III - 190
7-4-1 Parameter Setting	III - 190
7-4-2 Plane Offset Measurement Procedure	III - 192
7-4-3 Hole Center Work Offset Measurement Procedure	III - 194
7-4-4 Width Center Work Offset Measurement Procedure	III - 196
7-4-5 Automatic Re-contact after First Contact	III - 198
7-5 Coordinate System Rotation Measurement	III - 199
7-5-1 Coordinate System Rotation Measurement Procedure	III - 199
7-5-2 Rotation Parameter Valid/Invalid	III - 202
APPENDIX 8. HIGH SPEED SERVER RUN (M320M-V/330M-V System Version B and later)	III - 203
8-1 Setup	III - 204
8-1-1 CNC Setup	III - 204
8-1-2 Data Server Setup	III - 205
8-2 High Speed Server Run Function	III - 206
8-2-1 Mode Change	III - 206
8-2-2 Data Server Run Program Search	III - 206
8-2-3 Cycle Start (High-speed Server Run Start)	III - 208
8-3 Data Server Program Management Function	III - 210
8-3-1 Write Protecion Release	III - 212
8-3-2 Program Erasion	III - 212
8-3-3 Hard Disk Condense	III - 214
8-3-4 Program Number Change	III - 215
8-3-5 Server Program Display	III - 215
8-3-6 File Check	III - 216
8-4 Limitations	III - 218
8-4-1 Limitations	III - 218
8-4-2 Cautions	III - 219