

**Network Resistance Welding Monitor System**

# **WM-200A**

## **USER MANUAL**



---

**WM-200A Network Resistance Welding Monitor System**

990-562

# Table of Contents

*[Index is Hyperlinked]*

|                                                             |              |
|-------------------------------------------------------------|--------------|
| REVISION RECORD .....                                       | II           |
| MODEL NUMBERS .....                                         | II           |
| <b>Table of Contents .....</b>                              | <b>iv</b>    |
| <b>List of Figures.....</b>                                 | <b>xii</b>   |
| <b>Contact Us .....</b>                                     | <b>xv</b>    |
| <b>Safety Notes.....</b>                                    | <b>xvi</b>   |
| <b>LIMITED WARRANTY .....</b>                               | <b>xvii</b>  |
| <b>Quick Start Guide .....</b>                              | <b>xxiii</b> |
| OVERVIEW .....                                              | XXIII        |
| BASIC TASKS FOR ALL USERS .....                             | XXIII        |
| LAUNCH THE SOFTWARE .....                                   | XXIII        |
| WORKING WITH WM-INSPECT: OPERATORS.....                     | XXVI         |
| Run Screen versus Monitor Screen.....                       | xxvi         |
| Configure Aggregation Data (Run Screen) .....               | xxvii        |
| Configure Live-Weld Display Settings (Monitor Screen) ..... | xxix         |
| WORKING WITH WM-INSPECT: ENGINEERS.....                     | XXX          |
| Define Data.....                                            | xxxï         |
| Assign sources to principal channels.....                   | xxxï         |
| Select data to be displayed for each channel .....          | xxxii        |
| Setting Aggregation Data .....                              | xxxiii       |
| Define Input Sources and Filters .....                      | xxxvii       |
| Set Limits .....                                            | xl           |
| Set Displacement Limits.....                                | xli          |
| APPEARANCE.....                                             | XLV          |
| HISTORICAL SEARCH.....                                      | XLVI         |
| SYS ADMIN .....                                             | XLVIII       |

|                                               |           |
|-----------------------------------------------|-----------|
| <b>CHAPTER 1 DESCRIPTION .....</b>            | <b>1</b>  |
| <b>Overview .....</b>                         | <b>1</b>  |
| <b>Features .....</b>                         | <b>1</b>  |
| <b>Major Components .....</b>                 | <b>2</b>  |
| WM-200A RESISTANCE WELD MONITOR .....         | 2         |
| WM-200A FRONT PANEL .....                     | 3         |
| Connectors and Channels .....                 | 5         |
| SERVER .....                                  | 6         |
| COMPUTER .....                                | 6         |
| SYSTEM CONNECTIVITY .....                     | 6         |
| <b>Software .....</b>                         | <b>7</b>  |
| OVERVIEW .....                                | 7         |
| Principal Channel Data .....                  | 8         |
| Aggregation Data .....                        | 8         |
| Process Data .....                            | 8         |
| USER ROLES .....                              | 8         |
| Operator .....                                | 8         |
| Engineer .....                                | 9         |
| Administrator .....                           | 9         |
| SCREEN LAYOUTS .....                          | 9         |
| <b>CHAPTER 2 INSTALLATION AND SETUP .....</b> | <b>11</b> |
| <b>Before You Start .....</b>                 | <b>11</b> |
| UNPACKING .....                               | 11        |
| AVAILABLE CONFIGURATIONS .....                | 11        |
| <b>Hardware Specifications .....</b>          | <b>12</b> |
| WM-200A RESISTANCE WELD MONITOR .....         | 12        |
| SERVER .....                                  | 12        |
| DESKTOP OR LAPTOP COMPUTER .....              | 12        |
| <b>System Connections .....</b>               | <b>12</b> |

|                                                                               |           |
|-------------------------------------------------------------------------------|-----------|
| HARDWARE INSTALLATION .....                                                   | 12        |
| Space Requirements.....                                                       | 13        |
| WM-200A SENSOR INPUTS AND CONNECTORS.....                                     | 14        |
| Channel Input Overview .....                                                  | 15        |
| CONNECTING THE MONITOR TO A WELDING SYSTEM .....                              | 16        |
| Opposed Weld (Single Head) Connectivity.....                                  | 16        |
| Parallel Weld (Dual Head) Connectivity .....                                  | 17        |
| Step (Indirect) Welding Connectivity.....                                     | 18        |
| SENSOR CABLES.....                                                            | 19        |
| <b>Software Installation .....</b>                                            | <b>22</b> |
| SYSTEM REQUIREMENTS .....                                                     | 22        |
| INSTALLING WM-INSPECT .....                                                   | 22        |
| CONNECT CENTRAL SERVER PC NETWORK PORT .....                                  | 28        |
| INSTALLING WM-INSPECT SERVER SOFTWARE USING THE INSTALLATION WIZARD .....     | 29        |
| CONFIGURING THE MONITOR TO POINT TO THE CENTRAL SERVER .....                  | 49        |
| UPGRADING THE CENTRAL SERVER SOFTWARE .....                                   | 51        |
| MOVING AN NRWM MONITOR TO ANOTHER NETWORK OR SERVER.....                      | 54        |
| Change the IP network or range.....                                           | 54        |
| Change IP range and central server.....                                       | 62        |
| Change IP range on same server.....                                           | 62        |
| Change IP range for PC running WM-Inspect on a different central server.....  | 63        |
| Changing central server for PC running WM-Inspect with the same IP range..... | 63        |
| DISABLE POWER SAVING IN WINDOWS 10.....                                       | 64        |
| Disable power saving for other versions of Windows.....                       | 65        |
| <b>Basic Functions.....</b>                                                   | <b>66</b> |
| POWER UP .....                                                                | 66        |
| POWER DOWN .....                                                              | 66        |
| LOG IN.....                                                                   | 66        |
| SHUTDOWN .....                                                                | 66        |

|                                                             |           |
|-------------------------------------------------------------|-----------|
| <b>Updating Software and Firmware.....</b>                  | <b>67</b> |
| UPGRADE VIA REMOTE ACCESS .....                             | 67        |
| UPGRADE USING AWT-SUPPLIED FILES .....                      | 67        |
| <b>CHAPTER 3 OPERATIONS.....</b>                            | <b>68</b> |
| <b>Starting a Session .....</b>                             | <b>68</b> |
| LAUNCH THE SOFTWARE .....                                   | 68        |
| <b>Navigating the WM-Inspect Interface .....</b>            | <b>72</b> |
| MENU BAR, TOOL BARS, STATUS BAR.....                        | 72        |
| Menu Bar .....                                              | 72        |
| Tool Bar/Status Bar .....                                   | 75        |
| HELP.....                                                   | 76        |
| Tool Bars.....                                              | 76        |
| Status Bar .....                                            | 79        |
| SCREEN DOCKERS .....                                        | 80        |
| Overview of Screen Docker Windows .....                     | 80        |
| Live – Weld Monitor Graph Window .....                      | 81        |
| Aggregation Data Window.....                                | 83        |
| Aggregation Data Graph .....                                | 85        |
| Monitor / System Status / Display Settings Window .....     | 89        |
| Navigating the Screen Docker.....                           | 90        |
| <b>Working with WM-Inspect: Operators .....</b>             | <b>93</b> |
| Run Screen versus Monitor Screen.....                       | 93        |
| Configure Aggregation Data (Run Screen) .....               | 95        |
| Configure Live-Weld Display Settings (Monitor Screen) ..... | 97        |
| <b>Monitor Mode.....</b>                                    | <b>98</b> |
| MONITOR SCREEN DOCKER.....                                  | 98        |
| OPERATING IN MONITOR MODE.....                              | 98        |
| DISPLAY SETTINGS.....                                       | 99        |
| Display Graph: Display Options.....                         | 100       |

|                                                                            |            |
|----------------------------------------------------------------------------|------------|
| Display Graph: Graph Options .....                                         | 103        |
| Digital Filter .....                                                       | 107        |
| Analog Filter.....                                                         | 107        |
| JOB WINDOW.....                                                            | 108        |
| SYSTEM STATUS.....                                                         | 108        |
| Status Tab.....                                                            | 108        |
| Error Tab.....                                                             | 110        |
| Counters Tab .....                                                         | 110        |
| Error Event List .....                                                     | 111        |
| <b>Run Mode.....</b>                                                       | <b>112</b> |
| <b>Working with WM-Inspect: Engineers.....</b>                             | <b>113</b> |
| Developer Screen .....                                                     | 113        |
| CREATE A WELD MONITOR SCHEDULE .....                                       | 114        |
| Schedule Settings Header.....                                              | 114        |
| Schedule Wizard .....                                                      | 115        |
| New/Save As .....                                                          | 116        |
| DEVELOPING A WELD MONITOR SCHEDULE .....                                   | 118        |
| Designate Principal Channels .....                                         | 118        |
| Define Capture Settings .....                                              | 120        |
| Set Limit Lines for channels .....                                         | 121        |
| Set Displacement Limits.....                                               | 124        |
| Set Aggregation Data.....                                                  | 128        |
| DATA DISPLAY .....                                                         | 132        |
| Select Data to Be Displayed For Each Channel .....                         | 132        |
| Define Input Sources and Filters .....                                     | 133        |
| SET LCD DISPLAY .....                                                      | 146        |
| HISTORICAL SEARCH.....                                                     | 147        |
| Tools for comparing new weld data to existing data (Historical Data) ..... | 147        |
| SYS ADMIN .....                                                            | 149        |

|                                           |            |
|-------------------------------------------|------------|
| CALIBRATION .....                         | 149        |
| JOB .....                                 | 151        |
| Change Job or SKU number .....            | 151        |
| <b>Additional Development Tools .....</b> | <b>152</b> |
| MONITOR TOOL.....                         | 152        |
| Monitor Settings Tab .....                | 153        |
| Aggregation Windows Tab .....             | 155        |
| LCD Display Tab .....                     | 156        |
| Fieldbus Tab .....                        | 157        |
| TRIGGER TOOL .....                        | 159        |
| STATUS TOOL .....                         | 160        |
| Status Tab.....                           | 160        |
| Error Tab.....                            | 161        |
| Counter Tab.....                          | 161        |
| DISPLAY TOOL .....                        | 163        |
| JOB TOOL.....                             | 163        |
| COUNTER TOOL .....                        | 164        |
| ENVELOPE TOOL .....                       | 164        |
| Envelope Limit Wizard.....                | 164        |
| Envelope Wizard Buttons .....             | 168        |
| HISTORY TOOL .....                        | 169        |
| Search Parameters .....                   | 169        |
| Search Results.....                       | 171        |
| Edit Schedule .....                       | 176        |
| Export to Excel .....                     | 183        |
| AGGREGATION TOOL .....                    | 183        |
| CALIBRATION TOOL .....                    | 183        |
| Calibration by Source .....               | 185        |
| <b>Administrative Functions.....</b>      | <b>187</b> |

|                                                                   |            |
|-------------------------------------------------------------------|------------|
| ADD/REMOVE A USER .....                                           | 187        |
| Add a User .....                                                  | 187        |
| Remove a User .....                                               | 188        |
| Password Reset .....                                              | 188        |
| <b>CHAPTER 4 MAINTENANCE .....</b>                                | <b>189</b> |
| <b>Section I: Overview .....</b>                                  | <b>189</b> |
| HARDWARE .....                                                    | 189        |
| SOFTWARE .....                                                    | 189        |
| CALIBRATION .....                                                 | 189        |
| <b>CHAPTER 5 ETHERNET/IP COMMUNICATIONS .....</b>                 | <b>190</b> |
| <b>Section I: Introduction .....</b>                              | <b>190</b> |
| SETTING THE FIELDBUS IP ADDRESS .....                             | 190        |
| HOW THE ETHERNET/IP DATA IS SCANNED .....                         | 192        |
| <b>Section II: EtherNet/IP Configurations .....</b>               | <b>193</b> |
| DATA MODELS .....                                                 | 197        |
| <b>APPENDIX A TECHNICAL SPECIFICATIONS .....</b>                  | <b>201</b> |
| Physical Dimensions .....                                         | 201        |
| Technical Parameters .....                                        | 202        |
| <b>APPENDIX B ELECTRICAL AND DATA CONNECTIONS .....</b>           | <b>206</b> |
| <b>Overview .....</b>                                             | <b>206</b> |
| PLC I/O CONNECTOR .....                                           | 207        |
| I/O MODES .....                                                   | 210        |
| DISPLACEMENT CONNECTORS .....                                     | 213        |
| WCO- WELD CUTOFF .....                                            | 214        |
| ROGOWSKI COIL – CURRENT MEASUREMENT .....                         | 214        |
| FORCE CHANNELS (F1 AND F2) .....                                  | 215        |
| VOLTAGE CHANNELS (V1 AND V2) AND MISC. VOLTAGE CHANNEL (V3) ..... | 216        |
| WELD MONITOR PLC INTERFACE .....                                  | 217        |

|                                                                |            |
|----------------------------------------------------------------|------------|
| TIMING DIAGRAMS.....                                           | 218        |
| <b>APPENDIX C NRW Central Server RestAPI .....</b>             | <b>225</b> |
| <b>REST API – User Accessible .....</b>                        | <b>225</b> |
| DEFINITIONS .....                                              | 226        |
| REST API .....                                                 | 255        |
| INTERNAL APPLICATION AND SERVER ACCESS ONLY - DO NOT USE ..... | 255        |
| DEFINITIONS .....                                              | 256        |
| DATA STRUCTURE.....                                            | 272        |
| ERROR WORDS.....                                               | 328        |
| A. Instantaneous Limit Error Word .....                        | 328        |
| B. Aggregate Limit Error Word .....                            | 329        |
| C. PLC I/O Error Word.....                                     | 330        |
| <b>RestAPI End Point Calls – Tutorials.....</b>                | <b>331</b> |
| WORKING WITH POSTMAN GET REQUEST. ....                         | 337        |
| WORKING WITH POSTMAN POST REQUEST .....                        | 339        |

## List of Figures

|                                                                                         |     |
|-----------------------------------------------------------------------------------------|-----|
| Figure 1: WM-200A Monitor Front.....                                                    | 2   |
| Figure 2: WM-200A Back .....                                                            | 5   |
| Figure 3: WM-200A System Connectivity .....                                             | 6   |
| Figure 4: WM-Inspect (Developer Screen) .....                                           | 7   |
| Figure 5: Default Run Screen.....                                                       | 10  |
| Figure 6: Default Monitor Screen .....                                                  | 10  |
| Figure 7: Default Developer Screen .....                                                | 10  |
| Figure 8: WM-200A Dimensions .....                                                      | 13  |
| Figure 9: Monitor Connectors.....                                                       | 14  |
| Figure 10: Single Head, Opposed Weld Connectivity.....                                  | 16  |
| Figure 11: Parallel Weld (Dual Head) Connectivity.....                                  | 17  |
| Figure 12: Step (Indirect) Welding Connectivity.....                                    | 18  |
| Figure 13 - IP No Response message .....                                                | 28  |
| Figure 14: Networked RW Application Connection Settings .....                           | 71  |
| Figure 15: WM-Inspect Menu Bar.....                                                     | 72  |
| Figure 16: Password control window.....                                                 | 76  |
| Figure 17: WM-Inspect Status Bar .....                                                  | 79  |
| Figure 18 - Out of Sync Warnings .....                                                  | 80  |
| Figure 19: Live - Weld Monitor Graph (showing input from four principal channels) ..... | 81  |
| Figure 20: Aggregation Data Status Window.....                                          | 83  |
| Figure 21: Aggregation Data Window, Run Mode .....                                      | 84  |
| Figure 22: Aggregation Data Window in Developer or Monitor Mode .....                   | 85  |
| Figure 23: Aggregation Data Graph Window in Run Mode .....                              | 86  |
| Figure 24: Aggregation Data Graph in Developer Mode .....                               | 86  |
| Figure 25: Aggregation Data Graph Selection Tool .....                                  | 87  |
| Figure 26: Run Screen Docker .....                                                      | 90  |
| Figure 27: Monitor Screen Docker.....                                                   | 91  |
| Figure 28: Developer Screen Docker .....                                                | 91  |
| Figure 29: Monitor Screen Docker.....                                                   | 98  |
| Figure 30: Display Settings window.....                                                 | 99  |
| Figure 31: Display Options Window .....                                                 | 100 |

|                                                   |     |
|---------------------------------------------------|-----|
| Figure 32: Results List .....                     | 102 |
| Figure 33: Graph Options window .....             | 103 |
| Figure 34: Live Weld Monitor Graph Sub-menu ..... | 106 |
| Figure 35: Digital Filter window .....            | 107 |
| Figure 36: Analog Filter tab .....                | 107 |
| Figure 37: Job Window .....                       | 108 |
| Figure 38: Status Tab.....                        | 109 |
| Figure 39: Error Tab.....                         | 110 |
| Figure 40: Counters Tab .....                     | 110 |
| Figure 41: Weld Counter Window .....              | 111 |
| Figure 42: Error Event List .....                 | 111 |
| Figure 43: Run Mode Screen Docker .....           | 112 |
| Figure 44: Default Developer Screen Docker .....  | 113 |
| Figure 45: Schedule Settings Tool .....           | 114 |
| Figure 46: Schedule Settings Header.....          | 114 |
| Figure 47: Schedule Wizard .....                  | 115 |
| Figure 48: Displacements Window.....              | 124 |
| Figure 49: Aggregate Windows interface.....       | 138 |
| Figure 50: AC Mode Aggregation Window .....       | 138 |
| Figure 51: AC Mode Aggregation Window .....       | 139 |
| Figure 52: Aggregate window with ISO RMS .....    | 141 |
| Figure 53: Single phase alternating current.....  | 142 |
| Figure 54: Direct Current Weld Time.....          | 142 |
| Figure 55: Cool Time and Auto Mode.....           | 143 |
| Figure 56: Aggregate Limits Tab .....             | 145 |
| Figure 57: Engineer-Specific Links.....           | 152 |
| 58: Monitor Tool Window - Developer Screen .....  | 152 |
| Figure 59: Monitor Settings Tab .....             | 153 |
| Figure 60: LCD Display Tab .....                  | 156 |
| Figure 61: Fieldbus Tab .....                     | 157 |
| Figure 62: Status Tab.....                        | 160 |
| Figure 63: Error Tab.....                         | 161 |

|                                                          |     |
|----------------------------------------------------------|-----|
| Figure 64: Counters Tab .....                            | 161 |
| Figure 65: Weld Counter Window .....                     | 162 |
| Figure 66: Counter tab .....                             | 164 |
| Figure 67: Envelope Limit Wizard.....                    | 165 |
| Figure 68: Sample Envelope .....                         | 166 |
| Figure 69: Envelope Limit View Window .....              | 167 |
| Figure 70: Historical Data Search tool.....              | 169 |
| Figure 71: Historical Search Results Tab .....           | 171 |
| Figure 72: Search Results Window .....                   | 172 |
| Figure 73: Historical Search Results - Waveform Tab..... | 173 |
| Figure 74: Historical View Options .....                 | 174 |
| Figure 75: Historical Graph .....                        | 175 |
| Figure 76: Generate Envelope Limit.....                  | 178 |
| Figure 77: Edit Schedule - Aggregation Windows .....     | 180 |
| Figure 78: Export Data Window .....                      | 183 |
| Figure 79: User Account Controls window.....             | 187 |
| Figure 80: Add User Window .....                         | 187 |
| Figure 81: Fieldbus Connectors .....                     | 190 |
| Figure 82: Monitor Rear Panel Connectors .....           | 206 |