

# **PROGRAMMING MANUAL**

for

Tool Tip Point Control Function

MAZATROL FUSION 640MT 5X

MAZATROL FUSION 640MT Pro

MAZATROL FUSION 640M Pro

MAZATROL MATRIX

MANUAL No. : H734PB0026E

Serial No. :

*Before using this machine and equipment, fully understand the contents of this manual to ensure proper operation. Should any questions arise, please ask the nearest Technical Center or Technology Center.*

## **IMPORTANT NOTICE**

1. Be sure to observe the safety precautions described in this manual and the contents of the safety plates on the machine and equipment. Failure may cause serious personal injury or material damage. Please replace any missing safety plates as soon as possible.
2. No modifications are to be performed that will affect operation safety. If such modifications are required, please contact the nearest Technical Center or Technology Center.
3. For the purpose of explaining the operation of the machine and equipment, some illustrations may not include safety features such as covers, doors, etc. Before operation, make sure all such items are in place.
4. This manual was considered complete and accurate at the time of publication, however, due to our desire to constantly improve the quality and specification of all our products, it is subject to change or modification. If you have any questions, please contact the nearest Technical Center or Technology Center.
5. Always keep this manual near the machinery for immediate use.
6. If a new manual is required, please order from the nearest Technical Center or Technology Center with the manual No. or the machine name, serial No. and manual name.

Issued by Manual Publication Section, Yamazaki Mazak Corporation, Japan

# CONTENTS

Page

1	FUNCTION OUTLINE .....	1-1
2	DETAILED DESCRIPTION.....	2-1
2-1	Programming Format.....	2-1
2-2	Programming Coordinate System.....	2-2
2-2-1	Programming with a table coordinate system .....	2-2
2-2-2	Programming with a workpiece coordinate system .....	2-2
2-3	Startup.....	2-3
2-3-1	Independent startup .....	2-3
2-3-2	Startup with a motion command .....	2-3
2-4	Cancellation.....	2-4
2-4-1	Independent cancellation .....	2-4
2-5	Operation in the Mode of Tool Tip Point Control .....	2-5
2-5-1	Tool tip point control type 1 .....	2-5
2-5-2	Tool tip point control type 2 .....	2-6
2-6	Rate of Feed in the Mode of Tool Tip Point Control .....	2-6
2-7	Positions to be Programmed .....	2-7
3	RELATIONSHIP TO OTHER FUNCTIONS .....	3-1
3-1	Relationship to Other Preparatory Functions.....	3-1
3-2	On the Use of the MAZATROL Tool Data (for the M640M Pro and MATRIX(Series M)) .....	3-4
3-3	Change between Tip Control and Length Offset (for the M640M Pro Only) .....	3-5



3-3-1	Immediate change between G43.4/G43.5 and G43/G44 (without using G49).....	3-5
3-3-2	POSITION counting displayed on the screen .....	3-6
3-3-3	Change between G43.4/G43.5 and G43/G44 by means of G49.....	3-7
3-4	Restrictions.....	3-8
4	RELATED PARAMETERS .....	4-1
4-1	For the M640MT 5X.....	4-1
4-2	For the M640MT Pro .....	4-3
4-3	For the M640M Pro.....	4-5
4-4	For the MATRIX.....	4-7