

NT-series

Support Tool for Windows Ver.4.6

OPERATION MANUAL

OMRON

NT-series

Support Tool for Windows Ver. 4.6

Operation Manual

Revised October 2001

TABLE OF CONTENTS

SECTION 1

Introduction to the Support Tool	1
1-1 What Is Support Tool?	2
1-2 Equipment Necessary for Using the Support Tool	5
1-3 General Configuration of the Support Tool	6
1-4 Basic Operation Flow	20
1-5 Menu Chart	21
1-6 Usable Hardware Combinations	25

SECTION 2

Setting Up the Support Tool	29
2-1 Before Installing the Software	30
2-2 Installing the Support Tool	30

SECTION 3

Support Tool Starting-up and Exiting Procedure and File Operation	37
3-1 Starting-up and Exiting the Support Tool	38
3-2 User Interface	39
3-3 Operation of Screen Data (Application) File	44

SECTION 4

Application Manager	63
4-1 What Is the Application Manager?	64
4-2 Operating the Application Manager	65

SECTION 5

Screen Types	77
5-1 Types of Screens, Common Dialog Box Settings and Operations	78
5-2 Standard Screen	88
5-3 Continuous/Overlapping Screens	89
5-4 Window/Keyboard Screens	92
5-5 Extended Screen	97
5-6 Occurrence History Screen	98
5-7 Frequency History Screen	99
5-8 Host Connect Screen (System Initializing Screen)	99
5-9 Password Screen	100
5-10 Menu Screen	101
5-11 Print Format Screen	101
5-12 Programming Console Screen	101
5-13 Device Monitor Screen	102
5-14 Contrast and Brightness Adjustment	102

SECTION 6

Element Operating Procedures	103
6-1 Common Operation	105
6-2 Fixed Display	136
6-3 Alarm	159
6-4 Data Input	171
6-5 Lamps	192
6-6 Numeral Display	200

TABLE OF CONTENTS

6-7	Character String Display	204
6-8	Touch Switches	207
6-9	Graphs	224
6-10	Registering Created Elements (Symbol Manager Operation)	250
6-11	Recipe Screen Element	259
SECTION 7		
Memory Table Setting		265
7-1	Common Operation	266
7-2	Numeral Memory Table	275
7-3	Character String Memory Table (String Table)	281
7-4	Bit Memory Table	286
7-5	Extended I/O Input Table	291
7-6	Extended I/O Output Table	295
7-7	I/O Comment Table	296
7-8	F-Key Input Notify Table	305
7-9	Mathematical Table	306
7-10	Recipe Table	311
SECTION 8		
Editing Graphic Data		321
8-1	Image Editor	322
8-2	Library Editor	334
8-3	Mark Editor	342
SECTION 9		
Example Screens		349
9-1	Example Screen Configuration	350
9-2	Operation Flow	355
9-3	Creating the Sample Data	358
SECTION 10		
Quick Reference		405
10-1	Quick Reference	406
SECTION 11		
Data Communications with a PT		427
11-1	Preparation for Data Communications with a PT and Data Communication Procedure ...	428
11-2	Communication Setting at the Support Tool	430
11-3	Sending (Downloading) the Data	431
11-4	Receiving (Uploading) Data	434
11-5	Receiving (Uploading) the History Record	437
11-6	Setting and Reading the Date and Time	438
SECTION 12		
Making Reports		441
12-1	Report Types	442
12-2	Printing Reports	449
12-3	Displaying the Print Image (Preview)	456
12-4	Outputting the Screen Image	457

TABLE OF CONTENTS

Appendices

M	Data Conversion	461
N	System Installer Operation	485
O	NT Transfer Utility	489
P	Translation Support Utility	497
Q	Tables of Functions of PT Models	513
R	Limits on Numbers of Elements	533
S	New Functions of Support Tool Ver.4.1	537
T	New Functions of Support Tool Ver.4.6	539
U	Error Messages	541
V	Shortcut Keys	547
W	Connecting Cable Specifications	549
X	Keycode Tables and Conversion Rule	551