

**AIR BLOW SYSTEM
TYPE V·EX**

OPERATOR'S MANUAL

CE

AMADA

CONTENTS

	Introduction.....	v
	Safety rules.....	vi
Part I	Description	
	Air/Oil circuit diagram	I-2
	System diagram.....	I-3
	General installation diagram	I-4
	Specifications	I-6
	Operation.....	I-8
	Programming	I-10
Part II	Controls	
	Control box panel	II-2
Part III	Operation	
	Setting and changing control data	III-2
	Time chart for tool identification (sensing on) time and air blow time	III-5
	Flowchart for operational check.....	III-6
	Tool identification pressure switch	III-7
	Setting air pressure and oil discharge rate of air-operated equipment.....	III-10
	Timing and method of adding oil.....	III-13
Part IV	Tooling	
	Precautions in use of air blow tools	IV-2

(Continued on next page.)

Part V	Precautions	
	Precautions in use and maintenance of automatic tool identification function.....	V-2
	Dedicated oils.....	V-6
	Precautions in use of air blow system for APELIO series.....	V-9
Part VI	Control circuit & control parts	
	Electric circuit diagrams	VI-2
	Electronic control parts.....	VI-7
Part VII	Spare parts	
	Spare parts	VII-2
	List of spare parts.....	VII-3
Part VIII	Appendix	
	Serial number plate and CE Mark plate.....	VIII-2
	Declaration of Conformity.....	VIII-3