


CHEVALIER®

OPERATING MANUAL PARTS LIST

HAND FEED SURFACE GRINDER

SIZE:618M

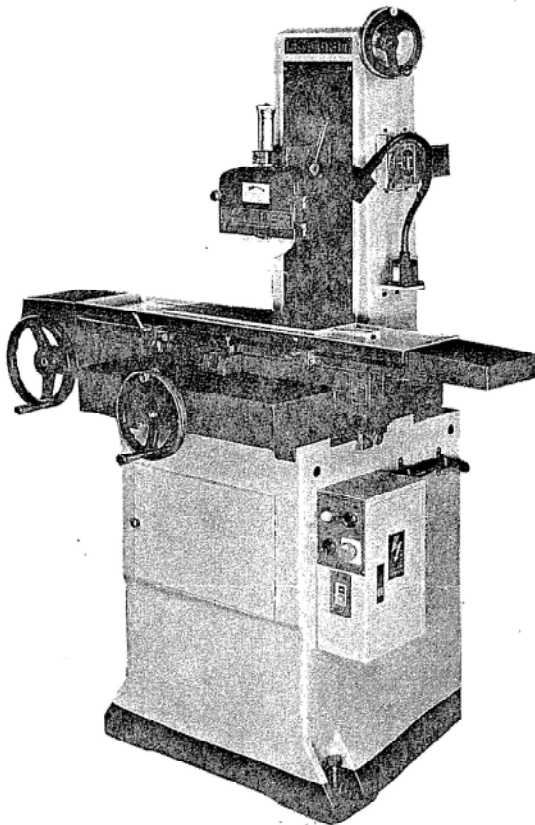

FALCON MACHINE TOOLS CO., LTD.

P. O BOX 21, TA-YA, TAICHUNG, TAIWAN 409, R.O.C

NO. 20-5, LUNG SHAN LANE, CHUNG CHING RD.

TA-YA, TAICHUNG, TAIWAN 409, R.O.C

TELEX: 56116 FALCON CABLE: FALCON FENG YUAN

TEL (045) 661115, 662211-3

FAX (045) 668877

CONTENTS

1. Specification.....	1
2. Machine parts.....	2
3. Moving & installation.....	3
3-1 Lifting.....	3
3-2 Cleaning.....	3
3-3 Working table installation.....	4
3-4 Levelling.....	6
3-5 Spindle motor revolution test.....	7
3-5-1 Connect the main power.....	7
3-5-2 Test the motor revolution.....	7
4. Operation.....	7
4-1 Setting of workpiece.....	7
4-2 Feeding operation.....	7
5. Grinding wheel.....	8
5-1 Select the wheel.....	8
5-2 How to select the wheel.....	10
5-2-1 Standard grinding wheel marking.....	10
5-2-2 Grinding wheel selection guide table.....	11
5-3 Balance of grinding wheel.....	12
5-4 Mounting and dismounting of the grinding wheel.....	13
5-4-1 Sound test of the grinding wheel.....	13
5-4-2 Procedure for dismounting the spindle wheel.....	13
5-5 Running test.....	13
5-6 Dress grinding wheel.....	14
5-6-1 Installing and using the diamond dresser.....	14
6. Safety.....	16
7. Lubrication & maintenance.....	16
7-1 Lubrication.....	16
7-2 Installation of motor coupling.....	17
7-3 Replacing timing belt.....	18
7-4 Slide ways and ball bearings lubrication.....	19
7-5 Maintenance.....	19

8. Abnormal grinding and trouble shooting.....	20
9. Parts list.....	
9-1 Grinding spindle system.....	21
9-2 Column system.....	25
9-3 Table system.....	30
9-4 Saddle system.....	33
9-5 Base system.....	38
9-6 Lubricating system.....	41