

AIDA

HYPROMAX PRESS

HMX

INSTRUCTION MANUAL

These operating instruction are intended for internal use
by our customers.
Transmission to third parties in whole or part is forbidden.

 
AIDA ENGINEERING, LTD.

CONTENTS OF MANUAL

SPECIFICATIONS



For better understanding the performance of the press.



SAFETY



 
For correct use and safe operation of the press.



OPERATION



Procedure for operation and adjustment of the press.




MAINTENANCE



Inspection and maintenance, and troubleshooting of the press.

 
APPENDIX



INSTRUCTION MANUAL FOR FEEDERS,
AND ACCESSORIES AND COMPONENTS

TABLE OF CONTENTS

  
A SPECIFICATIONS

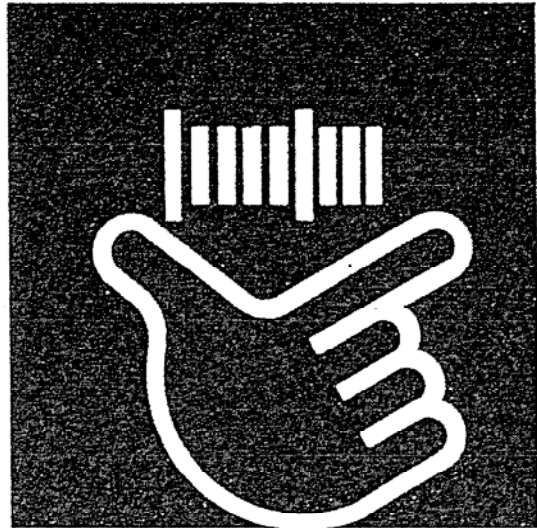


 
1.	SPECIFICATIONS	A1-1
1.1	SPECIFICATIONS	A1-1
1.2	THREE ELEMENTAL CAPACITIES OF PRESS	A1-1
2.	CHARTS	A2-1
2.1	STROKE-TONNAGE CHART	A2-1
3.	OVERALL DIMENSIONS	A3-1
4.	ARRANGEMENT OF MAJOR COMPONENTS	A4-1

TABLE OF CONTENTS

 B SAFETY

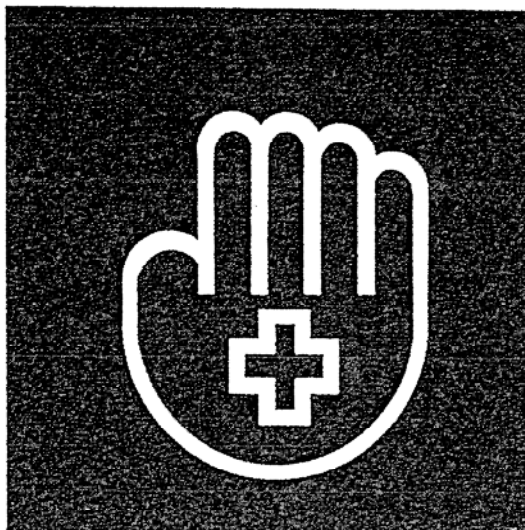


1. SAFETY PRECAUTIONS	B1-1
1.1 START-UP INSPECTION	B1-2
1.2 OTHER SAFETY PRECAUTIONS	B1-3
2. WARNING PLATES	B2-1
3. SAFETY DEVICES	B3-1
3.1 GUARD	B3-1
3.2 LIGHT CURTAIN (OPTION)	B3-2
3.3 EXTERNAL CIRCUIT BREAKER	B3-3
4. SAFETY PROCEDURE DURING ADJUSTMENT	B4-1

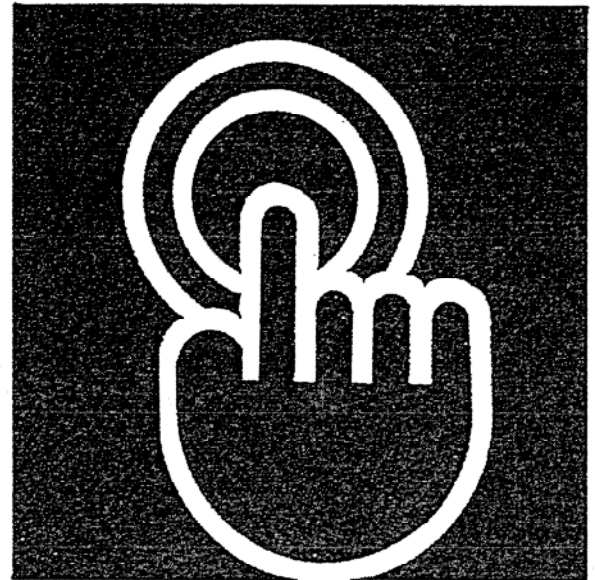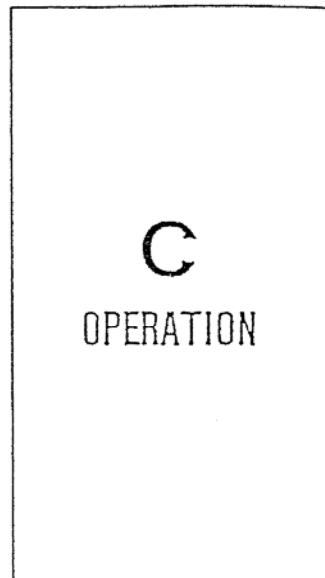

1.	PREPARATION FOR OPERATION	C1-1
1.1	AIR	C1-1
1.2	POWER SOURCE	C1-1
2.	ROUTINE CHECK	C1-1
3.	OPERATION	C3-1
3.1	OPERATION OF PRESS	C3-1
3.2	OPERATION MODE OF PRESS	C3-4
3.2.1	"CONT"MODE	C3-4
3.2.2	"SINGLE"MODE	C3-4
3.2.3	"INCH"MODE	C3-5
3.2.4	"MICRO"MODE	C3-6
4.	OPERATION OF AUXILIARY EQUIPMENT	C4-1
4.1	PRODUCT NUMBER COUNTER	C4-1
4.2	PRESET COUNTER	C4-2
4.3	AIR BLOW	C4-3
5.	OPERATING PANEL	C5-1
5.1	OPERATING PANEL AND TWO-HAND CONTROL PEDESTAL	C5-1
5.1.1.1	PRESS GENERAL	C5-1
5.1.1.2	GROUPED LAMPS	C5-5
5.1.1.3	PRESS SIDE OPERATING PANEL	C5-8
5.2	OPERATING OF KEY LOCK SWITCH	C5-11
5.3	SYMBOLS AND MARKS OF SWITCHES	C5-12
6.	ADJUSTMENT	
6.1	SLIDE HEIGHT ADJUSTMENT	C6-1
6.2	(RESERVED)	
6.3	(RESERVED)	
6.4	DIE LIFTER(OPTION)	C6-4
6.5	DIE CLAMPER(OPTION)	C6-7

 D MAINTENANCE

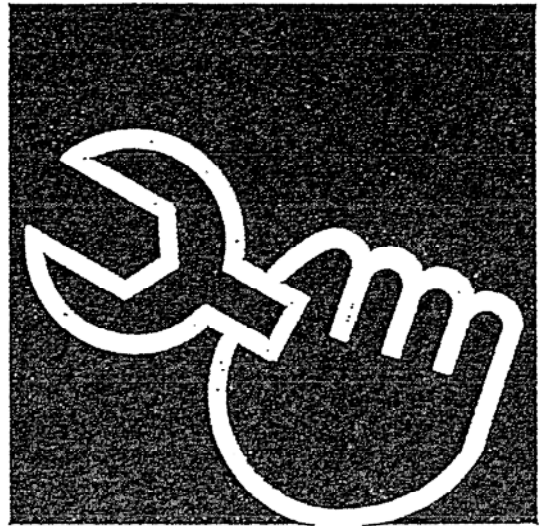

1. PERIODIC INSPECTION	D1-1
1.1 MONTHLY (EVERY 250 HOURS) INSPECTION AND MAINTENANCE	D1-1
1.2 SEMIANNUAL (EVERY 1500 HOURS) INSPECTION AND MAINTENANCE	D1-3
1.3 ANNUAL (EVERY 3000 HOURS) INSPECTION AND MAINTENANCE	D1-4
1.4 THREE-YEAR INSPECTION (OVERHAUL)	D1-5
2. LUBRICATION	D2-1
2.1 OIL FILLING AND DRAINING PORTS	D2-1
2.2 REPLACEMENT OF OIL IN OIL TANK	D2-4
3. CONSTRUCTION AND MAINTENANCE	D3-1
3.1 SLIDE GIB	D3-1
3.2 BALANCER	D3-2
3.3 V-BELTS	D3-4
3.4 REPLACEMENT OF V-BELTS	D3-5
4. MAINTENANCE OF ELECTRIC COMPONENTS	D4-1
4.1 MEGGER TEST (INSULATION RESISTANCE MEASUREMENT)	D4-1
5. MAINTENANCE OF PNEUMATIC AND HYDRAULIC COMPONENTS	D5-1
5.1 AUTO-DRAIN FILTER	D5-1
5.2 CLUTCH AND BRAKE SOLENOID VALVE	D5-2
5.3 LINE FILTER	D5-4
6. TROUBLESHOOTING	D6-1
6.1 TROUBLESHOOTING	D6-1
7. INSTALLATION AND TRANSPORTATION	D7-1
7.1 INSTALLATION	D7-1
7.2 TRANSPORTATION	D7-1
8. CONNECTION OF SHOP AIR LINE	D8-1
9. CONNECTION OF POWER LINE	D9-1
10. DRAWINGS	D10-1