

DA-56

Reference Manual Operation of Version V1.2

Table of contents

1. Operation overview and general introduction	1.1
1.1. The control unit	1.1
1.2. Operation modes	1.2
1.3. Frontpanel	1.3
1.4. Programming mode	1.5
1.4.1. The main menu	1.5
1.4.2. Help text	1.7
1.4.3. Listbox functionality	1.9
1.5. Graphical programming	1.10
1.5.1. Control keys	1.10
1.6. Network option	1.12
1.7. Software versions	1.13
1.8. Delem Limited warranty	1.13
2. Product drawing/Product edit for 2-dimensional products	2.1
2.1. Introduction	2.1
2.2. Delete an angle/line or insert an angle	2.5
2.3. Precision selection	2.5
2.4. Large Radius: Bumping	2.7
2.5. Assignments	2.8
• Parameter explanation	2.10
2.6. Bend sequence	2.11
• Restoring a bend sequence	2.16
• Minimum bending length	2.17
• Machine/Tool selection	2.18
• Turn indication	2.18
• Screen data	2.19
• Function- and control keys summary	2.19
• Store	2.21
2.7. Variants programming	2.21
3. Data preparation/Data edit	3.1
3.1. Introduction	3.1
• Parameters explanation	3.2
• Connecting CNC programs	3.3
3.2. Bend programming	3.4
• Axis functions	3.5
• Parameter explanation	3.6
• Parameter explication (second page)	3.10
• List of bendings of the prepared program	3.15
• Ending data preparation/data editing	3.17
3.3. Special edit function	3.18
3.4. Edit notes	3.18

4. Product selection	4.1
4.1. Introduction	4.1
• Expanded directory	4.3
• Search function	4.4
4.2. Directories	4.5
5. Programming of tools	5.1
5.1. Introduction	5.1
5.2. Programming of Punches	5.1
5.2.1. The punch menu	5.1
• Edit punch drawing	5.2
• Drawing orientation of the punch on the screen	5.4
5.2.2. Specific Punch Data	5.4
5.3. Programming of bottom dies	5.7
5.3.1. The die menu	5.7
• Edit die drawing	5.8
5.3.2. Specific die data	5.10
5.4. Machine upper side and lower side	5.13
5.5. Saving/loading of tools	5.16
6. Products and tools back-up	6.1
6.1. Introduction	6.1
6.2. Directory navigation	6.2
6.3. Product backup	6.3
6.4. Tool back-up	6.5
7. Program Constants	7.1
7.1. Introduction	7.1
7.2. General	7.1
7.3. Materials	7.4
7.4. Program settings	7.5
7.5. Computation settings	7.8
7.6. Production settings	7.9
7.7. Serial ports	7.13
7.8. Backgauge dimensions	7.14
7.9. Event logging	7.17
7.9.1. Parameters	7.17
7.9.2. Explanation	7.19
7.10. Maintenance	7.21
8. Manual mode	8.1
8.1. Introduction	8.1
• Parameter Explanation	8.3
• Zoom function	8.6
8.2. Manual operation of the axes	8.7
• To teach	8.8

9. Automatic / step by step mode	9.1
9.1. Introduction	9.1
• Parameters	9.3
• Corrections	9.4
• Functions screen	9.6
• Graphical visualisation	9.6
• Zoomed values	9.7
• Bumping correction	9.8
• Manual positioning	9.9
9.2. Step mode	9.10
A. Parameter index	A.1