

[INSTRUCTION MANUAL]

Sodick CNC - WIRE CUT EDM

AQ325L, AQ535L, AQ535LH

MACHINE TOOL
LN1W

Sodick

Ver. 1.3

Table of contents

TABLE OF CONTENTS

PAGE	
1-1	PRECAUTIONS
1-1	SECTION 1 GENERAL DESCRIPTION.....
1-1	1. MACHINE INSTALLATION PLACE.....
1-2	2. SAFETY GUIDELINES.....
1-3	3. ELECTRICAL CONNECTION.....
2-1	SECTION 2 SPECIFICATIONS AND MACHINE INSTALLATION LAYOUT.....
2-1	1. AQ325L
2-1	1.1 MACHINE SPECIFICATIONS (STANDARD TYPE).....
2-2	1.2 GENERAL VIEW OF MACHINE (STANDARD TYPE).....
2-3	1.3 FLOOR LAYOUT (STANDARD TYPE).....
2-4	1.4 MACHINE SPECIFICATIONS (CE TYPE).....
2-5	1.5 GENERAL VIEW OF MACHINE (CE TYPE).....
2-6	1.6 FLOOR LAYOUT (CE TYPE).....
2-7	1.7 WORK TABLE DIMENSIONS.....
2-8	2. AQ535L
2-8	2.1 MACHINE SPECIFICATIONS (STANDARD TYPE).....
2-9	2.2 GENERAL VIEW OF MACHINE (STANDARD TYPE).....
2-10	2.3 FLOOR LAYOUT (STANDARD TYPE).....
2-11	2.4 MACHINE SPECIFICATIONS (CE TYPE).....
2-12	2.5 GENERAL VIEW OF MACHINE (CE TYPE).....
2-13	2.6 FLOOR LAYOUT (CE TYPE).....
2-14	2.7 MACHINE SPECIFICATIONS (AQ535LH).....
2-15	2.8 GENERAL VIEW OF MACHINE (AQ535LH).....
2-16	2.9 FLOOR LAYOUT (AQ535LH).....
2-17	2.10 WORK TABLE DIMENSIONS.....
3-1	SECTION 3 MACHINE INSTALLATION, AND PIPING AND WIRING.....
3-1	1. INSTALLING THE MACHINE(STANDARD TYPE).....
3-3	2. INSTALLING THE MACHINE(CE TYPE).....
3-4	3. PIPING FOR SUPPLY TANK.....
3-5	4. CABLE CONNECTOR.....

Table of contents

	CONTENTS	PAGE
1.	1. EARTH CABLE CONNECTION.....	3-7
2.	2. TRANSPORTATION OF MACHINE.....	3-8
	SECTION 4 NC & MACHINE OPERATION PANEL AND DESCRIPTION OF MACHINE UNIT....	4-1
1.	1. NC & MACHINE OPERATION PANEL.....	4-1
2.	2. WIRE FEED UNIT.....	4-5
3.	3. WIRE EJECTION UNIT.....	4-7
4.	4. WIRE GUIDE SECTION (CONDUCTIVITY).....	4-8
5.	5. DISCHARGE CABLE CONNECTION DIAGRAM.....	4-10
6.	6. WATER SUPPLY TANK.....	4-11
6-1.	6-1. Construction of water supply tank.....	4-11
6-2.	6-2. Piping Diagram.....	4-13
6-3.	6-3. Air Diagram.....	4-15
7.	7. INTERLOCK FUNCTION.....	4-17
	SECTION 5 MACHINE OPERATION.....	5-1
1.	1. SAFETY GUIDELINE.....	5-1
2.	2. PREPARATION FOR OPERATION.....	5-3
3.	3. THREADING THE WIRE ELECTRODE.....	5-5
4.	4. SETTING THE WIRE FEED SPEED.....	5-7
5.	5. SETTING THE WIRE TENSION.....	5-9
6.	6. ALIGNING THE WIRE VERTICALLY.....	5-10
7.	7. MOUNTING A WORKPIECE.....	5-12
8.	8. WORKPIECE CLAMP FIXTURE.....	5-14
9.	9. USING CLAMP FIXTURES.....	5-15
10.	10. ADJUSTING THE HEIGHT OF GUIDE SECTION.....	5-16
11.	11. ADJUSTING FLUSHING PRESSURE.....	5-17
12.	12. WATER GUARD OF WIRE GUIDE.....	5-18
13.	13. WATER RESISTIVITY METER, RESISTIVITY SENSOR AND DEIONIZER.....	5-19
13.1.	13.1 Setting of the Water Resistivity Meter.....	5-19
13.2.	13.2 Operation Example.....	5-19
	SECTION 6 INSPECTION AND MAINTENANCE.....	6-1
1.	1. CHECK LIST.....	6-1

Table of contents

	PAGE
1-1 Daily Inspection.....	6-1
1-2 Weekly Inspection.....	6-2
1-3 Monthly and Every 3-month Inspection.....	6-3
2. MAINTENANCE PROCEDURE.....	6-4
2-1 AWT Pipe.....	6-4
2-2 Ion-exchange Resin.....	6-5
2-3 Changing the Position of Conductivity Piece.....	6-7
2-4 Inside the Wire Guide.....	6-8
2-5 Aspirator.....	6-10
2-6 Suction Pipe.....	6-11
2-7 Flow Meter.....	6-12
2-8 AWT Cutter.....	6-13
2-9 Guide Shaft (Upper Guide of the Machine Equipped with AWT).....	6-14
2-10 Air-hydro Unit.....	6-15
2-11 Water Resistivity Sensor.....	6-16
2-12 Guide C1.....	6-17
2-13 AWT Guides.....	6-18
2-14 Sealing Sections.....	6-19
2-15 Maintenance of "Work stand"	6-23
3. CONSUMABLE PARTS LIST.....	6-24