

Precision Machine Tools

Cincom F12/F16

PRECISION MACHINERY DIVISION

MAINTENANCE MANUAL

シチズン時計株式会社 精機事業部
CITIZEN WATCH CO., LTD.

MAINTENANCE MANUAL FOR Cincom F12/F16

CONTENTS

I.	GENERAL	I-1
1.	GENERAL	I-2
2.	PRECAUTIONS IN READING	I-2
II.	MACHINE STRUCTURE	II-1
1.	OUTLINE	II-2
2.	NAMES OF DIFFERENT SECTIONS OF MACHINE	II-2
3.	SPINDLE AND GUIDE BUSHING	II-4
4.	SPINDLE AND CHUCK DEVICE	II-5
5.	CROSS SECTION OF MIDDLE OF HEAD STOCK	II-6
6.	MAIN SPINDLE INDEXING SYSTEM	II-7
7.	C-AXIS CONTROLLER	II-8
8.	TOOL REST FEED MECHANISM	II-9
9.	CROSS SLIDE	II-10
10.	CROSS SECTION OF MIDDLE OF CROSS SLIDE	II-11
11.	TOOL SPINDLE DRIVING MECHANISM	II-12
12.	HYDRAULIC EQUIPMENT	II-13
13.	LUBRICANT UNIT	II-17
III.	PERIODIC CHECKUP	III-1
1.	PERIODIC CHECKUP	III-2
2.	LUBRICATION	III-10
3.	CONSUMABLE PARTS AND THEIR REPLACEMENT	III-15
4.	ADJUSTMENT	III-20
IV.	TROUBLESHOOTING	IV-1
1.	TROUBLESHOOTING	IV-2

2. ALARM	IV-9
3. ABNORMALITY OF MACHINE SECTIONS	IV-20
4. TROUBLESHOOTING OF HYDRAULIC DRIVE SYSTEM	IV-34
V. PARTS LIST	V-1
VI. WIRING DIAGRAM	VI-1
VII. LADDER DIAGRAM	VII-1
VIII. I D X - 10 A	1