

CNC LATHE

SOARER L270E/L270

OPERATION & MAINTENANCE MANUAL
(2nd Edition)

Pub.No. TL6E11-U001-R2 Dec. 2000



TATUNG-OKUMA

TABLE OF CONTENTS

	<u>PAGE</u>
SECTION 1 MACHINE SPECIFICATIONS	1
1. SPECIFICATION TABLE	1
2. DIMENSIONAL DRAWINGS	3
3. NAME PLATE LOCATION DRAWINGS	4
4. MAIN UNIT	7
SECTION 2 HANDLING AND INSTALLATION OF MACHINE	8
1. GUIDE TO SELECT A INSTALLATION SITE	8
2. CARE IN HANDLING A PRECISION MACHINE	9
2-1. Machine Lifting	10
2-2. Precaution for Lifting	12
2-3. Rolling	12
2-4. Component parts for lifting	12
3. FOUNDATION REQUIREMENTS	13
3-1. General Precautions for Building a New Foundation	13
4. GENERAL PROCEDURE FOR INSTALLATION	14
4-1. Procedure for Installation	14
4-2. Precautions for Installation	14
5. LEVELING THE MACHINE	15
5-1. Leveling Procedure	15
6. FOUNDATION PLAN	16
7. POWER REQUIREMENT	18
7-1. Inspection of Cable Connection	18
7-2. Electrical Work	19
8. LUBRICATION OIL REQUIRED AT INSTALLATION	20
9. DISMANTLING	20
SECTION 3 MACHINE OPERATION	21
1. BEFORE STARTING OPERATIONS	21
1-1. NC Operation	21
1-2. Setting Zero Offsets	38
1-3. MC User Parameter	50
1-4. Alarm	54

	<u>PAGE</u>
1-5. Operation of Safety Interlock	55
2. MACHINE OPERATION	56
2-1. Hydraulic Unit.....	56
2-2. Selection of Spindle Motor Speed.....	59
2-3. Hydraulic Chuck.....	63
2-4. Manual Turret Operation.....	73
2-5. Cutting Soft Top Jaws of Power Chuck	74
2-6. Hydraulic Tailstock Operation	76
2-7. Cautions on Operating the Turret	80
2-8. Interlock Function.....	80
2-9. After Completion of A Day's Operation	80
2-10. Manually Operated Chuck.....	80
SECTION 4 INSPECTION AND MAINTENANCE OF MACHINE.....	89
1. LUBRICATION.....	90
1-1. Spindle Lubrication System	93
1-2. Slide way Lubrication System.....	93
2. ADJUSTING CENTRALIZED LUBRICATION UNIT.....	94
2-1. Adjusting Pump Delivery.....	94
2-2. Maintenance and Countermeasure.....	94
2-3. Other Remarks	94
3. CLEANING COOLANT PUMP.....	94
3-1. Maintenance	95
4. TENSIONING BELTS.....	95
4-1. Spindle Drive Belts.....	97
4-2. Timing Belt for Z-axis Servo Motor	98
4-3. Timing Belt for X-axis Servo Motor	99
5. OTHER MAINTENANCE ITEMS	100
5-1. Adjusting the Turret Rotation Speed.....	100
5-2. Alignment of Headstock.....	101
5-3. Adjustment of Tapered Gibs on Saddle Cross-slide.....	102
5-4. Cautions on Checking the X-axis Ball Screw and Related Parts.....	103

	<u>PAGE</u>
6. TROUBLESHOOTING FOR SIMPLE MECHANICAL TROUB	104
6-1. Trouble with Headstock	104
6-2. Trouble with Turret.....	104
6-3. Others	110
7. MACHINE RESTARTING	111
8. CHIPS COLLECTION AND REMOVAL.....	113
9. TROUBLE OF BLOCKAGE.....	113
 SECTION 5 SPARE PARTS LIST	 114
1. HYDRAULICS.....	114
2. ELECTRICALS (ON MACHINE).....	115
3. CONSUMABLE ITEMS.....	116
 SECTION 6 TECHNICAL DATA	 117
1. TOOLING SYSTEM.....	117
2. V8 TURRET DIMENSIONS	118
3. TOOLHOLDER DIMENSIONS	119
4. TOOL INTERFERENCE DIAGRAM	121
5. WORKING RANGE DIAGRAM.....	122
6. DIMENSION OF SPINDLE NOSE.....	126
7. HYDRAULIC SOLID CHUCK AND CYLINDER.....	127
8. HYDRAULIC HOLLOW CHUCK AND CYLINDER.....	128
9. HYDRAULIC TAILSTOCK.....	129
10. HYDRAULIC CIRCUIT DIAGRAM.....	131
11. PIPING DIAGRAM.....	132
12. SUB-CONTROL PANEL.....	133
13. CHIP PAN.....	134
14. PLC ALARM LIST.....	135