

KA Counter

KA Counter for Linear Scale Units

User's Manual

Read this User's Manual thoroughly
before operating the instrument. After reading,
retain it close at hand for future reference.

Mitutoyo

CONTENTS

CONVENTIONS USED IN THIS MANUAL.....	i
SAFETY PRECAUTIONS	iii
WARRANTY	iv
CONTENTS.....	v
1 INTRODUCTION	1-1
1.1 Outline	1-1
1.2 Name and Function of Each Part	1-2
1.2.1 Main unit.....	1-2
1.2.2 Display.....	1-4
1.2.3 Name and function of keys for the standard counter.....	1-5
1.2.4 Name and function of keys for the lathe counter	1-6
1.2.5 3-axis counter	1-8
2 SETUP.....	2-1
2.1 Opening the Package	2-1
2.2 Installation.....	2-2
2.3 Connecting to the Counter	2-3
3 BASIC OPERATION	3-1
3.1 Explanatory Notes	3-1
3.2 Basic Operations in the Standard Counter	3-2
3.2.1 Turning ON/OFF the power.....	3-2
3.2.2 Counting and displaying.....	3-4
3.2.3 Switching the coordinate.....	3-5
3.2.4 Zero-set	3-5
3.2.5 Preset	3-5
3.2.6 Saving and recalling a datum point using the scale reference point (When the AT100 series is connected.)	3-8
3.2.7 Setting the machine origin using the AT700 series	3-11
3.2.8 Datum setting, centering and measuring with the touch signal probe (Possible only when the AT100 series is connected.).....	3-13
3.2.9 Halving the display.....	3-16
3.2.10 Bolt-hole circle machining.....	3-17
3.2.11 Pitch machining.....	3-21
3.2.12 Zero approach machining.....	3-24
3.2.13 Changing the unit of measurement	3-25
3.2.14 Addition mode	3-26
3.3 Outline of the Lathe Counter	3-28
3.3.1 Setting parameters for the lathe counter	3-28
3.3.2 Lathe counter operation modes	3-28
3.3.3 Configuration of coordinates	3-29
3.3.4 Setup for tool offset	3-29

3.3.5	Count mode.....	3-31
3.3.6	Zero-setting/Presetting	3-32
3.3.7	Tool number switch	3-32
3.3.8	A/I coordinate switch.....	3-33
3.3.9	Halving the display	3-35
3.3.10	Zero approach machining.....	3-36
3.3.11	Changing the unit of measurement.....	3-38
3.3.12	Saving and recalling a datum point using the scale reference point.....	3-38
3.3.13	Setting the machine origin using the AT100 series	3-38
4	PARAMETERS.....	4-1
4.1	Overview of Parameters	4-1
4.2	Types of Parameters	4-2
4.2.1	Parameters set for each axis	4-2
4.2.2	Parameters common to all axes	4-6
4.2.3	Special parameters	4-8
4.2.4	Display resolution when used for the AT100 series	4-10
4.3	Parameter Settings.....	4-13
4.3.1	Checking the parameter settings	4-13
4.3.2	Setting parameters for each axis	4-14
4.3.3	Setting parameters common to all axes	4-16
4.3.4	Parameters for the lathe counter mode	4-18
4.3.5	Initializing the internal memory	4-19
4.3.6	Display contents and parameters in the addition mode.....	4-20
5	MAINTENANCE	5-1
5.1	Troubleshooting	5-1
5.1.1	Error messages.....	5-1
5.1.2	Error messages in the addition mode.....	5-1
5.1.3	Wrong key operation	5-3
5.1.4	Troubleshooting.....	5-3
5.2	Daily Maintenance for the Counter	5-4
6	SPECIFICATIONS.....	6-1
6.1	Main Unit	6-1
6.2	Connector Specifications	6-2
6.3	Accessories	6-2
6.3.1	Standard accessories.....	6-2
6.3.2	Optional accessories.....	6-3
6.4	Precautions for Using the Code Out Unit.....	6-3
6.5	Precautions for Using the Linear Scale Adapter	6-3
6.6	Conformance to CE	6-4