

Code No. 11046148
Rev. C

BRIDGEPORT EZ-TRAK SX

PROGRAMMING AND OPERATIONS MANUAL

November 1993

Bridgeport®

BRIDGEPORT MACHINES, INC.

TABLE OF CONTENTS

SECTION	PAGE
Chapter 1	
EZ-TRAK SX HARDWARE	
EZ-Trak SX Overview	1-1
Operator's Control Box	1-2
CRT Front Panel	1-4
Chapter 2	
EZ-TRAK SX TUTORIAL	
Introduction	2-1
Cutting a Part on the EZ-Trak SX	2-1
Beginning the Part	2-2
Cutting the Contour	2-3
Cutting the Slots	2-5
Cutting the Circular Pocket	2-6
Chapter 3	
STARTING UP THE EZ-TRAK SX	
Introduction	3-1
Before Starting the EZ-Trak SX	3-1
Turning on the EZ-Trak SX	3-1
Homing the Axes	3-2
Jogging the Axes	3-3
Manual Movement	3-3
The Z Axis	3-4
Reading the CRT Display	3-4
Chapter 4	
EZ-TRAK SX BASIC OPERATION	
Basic Operation	4-1
Key Functions	4-2
0 PWR OFF	4-2
1 JOG X	4-2
2 DO EVNT	4-2
3 MOV ABS	4-2
4 JOG Y	4-3
5 EDIT	4-3
6 MOV INC	4-3
7 SET XYZ	4-3
8 MDI	4-3
9 UTILS	4-3
INC / ABS	4-4
MM / IN	4-4
X RES	4-4
Y RES	4-4
. SAVE PT	4-4
+ RUN	4-4

Chapter 5

EZ-TRAK SX DRO & JOG MODE

ABS	5-1
INC	5-1
IN to MM or MM to IN	5-1
JOG	5-2
STEP -	5-2
STEP +	5-3
X RES	5-3
Y RES	5-3
0 EXIT	5-3
1 SET XYZ	5-3
2 MOV INC	5-3
3 MOV ABS	5-3
. SAVE PT	5-3
+ JOG X or JOG Y	5-4

Chapter 6

EZ-TRAK SX DO EVENT MODE

DO EVENT Operation	6-1
Part Program Coordinate System	6-1
Absolute vs. Incremental Programming	6-2
Using the DO EVENT Commands	6-3
GEOMETRY HELP	6-3
CALCULATOR	6-3
0 EXIT	6-4
1 POS / DR	6-4
2 M LINE	6-5
3 M ARC	6-7
4 FACE	6-8
5 M RECT	6-9
6 M CIRC	6-14
7 DR ROW	6-17
8 DR BOX	6-18
9 DR BC	6-18
. M SLOT	6-20
Executing DO EVENT Commands	6-21

Chapter 7

EZ-TRAK SX MDI MODE

MDI Programming	7-1
Connective Events	7-2
Cutter Compensation	7-6
Rules for Using Cutter Compensation	7-7
Starting Up Cutter Compensation	7-9
Corner Rounding	7-10
Exiting Cutter Compensation	7-11
Subprogram	7-12
Blends	7-12
Repeat	7-15
Transform	7-16
Program Stop.....	7-19
Slot Arc	7-20
Face	7-21
View Part	7-22

Chapter 8

EZ-TRAK SX EDIT MODE

EDIT Mode	8-1
0 EXIT	8-2
/ MOD F	8-2
+ PASTE	8-2
1 INS LN	8-2
2 RESEQ	8-2
3 GOTO N	8-3
4 REV LN	8-3
5 COPY	8-3
6 SET N	8-3
7 DEL LN	8-3
8 CUT	8-3
9 ERASE	8-3
* VIEW PART	8-4

Chapter 9

EZ-TRAK SX RUN MODE

Run Mode.....	9-1
Key Functions	9-1
0 EXIT	9-1
1 AUTO	9-1
2 BLOCK.....	9-1
3 FIND SEQ	9-2
. RES PGM	9-2
FD OVR	9-2
LOAD	9-2
VIEW	9-3
/ SET Z=0	9-3
* EDIT	9-3

Chapter 10

EZ-TRAK SX UTILS

UTILS	10-1
<1> COMPLETE DISKCOPY	10-1
<2> COPY files from EZTRAK to FLOPPY DISK	10-2
<3> COPY files from FLOPPY DISK to EZTRAK	10-2
<4> DELETE FILES.....	10-3
<5> VIEW contents of file ON FLOPPY DISK	10-4
<6> VIEW contents of file ON EZTRAK	10-5
<7> SEND or RECEIVE files.....	10-5
COMMUNICATING WITH THE EZ-TRAK SX	10-7

Chapter 11

EZ-TRAK SX TEACH MODE

SAVE PT	11-1
1 MILL	11-1
2 DRILL	11-2
+ DO PTS	11-2
. MOV PTS	11-2
* UNDO	11-2
INTOF	11-2
CRCNTR	11-2
PTS	11-2

Chapter 12

EZ-TRAK SX PREVIEW MODE

INTRODUCTION	12-1
THE PREVIEW SCREEN	12-1
0 EXIT	12-2
1 AUTO	12-2
2 BLOCK	12-2
3 RES PGM	12-2
4 CLR SCR	12-2
5 RESIZE	12-2
6 RESTORE	12-2
7 EDIT	12-2
USING PREVIEW	12-3

Appendix A

EZ-TRAK SX SYSTEM OVERVIEW A-1

Appendix B

AXES AND COORDINATES B-1

Appendix C

PROGRAMMING EXAMPLE C-1

Appendix D

USING THE CALCULATOR D-1

Appendix E

GEOMETRY HELP E-1

Appendix F

FEEDS & SPEEDS CALCULATOR F-1