

INSTRUCTION MANUAL

PSG - 84DX

ACC - 84DX

ACC - 16·32DX

Okamoto

PART I
OPERATION MANUAL

PART II
TROUBLE-SHOOTING

PART III
PART-LIST

CONTENTS

	Page
SPECIFICATIONS	1
SIZE OF THE MACHINE	
a. Floor space for the machine	2
b. Size (1) Front view	3
(2) Side view	4
c. Grinding range	5
PRINCIPAL PARTS OF THE MACHINE	
a. Front view	6
b. Rear view	7
INSTALLATION	
a. Lifting of the machine	8
b. Shipping clamps	9
c. Cleaning of the machine	10
d. Levelling of the machine	10
e. Connection to power supply	11-12
LUBRICATION	
a. Filling of hydraulic and lubrication oil	13
b. Lubrication of the spindle bearing and cross feed ballscrew	13
c. Lubrication system of slideways	13
d. Schematic diagram of lubrication system	14
OPERATING INSTRUCTIONS	
a. Functions of switches on the operation control panel	15-18
b. Table longitudinal movement	19
c. Saddle cross movement	20-21
d. Mounting of the grinding wheel	22
e. Balancing of the grinding wheel	23-24
f. Dressing operation of the grinding wheel	25
g. Checking before grinding operation	26-27
h. Trial running of the machine	28-29
i. Traverse automatic grinding I (step grinding)	30-33
j. Traverse automatic grinding II (crisscross grinding)	34
k. Plunge automatic grinding	35
l. Grinding faults and their corrections	36-37
MAINTENANCE	
a. Hydraulic circuit diagram	38
b. Hydraulic pressure adjustment	39
c. Adjustment of lubrication oil to slideways	40
d. Adjustment of table reversing motion	40
REFERENCE DRAWINGS	
a. Diamond tool	41
b. Wheel flange	42
c. Washer	43
d. Adjustable balancing weight	44
e. Balancing arbor	45

CONTENTS

	Page
1. Operation and alarm LEDs on controller DX-4B	1-4
2. Definition of symbols used in flow charts	5
3. Trouble-shooting procedures	
3-1. Trouble-shooting	6
3-2. Trouble-shooting for table start-and-stop faults	7
3-2-A. The table does not move	7-8
3-2-B. The table does not stop when the table stop button (PB4) is pressed	9
3-2-C. The table does not stop when sparkout has completed	10
3-2-D. Sparkout function does not complete the selected number of cycles	10
3-3. Trouble-shooting for table movement faults	11
3-3-A. The table does not move to the left (a malfunction of the automatic reversal)	11
3-3-B. The table does not move to the right (a malfunction of the automatic reversal)	12-14
3-4. Trouble-shooting for saddle movement faults	15
3-4-A. The saddle does not move	15
3-4-B. The saddle advances forward only	16
3-4-C. The saddle moves backward only	17
3-5. Trouble-shooting for vertical movement faults	18
3-5-A. The wheel head does not move upward or downward	18
3-5-B. The wheel head does not move upward	19
3-5-C. The wheel head does not move downward	20
3-5-D. Manual feed by the pulse generator is not possible	21-22
3-6. Trouble-shooting for grinding operation faults	23
3-6-A. Grinding operation is not possible	23-24
3-6-B. Fine down feed is not possible	25-26
3-7. Trouble-shooting for motor faults	27
3-8. Trouble-shooting for the faults of electromagnetic chuck ...	28-29
3-9. Trouble-shooting for the faults of display unit XDS-2	30
3-9-A. Abnormal numerical display	30
3-9-B. Entering Data cannot be shown on the display	31
3-9-C. Resetting the display is not possible	32
3-10. Causes and remedies for alarms	33-34
3-11. Replacement of a solenoid valve (SOL)	35

4.	Reference drawings	
4-1	Electrical diagrams	36-40
4-2	Electrical connections of the operation control panel.....	41
4-3	Description for the connector pins No. 1	42
4-4	Description for the connector pins No. 2.....	43
4-5	Power box components layout.....	44
4-6	Function of components on XDS-2B	45
4-7	Electrical components layout on the machine	46
4-8	Specifications of the automatic demagnetizing controller MA-3A	47-48
5.	Supplement	
5-1	Definition of electrical component symbols	49-51

PART-LIST



CONTENTS

	Page
How to order replacement parts	1
Front view	2
Rear view	3
Column assembly	4-5
Spindle unit assembly	6-7
Wheel guard assembly	8-9
Table assembly	10-11
Saddle assembly	12-13
Cross feed cover and rear splash guard assemblies	14-15
Cross feed unit assembly	16-17
Hydraulic valve body assembly	18-19
Hydraulic pump unit and vertical feed assemblies	20-21
Machine base assembly	22-23