

Operator's manual

TruBend Series 5000

5050 - 5320

Edition: **10/2006**

Table Of Contents

Chapter 1 Safety

1.	For your safety.....	1- 3
2.	Terminology.....	1- 5
3.	Operational safety.....	1- 6
3.1	Intended use.....	1- 6
3.2	Guidelines concerning electromagnetic compatibility.....	1- 7
3.3	Measures to be taken by the user/operator.....	1- 8
	Warning plates and warning instructions.....	1- 8
	Machine signs.....	1- 9
	Signs on the machine in the USA.....	1-10
	Operator training.....	1-12
	Duty of care when handling the machine.....	1-13
	Procedure in the event of malfunctions or emergencies.....	1-14
	Using the replacement parts and working materials provided for the machine.....	1-15
	Water protection.....	1-16
3.4	Measures taken by the manufacturer.....	1-16
4.	Overview of hazards.....	1-21
5.	Workplaces.....	1-23
6.	Authorized personnel.....	1-24
7.	Safe operation, work safety instructions.....	1-25
8.	Confirmation.....	1-28

Chapter 2 Installation conditions for TruBend 5050 - 5320

1.	Installation site.....	2- 4
1.1	Arrangement and space requirements of the machines.....	2- 4
1.2	Floor requirements.....	2- 4
1.3	Load indications.....	2- 6
1.4	Ambient conditions.....	2- 7
2.	Electricity supply.....	2- 8
2.1	Power supply (grid network).....	2- 8
2.2	Connected loads, fuse protection, frequency.....	2- 8
2.3	Teleservice.....	2-10
2.4	Network link.....	2-10
3.	Compressed air supply.....	2-11
4.	Operating material.....	2-12
5.	Transportation.....	2-13
5.1	Customer preparations for transporting the machines to the installation site.....	2-13
	Preparing auxiliary tools.....	2-14
5.2	Unloading machine and transporting it to installation site.....	2-14
	Checking for damage in transit.....	2-15
	Unloading and transporting the machine.....	2-15
6.	Planning aid	2-18

Chapter 3 Description

1.	Machine concept.....	3- 3
2.	Technical data.....	3- 4
2.1	Machines.....	3- 4
2.2	Backgauges.....	3- 6
2.3	Machine axes.....	3- 7
3.	The most important components.....	3- 9
3.1	Machine body.....	3- 9
3.2	Upper drive and hydraulic system.....	3-10
3.3	Beam.....	3-10
3.4	Control panel.....	3-11
3.5	Backgauge.....	3-12
3.6	Operator console.....	3-14
3.7	Tool clamp.....	3-15
3.8	Support bracket.....	3-16
3.9	Crowning.....	3-17
4.	Tools.....	3-18
4.1	Tools from TRUMPF.....	3-18

5.	Options.....	3-20
5.1	Hydraulic tool clamp.....	3-20
5.2	CNC crowning.....	3-20
5.3	CNC I axis.....	3-20
5.4	4-axis backgauge.....	3-21
5.5	5-axis backgauge.....	3-21
5.6	6-axis backgauge.....	3-22
5.7	Additional gauge fingers.....	3-24
5.8	TRUMPF BendGuard.....	3-24
	Magnetic plate functions.....	3-28
	Indicator lamp on the transmitter	3-29
	Safety information.....	3-29
5.9	Light curtain (only USA).....	3-30
5.10	Foot switch.....	3-31
5.11	ACB angle sensor.....	3-33
5.12	Bending aid.....	3-34
	Supplementary options.....	3-35
5.13	Network connection.....	3-37
5.14	BendMaster interface.....	3-37
5.15	BendMaster.....	3-38

Chapter 4 Operation

1.	Description of the operating controls.....	4- 6
1.1	Control console.....	4- 6
1.2	Control panel.....	4-10
1.3	User interface.....	4-11
	User interface structure.....	4-11
1.4	Control elements on the switch cabinet.....	4-15
2.	Switching on the machine	4-16
2.1	Releasing E-STOP.....	4-16
2.2	Switching on the machine.....	4-16

3.	Switching the machine off.....	4-19
3.1	Switch off the machine if malfunctions occur.....	4-19
3.2	Switching off the machine	4-20
4.	Optoelectronic protective devices.....	4-21
4.1	Checking the TRUMPF BendGuard laser beam.....	4-21
4.2	Checking the Merlin light curtain (only USA).....	4-22
4.3	Operating the machine without optoelectronic protective device.....	4-23
5.	Manual operation.....	4-24
5.1	Defining the basic parameters.....	4-24
5.2	Defining other parameters.....	4-25
5.3	Teaching axis positions.....	4-26
5.4	Performing a collision check.....	4-27
5.5	Producing a single bend.....	4-27
5.6	Programming fast seaming.....	4-28
6.	Setup.....	4-30
6.1	Adapting axis positions.....	4-30

7.	Programming.....	4-31
7.1	Programming bending parts (NC programming).....	4-31
	Creating bending parts.....	4-31
	Programming tool stations.....	4-31
	Programming bendings.....	4-33
	Programming fast seaming.....	4-35
	Modifying a bending part (NC program).....	4-36
	Teaching axis positions.....	4-37
7.2	Programming bending parts with graphics.....	4-37
	Creating a new bending part with TruTops Bend (Profile editor).....	4-38
	Modifying programmed bending parts graphically.....	4-39
7.3	Loading bending part.....	4-40
	Loading bending parts.....	4-40
7.4	Managing bending parts.....	4-42
	Importing/exporting bending part.....	4-42
	Deleting a bending part.....	4-43
	Renaming bending part.....	4-44
7.5	Checking.....	4-45
	Performing program checks.....	4-45
7.6	Switching to TruTops CAD (optional).....	4-46
	Opening TruTops CAD.....	4-46
	Displaying user interface.....	4-46
7.7	Switching to TruTops.....	4-47
	Opening TruTops Bend.....	4-47
	Displaying user interface.....	4-47
8.	Production.....	4-48
8.1	Loading the bending part.....	4-48
8.2	Creating a production plan.....	4-49
8.3	Displaying the setup plan.....	4-50
8.4	Defining corrections.....	4-51
8.5	Configuring the safety mode.....	4-52
8.6	Calibrating the ACB angle sensor.....	4-52
8.7	Production of bending part.....	4-52
8.8	Entering the bending angle correction for compensating parallelism.....	4-53
8.9	Producing bending part with fast seaming.....	4-53
8.10	Displaying production data.....	4-54

9.	Technology	4-55
9.1	Creating tools.....	4-55
	Converting DXF drawings.....	4-55
	Adding tools.....	4-56
9.2	E-Shop.....	4-58
	Procuring bending tools and replacement parts online.....	4-58
9.3	Program parameters.....	4-58
	Modifying default values.....	4-58
	Switching the functions on and off.....	4-59
	Switching off the collision check.....	4-59
	Activating fast seaming.....	4-59
	Automatically switching off the hydraulics of the machine after standstill time.....	4-60
9.4	PDF viewer.....	4-61
	Displaying PDF files with the PDF viewer.....	4-61
10.	Maintenance & commissioning.....	4-62
10.1	Entering options code.....	4-62
10.2	User management.....	4-63
	Defining users.....	4-63
10.3	Bending program storage unit.....	4-65
	Defining directories for bending programs.....	4-65
	Defining criteria for the management of the bending programs (classification).....	4-66
11.	Diagnostics.....	4-67
11.1	Displaying current messages.....	4-67
11.2	Displaying all messages.....	4-68
12.	Help.....	4-69
13.	Additional settings.....	4-70
13.1	Defining the mute point	4-70



Chapter 5 Setting work

1.	Gauge fingers.....	5- 3
1.1	Positioning attachable gauge fingers.....	5- 3
1.2	Positioning micrometer gauge fingers (2-axis backgauge).....	5- 4
1.3	Adjusting micrometer gauge fingers.....	5- 5
1.4	Repositioning gauge fingers.....	5- 5
2.	Loading tools.....	5- 6
2.1	Loading upper tools.....	5- 6
	Loading upper tools with manual tool clamp.....	5- 6
	Loading upper tools with hydraulic tool clamp.....	5- 7
2.2	Loading lower tools.....	5- 8
	Loading lower tools with hydraulic tool clamp.....	5- 8
3.	Optoelectronic protective devices.....	5- 9
3.1	TRUMPF BendGuard.....	5- 9
	Removing BendGuard.....	5- 9
	Installing BendGuard.....	5-10
	Adjusting BendGuard for fast seaming.....	5-12
3.2	Light curtain.....	5-16
	Merlin light curtain (only USA).....	5-16
4.	Bending aid.....	5-18
4.1	Setting the bending aid	5-18
5.	Foot switch.....	5-23
5.1	Connecting the foot switch in the switch cabinet.....	5-23
5.2	Activating the foot switch at the user interface.....	5-23
5.3	Using the foot switch in the program.....	5-23

Chapter 6 Maintenance

1.	General guidelines.....	6- 3
2.	Maintenance Overview.....	6- 4
3.	Lubrication.....	6- 6
3.1	Overview.....	6- 6
3.2	Maintenance Instructions.....	6-11
	Hydraulic system.....	6-11
	Threaded rod for lower tool displacement (I axis).....	6-16
	Table plate of the press table.....	6-17
	Recirculating ball unit of X axis.....	6-18
	Recirculating ball unit of R axis.....	6-19
	Recirculating ball unit of Z axis.....	6-21
	Ball screw.....	6-23
	Racks (X and Z axes).....	6-24
	Gauge finger brake plate.....	6-25
4.	Hydraulic system.....	6-26
4.1	Overview.....	6-26
4.2	Maintenance Instructions.....	6-27
	Tool holder at top and bottom with hydraulic tool clamp.....	6-27
	Hydraulic hose lines.....	6-27
5.	Pneumatic system.....	6-29
5.1	Overview.....	6-29
5.2	Maintenance Instructions.....	6-30
	Compressed air filter with water separator.....	6-30

6.	Mechanical system.....	6-32
6.1	Overview.....	6-32
6.2	Maintenance Instructions.....	6-33
	Upper tool holder for manual tool clamp.....	6-33
	Attachment rail for gauge finger displacement (Z axis).....	6-33
	Support bracket guide.....	6-33
	Toothed belt of R axis.....	6-34
	Springback of the beam.....	6-34
7.	Electrical equipment.....	6-38
7.1	Overview.....	6-38
7.2	Maintenance Instructions.....	6-39
	Safety switch for protective covers.....	6-39
	Electrical cables.....	6-39
	Switch cabinet.....	6-40
	Optoelectronic protective device.....	6-40
8.	Bending aid (optional).....	6-41
8.1	Overview.....	6-41
8.2	Maintenance Instructions.....	6-42
	Toothing (curve segment/pinion).....	6-42
	Prismatic guide.....	6-43
	Sliding surfaces, X/Y slide.....	6-44
	Toothing X offset.....	6-45
	Sliding surfaces, Y/Z slide.....	6-46
	Tool height adjusting spindle.....	6-47

Chapter 7 ACB angle sensor (optional)

1.	ACB angle sensor construction.....	7- 4
2.	Measuring principle.....	7- 6
2.1	Automatic angle correction process.....	7- 8
2.2	Tilt angle monitoring.....	7-10

3.	Technical data.....	7-11
4.	Sensor tools and sensor disks.....	7-12
4.1	Selecting sensor tools and sensor disks.....	7-12
4.2	Sensor tools, suitable sensor disk pairs.....	7-14
	Illustrations of the sensor disk pairs.....	7-19
4.3	Required side lengths.....	7-21
5.	Changing sensor disks.....	7-23
5.1	Bending the installation aid.....	7-23
5.2	Removing sensor disks.....	7-24
5.3	Installing sensor disks.....	7-26
5.4	Cleaning sensor tools.....	7-27
6.	ACB bending methods.....	7-28
6.1	Identified bending.....	7-28
	Programming single identified bends (manual operation).....	7-29
	Programming identified bending (programming).....	7-29
6.2	Reference bending (angle-controlled).....	7-30
	Replacing correction values with arithmetic mean values.....	7-30
	Programming reference bending operations.....	7-31
6.3	Learned bending (position-controlled).....	7-32
	Programming learned bending.....	7-32
6.4	Regulated bending (manual input of the springback angle; angle-controlled).....	7-34
	Programming single regulated bending operations (manual operation).....	7-34
	Programming regulated bending operations (programming).....	7-34
7.	ACB at the control system.....	7-36
7.1	Activating ACB at the control system.....	7-36
7.2	Registering ACB modules.....	7-36
7.3	Selecting sensor tools.....	7-36
7.4	Assigning sensor tools to the ACB modules.....	7-38
7.5	Displaying ACB data.....	7-40
	Displaying current ACB data.....	7-40
	Activating and displaying current ACB record.....	7-40
	Displaying all ACB recordings.....	7-41

8.	Bending with one sensor.....	7-42
8.1	Programming single bends with one sensor (manual operation).....	7-42
8.2	Programming bends with one sensor (programming).....	7-43
9.	Bending with two sensors.....	7-45
9.1	Programming single bends with two sensors (manual operation).....	7-45
9.2	Programming bends with two sensors (programming).....	7-47
10.	Bending with three sensors.....	7-49
10.1	Programming single bends with three sensors (manual operation).....	7-49
10.2	Programming bends with three sensors (programming).....	7-51
11.	Calibrating the angle sensor.....	7-52
11.1	Calibrating the ACB angle sensor.....	7-52