

INSTRUCTION MANUAL

MACHINING CENTER

MC1210

FANUC SYSTEM 11M



MAKINO MILLING MACHINE CO., LTD.

No. 5M509-85

CONTENTS

SPECIFICATIONS	A
INSTALLATION	B
OPERATION	C
SPINDLE HEAD	D
OPERATION . AUTOMATIC TOOL CHANGER	E
PALLET CHANGER	F

SPECIFICATIONS

CONTENTS

	Page
1. MACHINE DESCRIPTION	A - 1
1.1 Views & Identification of Parts	A - 1
1.2 Machine and Main Machine Parts	A - 2
2. SPECIFICATIONS	A - 7
2.1 Machine	A - 7
3. OPTIONAL ATTACHMENTS & ACCESSORIES	A - 11
4. MAJOR DIMENSIONS	A - 13
4.1 Side Views & Dimensions	A - 13
4.2 Top View & Dimensions	A - 14

INSTALLATION

CONTENTS

	Page
1. LOCATION	B - 1
2. FOUNDATION	B - 2
3. LIFTING	B - 4
3.1 Lifting the Front Bed.....	B - 4
3.2 Lifting the Rear Bed, Column, etc	B - 5
3.3 Lifting the Coolant Tank	B - 6
3.4 Lifting the NC Unit	B - 6
3.5 Lifting the Lift-up Chip Conveyor (Optional)	B - 7
4. INSTALLATION	B - 8
4.1 Machine Body	B - 8
4.2 Mounting the Y-axis Motor, etc.	B - 9
5. PIPING & POWER CABLE CONNECTIONS	B - 11
5.1 Hydraulic Piping	B - 11
5.2 Air & Lubrication Piping	B - 12
5.3 Air Source Connection	B - 13
5.4 Coolant Piping	B - 14
5.5 Automatic Spindle Lubricant Temperature Regulator	B - 15
5.6 Power Cable Connections	B - 16
5.7 Power Source Connection	B - 19
6. FILLING OILS	B - 21
6.1 Lubricants	B - 21
6.2 Hydraulic Oil	B - 26
6.3 Coolant	B - 27
7. FINAL PREPARATION	B - 28
7.1 Removing Rust-Preventive Oil	B - 28
7.2 Removing Clamps	B - 28
8. TURNING POWER ON	B - 33
9. LEVELING THE MACHINE	B - 34

OPERATION

CONTENTS

	Page
1. IDENTIFICATION OF MACHINE PARTS	C - 1
2. SAFETY PRECAUTIONS	C - 2
3. CONTROLS	C - 4
3.1 Machine Circuit Breaker Switch	C - 4
3.2 Main Control Panel	C - 6
3.3 Manual Pulse Generator (Optional)	C - 14
4. EMERGENCY STOP & AUTOMATIC POWER SHUTOFF	C - 16
4.1 Emergency Stop	C - 16
4.2 Resetting an Emergency Stop	C - 16
4.3 Automatic Power Shutoff	C - 17
5. OPERATION STARTING PROCEDURE	C - 18
6. MANUAL OPERATION	C - 22
6.1 Feeding Axes	C - 22
6.2 Zero Return	C - 23
7. AUTOMATIC OPERATION	C - 25
7.1 Preparing for an Automatic Operation	C - 25
7.2 Starting an Automatic Operation	C - 26
7.3 Interrupting & Restarting an Automatic Operation	C - 27
8. MACHINE SHUTDOWN	C - 30

SPINDLE HEAD

CONTENTS

	Page
1. IDENTIFICATION OF MACHINE PARTS	D - 1
2. SUBCONTROL PANEL	D - 2
3. MANUAL SPINDLE ROTATION	D - 3
4. SPINDLE OPERATION	D - 4
4.1 Manual Tool Mounting/Dismounting	D - 4
4.2 Spindle Speed	D - 5
4.3 Spindle Start/Stop	D - 6
4.4 Spindle Override	D - 6
4.5 Spindle Orientation	D - 7
5. SPINDLE HEAD LUBRICATION	D - 8

MACHINING CENTER

MC1210

OPERATION . AUTOMATIC TOOL CHANGER

CONTENTS

	Page
1. IDENTIFICATION OF MAIN MACHINE PARTS	E - 1
2. CONTROLS	E - 2
2.1 ATC Control Panel	E - 2
2.2 Manual ATC Control Panel	E - 4
2.3 Toolpot	E - 8
2.4 Tool Weight & Size	E - 8
3. OPERATION	E - 10
3.1 Tool Number Registration	E - 10
3.2 Tool Search	E - 11
3.3 Returning Tool in Pot	E - 14
3.4 Automatic Tool Change	E - 14
4. RETURNING AFTER EMERGENCY STOP	E - 18

PALLET CHANGER

CONTENTS

	Page
1. INTRODUCTION	F - 1
2. PALLET CAPACITY	F - 2
3. PALLET CHANGING PROCESS	F - 3
3.1 Loading a Pallet on Table	F - 3
3.2 Unloading a Pallet from Table	F - 5
4. CONTROL PANELS	F - 6
4.1 Control Panel	F - 6
4.2 Manual Control Panel	F - 8
5. OPERATION	F - 12
5.1 Programs	F - 12
5.2 Operating Procedure	F - 13