

PROGRAMMING

Ed.1998.10
MTV-310/350
YASNAC J100M

MAINTENANCE

CONTENTS OF MAINTENANCE

Caution and request regarding cutting solutions

1.MAINTENANCE	1
2.PERIODIC MAINTENANCE	1
3.LUBRICATION	2
3.1 Recommended Grease	2
3.2 Refilling Parts (standard type)	2
3.3 Refilling Method	3
3.4 How to Use Lubricating System (optional)	4
4.ARRANGEMENT AND PART OF ELECTRICAL EQUIPMENT	5
4.1 Arrangement Drawing of Electrical Equipment	5
4.2 Electrical parts(Motor-related)	6
4.3 Detail Related to Each Axis LS	6
(1) X-axis	7
(2) Y-axis	7
(3) Z-axis	8
(4) ATC	8
4.4 Precautions for Handling Sensors	9
5.MEASUREMENT OF SPINDLE TAPER RUNOUT	10
6.CHECK AND ADJUSTMENT OF TOOL KNOCK-OUT DISTANCE	10
7.REPLACEMENT OF MEMORY BACK-UP BATTERY	12
7.1 Replacing Battery for NC CPU Unit	12
7.2 Replacing Battery for ATC Servo Pack	13
8.ARRANGEMENT DRAWING OF EQUIPMENT IN NC BOX	14
9.PNEUMATIC CIRCUIT	16
10.METHOD FOR DISASSEMBLE AND ASSEMBLE OF ROTARY SWITCH	17

TROUBLE SHOOTING

Ed.1999.01
MTV-310/350
YASNAC J100M

CONTENTS OF TROUBLESHOOTING

1.CHEKING ALARM DISPLAY	1
2.HOW TO OPEN NC BOX DOORS WITH POWER TURNED ON	2
3.TROUBLE OCCURRENCE AND CORRECTIVE ACTION	3
3.1 NC Alarms	4
3.2 Servo Alarms	6
3.3 Users Message	6
3.4 Sequence Alarms	7
3.5 Magazine Servo Related Alarms	22
3.6 Thermal Relay Trip Alarm	24
3.7 NC ALARM TABLE	25
3.8 List of Converter Faults	39
3.9 List of inverter faults	40
4.TROUBLESHOOTING	44

PARTS LIST

目 次
CONTENTS

Fig. 1	SPINDLE・SPINDLE DRIVE	スピンドル・スピンドルドライブ	1
Fig. 2	SPINDLE INNER AIR BLOW	スピンドルインナエアブロー	3
Fig. 3	X-AXIS-1/3	Xアキシス-1/3	5
Fig. 4	X-AXIS-2/3	Xアキシス-2/3	7
Fig. 5	X-AXIS-3/3	Xアキシス-3/3	9
Fig. 6	Y-AXIS-1/3	Yアキシス-1/3	11
Fig. 7	Y-AXIS-2/3	Yアキシス-2/3	13
Fig. 8	Y-AXIS-3/3	Yアキシス-3/3	15
Fig. 9	Z-AXIS-1/3	Zアキシス-1/3	17
Fig. 10	Z-AXIS-2/3	Zアキシス-2/3	19
Fig. 11	Z-AXIS-3/3	Zアキシス-3/3	23
Fig. 12	ATC UNIT-1/3	ATCユニット-1/3	25
Fig. 13	ATC UNIT-2/3	ATCユニット-2/3	27
Fig. 14	ATC UNIT-3/3	ATCユニット-3/3	31
Fig. 15	COOLANT	クーラント	33