

# MAINTENANCE MANUAL

for

## QUICK TURN 20/20HP

Manual No. : H341MA0013E

Serial No. :

Before using this machine and equipment, fully understand the contents of this manual to ensure proper operation. Should any questions arise, please ask the nearest Technical/Service Center.

### IMPORTANT NOTICE

1. Be sure to observe the safety precautions described in this manual and the contents of the safety plates on the machine and equipment. Failure may cause serious personal injury or material damage. Please replace any missing safety plates as soon as possible.
2. No modifications are to be performed that will affect operation safety. If such modifications are required, please contact the nearest Technical/Service Center.
3. For the purpose of explaining the operation of the machine and equipment, some illustrations may not include safety features such as covers, doors, etc. Before operation, make sure all such items are in place.
4. This manual was considered complete and accurate at the time of publication, however, due to our desire to constantly improve the quality and specification of all our products, it is subject to change or modification. If you have any questions, please contact the nearest Technical/Service Center.
5. Always keep this manual near the machinery for immediate use.
6. If a new manual is required, please order from the nearest Technical/Service Center with the manual No. or the machine name, serial No. and manual name.

Issued by *Manual Publication Section, Yamazaki Mazak Corporation, Japan*

## CONTENTS

	Page
1. INTRODUCTION .....	1-1
1-1 List of Manuals to Be Used .....	1-1
1-2 Configuration .....	1-1
2. NOTES ON SAFETY .....	2-1
2-1 General .....	2-1
2-2 Basic Safety Items .....	2-2
2-3 Clothing and Personal Safety .....	2-3
2-4 Safety Items Related to Operation .....	2-3
2-5 Safety Items Related to Gripping Workpiece and Tooling .....	2-4
2-6 Safety Items Related to Maintenance .....	2-5
2-7 Safety Items Related to the Workplace .....	2-6
2-8 Safety Equipment .....	2-6
2-9 Safety Nameplates .....	2-6
3. OUTLINE OF THE MACHINE .....	3-1
3-1 General .....	3-1
3-2 Major Components .....	3-1
4. INSPECTION AND MAINTENANCE .....	4-1
4-1 General .....	4-1
4-2 Regular Maintenance Inspection .....	4-4
4-3 Supplying Oil and Coolant .....	4-6
5. MAINTENANCE OF MAJOR MACHINE UNITS .....	5-1
5-1 Headstock .....	5-1
5-1-1 Construction and operation .....	5-1
5-1-2 Greasing and lubrication .....	5-3
5-1-3 Checking, adjustment and replacement of the chuck .....	5-4
5-1-4 Cleaning .....	5-11
5-2 Turret .....	5-12
5-2-1 Construction and operation .....	5-12
5-2-2 Cleaning .....	5-16
5-3 TOOL EYE .....	5-18
5-3-1 Construction and operation .....	5-18
5-3-2 Checking and adjustment .....	5-19
5-4 X- and Z-axes .....	5-23
5-4-1 Construction and operation .....	5-23
5-4-2 Lubrication .....	5-25
5-4-3 Adjustment .....	5-25

5-5	Tailstock .....	5-27
5-5-1	Construction and operation .....	5-27
5-5-2	Removing tail spindle .....	5-27
5-5-3	Lubrication .....	5-27
5-5-4	Adjustment for tail spindle alignment .....	5-28
5-6	Hydraulic Unit and Hydraulic Circuit .....	5-31
5-6-1	Construction and operation .....	5-31
5-6-2	Supplying and changing oil .....	5-36
5-6-3	Adjustment .....	5-37
5-6-4	Cleaning .....	5-38
5-7	Lubrication Unit and Lubrication Circuit .....	5-41
5-7-1	Construction and Operation .....	5-41
5-7-2	Replenishing lubricating oil .....	5-42
5-7-3	Cleaning .....	5-44
5-8	Coolant System .....	5-49
5-8-1	Construction and operation .....	5-49
5-8-2	Supplying coolant .....	5-50
5-8-3	Cleaning .....	5-53
5-9	Air Unit .....	5-55
5-9-1	Construction and operation .....	5-55
5-9-2	Replacement and adjustment .....	5-56
5-10	CNC Unit and Electrical Control Cabinet .....	5-59
5-10-1	CNC unit .....	5-59
5-10-2	Electrical control cabinet .....	5-62
5-10-3	Cleaning .....	5-67
5-11	Door Pocket Cover and Front Door .....	5-69
5-11-1	Cleaning .....	5-69
6.	INSTALLATION .....	6-1
6-1	Preparation for Installation .....	6-1
6-1-1	Environmental requirements .....	6-1
6-1-2	Power requirements .....	6-2
6-1-3	Air source requirements .....	6-4
6-1-4	Foundation work .....	6-5
6-1-5	Foundation parts .....	6-5
6-1-6	Delivering the machine .....	6-6
6-2	Machine Installation .....	6-7
6-2-1	Precautions for machine installation .....	6-7
6-2-2	Unpacking, inspection and cleaning .....	6-9
6-2-3	Standard accessories .....	6-10
6-2-4	Installation procedure .....	6-13
6-3	Connecting the Power Supply Cable and Air Supply Hose .....	6-16
6-3-1	Connecting the power supply cable .....	6-16
6-3-2	Connecting the air hose .....	6-19
6-3-3	Grounding .....	6-19
6-4	Trial Operation .....	6-21

7.	TROUBLESHOOTING .....	7-1
7-1	Headstock .....	7-1
7-2	Chuck .....	7-2
7-3	Turret .....	7-3
7-4	TOOL EYE .....	7-3
7-5	X-axis .....	7-4
7-6	Z-axis .....	7-4
7-7	Tailstock .....	7-4
7-8	Hydraulic Unit .....	7-5
7-9	Lubrication Unit .....	7-6
7-10	Coolant Unit .....	7-6
7-11	Air Unit .....	7-6