

TOSNUC 888

OPERATOR'S MANUAL

TOSHIBA MACHINE CO., LTD.

TOKYO, JAPAN

TOSNUC 888 OPERATOR'S MANUAL



WARNING

- READ THIS MANUAL BEFORE OPERATING
- SAVE THIS MANUAL FOR FUTURE REFERENCE

May, 1997

Table of Contents

	Page
1. Display and Keys.....	4
1.1 Display.....	6
1.2 Keys and Pushbuttons.....	7
2. Basic Operation Modes and Soft Menu (Basic Menu).....	13
2.1 AUTO Operation Mode	13
2.2 MDI Operation Mode	19
2.3 MANUAL Operation Mode	20
2.4 EXTERNAL Operation Mode	23
2.5 HOME Operation Mode	24
3. Main Display (Display 2)	26
3.1 Selection of Main Display	26
3.1.1 Selection of Main Display by Display Key	26
3.1.2 Selection of Main Display by DSP TBL Key	26B
3.1.3 Selection of Main Display by ALT Key.....	26B
3.2 Program Display (PROGRAM).....	26C
3.2.1 Block (PROGRAM).....	26C
3.2.2 Parent Program (PARENT)	27
3.2.3 Program Directory (DIRECTORY).....	27
3.2.4 Nesting Display (NESTING)	28
3.2.5 Machining Record (RECORD).....	29
3.2.5.1 Editing of Machining Record Display	29A
3.3 Position Display (POSITION).....	30
3.3.1 All Coordinates (ALL).....	30
3.3.2 Machine Coordinates (MACHINE)	30
3.3.3 Program Coordinates (PROGRAM)	30
3.3.4 Program Coordinates with Jog Shift (PROG & JOG).....	30
3.3.5 Foreground Plotting (FORE. PLOT).....	31
3.3.5.1 Editing of Foreground Plotting Display	31
3.4 Offset Data Display (OFFSET).....	36
3.4.1 Tool Compensation Display (TOOL COM).....	36
3.4.1.1 Editing of Tool Compensation Value	37
3.4.2 Fixture Offset Display (FIXTURE).....	39
3.4.2.1 Editing of Fixture Offset	39

	Page
3.4.3 Fixture Offset 2 Display (FIXTURE2)	40
3.4.3.1 Editing of Fixture Offset 2.....	40
3.4.4 Measuring Compensation Display (PROBE).....	41
3.4.4.1 Editing of Measuring Compensation Value.....	41
3.4.5 Pallet Compensation Display (PALLET)	41A
3.4.5 Editing of Pallet Compensation Value.....	41A
3.5 Data Display (DATA).....	42
3.5.1 Tool File Display (TOOL FILE).....	42
3.5.1.1 Editing of Tool File.....	44
3.5.1.2 Rearrangement of Tool File	45
3.5.2 Cutting Conditions Display (CUTTING).....	46
3.5.2.1 Editing of Cutting Conditions Display	47
3.5.3 Macro Variable Display (MACRO).....	49
3.5.3.1 Editing of Macro Variable.....	50A
3.5.4 Automatic Measurement Value Display (MEASURE).....	51
3.5.4.1 Editing of Automatic Measurement Value.....	51
3.5.5 Schedule Table Display (SCHEDULE).....	52
3.5.5.1 Editing of Schedule Table.....	53
3.6 Modal Data Display (MODAL).....	54
3.6.1 Modal Offset (MODAL OFT)	54
3.6.2 Working Time Display (TIME).....	57
3.6.2.1 Editing of Working Time Display.....	57
3.7 Setting Display (SETTING).....	58
3.7.1 Setting Parameter Display (RS232C).....	58
3.7.1.1 Editing of Setting Parameter.....	58
3.7.2 User Parameter Display (PARAMETER)	59
3.7.2.1 Editing of User Parameter.....	59
3.8 Diagnosis Display (DGNOS).....	60
3.8.1 Alarm Display (ALARM).....	60
3.8.2 Spindle Status Display (SPINDLE).....	61
3.8.3 Servo Status Display (SERVO).....	61A
3.9 Main Display and Basic Operation Mode.....	62

	Page
4. Sub Display (Display 3).....	63
4.1 Items of Sub Display	63A
4.2 Setting of Sub Display.....	63B
5. Window (Display 4)	66
5.1 Selection of Window	66
5.2 Changeover of Main Display and Window	66A
5.3 Relocation of Window	66B
6. Program Editing	67
6.1 Type of Program Editing.....	67
6.2 Procedures for Calling Background Editing Display.....	69
6.3 Configuration of Program Editing Display.....	72
6.4 Editing Operation.....	73
6.5 Concurrent Editing of Two Programs.....	84
6.6 Program Editing and Data Table Editing (Multi Editing).....	87
7. File Operation Display	89
8. Customized Keys.....	91
8.1 Memorizing Key Pattern	92
8.2. Memorizing Display.....	94
9. Input/Output Data Format	96
9.1 Part Program.....	96
9.2 Parameter.....	96
9.3 Offset Data.....	97
9.4 Probe Compensation Value	100A
9.5 Spindle Probe Value (Only Output).....	100B
9.6 Directory (Only Output)	100B
10. Sub Mode Select Pushbutton Switches.....	101
Appendix 1. Table of Operating Procedures.....	104A

SSE 72236-

SPECIFICATIONS
FOR
REMOTE OPERATION FUNCTION
TOSNUC 888

November, 1994

Table of Contents

	Page
1. General Descriptions.....	2
2. Interface between Host CPU and Remote Buffer.....	3
2.1 Communication Specification	3
2.2 Buffer Memory	4
3. Protocol A Specification	5
3.1 Meaning of Signals	5
3.2 Communication Procedures	6
3.3 Message Format.....	8
3.4 Command Section of Message.....	9
3.4.1 Transmit Command.....	9
3.4.2 Received Command.....	11
3.5 Data Section of Message.....	13
3.6 Code System	15
3.7 Abnormal Processing.....	16
3.8 Examples of Communication	17
4. Shift of Remote Buffer Status	19
5. Operation Mode.....	20
6. List of Messages	21
7. List of Parameters	22
8. Protocol B Specification	23
8.1 Meaning of Signals	23
8.2 Control Codes.....	24
8.3 End Code.....	24
8.4 NC Data Code	24
8.5 Transmission Control Procedures	25
8.5.1 Control only by DC Codes.....	25
8.5.2 Control by DC Codes and Signal Line.....	26
8.6 Operational Status.....	28
9. Parameters Commonly Used for Protocol A and B	29
10. Binary Operation Function.....	30
10.1 General Descriptions.....	30
10.2 Data Format for Binary Operation.....	30
10.3 Transfer Rate.....	33
10.4 Cautions	33
10.5 Parameters for Binary Operation.....	34

11. Alarm.....	35
----------------	----

TOSNUC 888 AUX Mass-Storage Specifications Manual

June, 1996

Table of Contents

	Page
1. General Descriptions	2
2. Hardware Specifications	2
2.1 Required Hardware	2
2.2 Available PC Card	2
3. Software Specifications.....	3
3.1 Parameter	3
3.2 Number of Files that Can Be Opened	3
3.3 Number of Registrable Programs per Directory	3
3.4 Drive Name	3
3.5 Input/Output	4
3.6 File Name	4
3.7 Running and Ready Editing	4
3.8 Program Editing	5
3.9 File Operation	5