

[INSTRUCTION MANUAL]

FINE **Sodick** WIRE CUT-EDM

A 350, A 500

[MACHINE TOOL]



FINE **Sodick**
SODICK Co., Ltd.

Vol. 1.1

CONTENTS

	Page
1. FOREWORD	1 - 1
1-1 Machine Installation Place	1 - 1
1-2 Incidental Working	1 - 2
1-3 Precautions	1 - 3
2. SPECIFICATIONS LAYOUT OF MACHINES	2 - 1
2-1 Machine Tool	2 - 1
2-2 Overall External View of Machine Tool	2 - 3
2-3 Installation, Piping, Wiring	2 - 4
2-4 Dimensional Drawing of Work Stand	2 - 1 3
3. NAMES OF EACH PART OF MACHINE	3 - 1
3-1 Control Panel	3 - 1
3-1-1 Control panel (with AWT)	3 - 1
3-1-2 Control panel (without AWT)	3 - 7
3-2 Flushing Adjusting Unit	3 - 1 2
3-3 Wire Feed Unit	3 - 1 3
3-4 Wire Guide Section	3 - 1 5
3-5 Wire Ejection Unit	3 - 2 9
3-6 Water Splashing Guard Set	3 - 3 0

CONTENTS

4. OPERATING METHOD	4 - 1
4-1 Method of Setting Wire Electrode	4 - 3
4-1-1 Method of tensing wire with AWT	4 - 3
4-1-2 Method of tensing wire without AWT	4 - 6
4-2 Determining of Wire Feed Speed	4 - 8
4-3 Determining Wire Tension	4 - 9
4-4 Installing Workpiece	4 - 11
4-5 Workpiece Clamping Jigs	4 - 13
4-6 Using Method of Workpiece Clamping Jig	4 - 14
5. MAINTENANCE AND INSPECTION	5 - 1
5-1 Wire Guide Section (Machines with AWT)	5 - 1
5-2 Wire Pickup Section	5 - 5
5-3 Inspecting (Replacing) discharge Cable	5 - 7
5-4 Method of Paralleling The Taper Cut Section	5 - 8
5-5 Lubricant	5 - 9
6. MAINTENANCE TABLE	6 - 1