

**TC-31A**  
**TC-22A**  
**TC-S2A**  
**TC-32A**  
**NC -PROGRAMMING**  
**MANUAL**

---

Please read this manual carefully before starting operation.

**brother**

# CONTENTS

## NC Programming

### Chapter 1 Program Composition ----- 1-1

|     |                                        |     |
|-----|----------------------------------------|-----|
| 1.1 | Types and composition of program ----- | 1-2 |
| 1.2 | Composition of block -----             | 1-3 |
| 1.3 | Composition of word -----              | 1-3 |
| 1.4 | Numerical values -----                 | 1-4 |
| 1.5 | Sequence number -----                  | 1-5 |
| 1.6 | Optional block skip -----              | 1-6 |
| 1.7 | Control out/in function -----          | 1-7 |

### Chapter 2 Coordinate Command ----- 2-1

|     |                                                        |     |
|-----|--------------------------------------------------------|-----|
| 2.1 | Coordinate system and coordinate value -----           | 2-2 |
| 2.2 | Machine zero point and machine coordinate system ----- | 2-3 |
| 2.3 | Working coordinate system -----                        | 2-3 |

### Chapter 3 Preparation Function ----- 3-1

|       |                                                 |      |
|-------|-------------------------------------------------|------|
| 3.1   | Outline of G code -----                         | 3-2  |
| 3.2   | Positioning (G00) -----                         | 3-8  |
| 3.3   | Linear interpolation(G01) -----                 | 3-9  |
| 3.4   | Circular/helical interpolation (G02, G03) ----- | 3-15 |
| 3.5   | Dwell (G04) -----                               | 3-20 |
| 3.6   | Exact stop check (G09, G61, G64) -----          | 3-21 |
| 3.7   | Programmable data inputting (G10) -----         | 3-23 |
| 3.8   | Soft limit -----                                | 3-27 |
| 3.8.1 | Stroke -----                                    | 3-27 |
| 3.8.2 | Stroke limit -----                              | 3-27 |
| 3.8.3 | Programmable stroke limit (G22) -----           | 3-28 |
| 3.9   | Return to the reference point (G28) -----       | 3-29 |
| 3.10  | Return from the reference point (G29) -----     | 3-30 |

|      |                                                              |      |
|------|--------------------------------------------------------------|------|
| 3.11 | Return to the 2nd/3rd/4th reference point (G30) -----        | 3-30 |
| 3.12 | Selection of machine coordinate system (G53) -----           | 3-31 |
| 3.13 | Selection of working coordinate system (G54~G59) -----       | 3-31 |
| 3.14 | Additional working coordinate system selection (G54.1) ----- | 3-32 |
| 3.15 | Coordinate rotation function (G68,G69) -----                 | 3-33 |
| 3.16 | Coordinate rotation using measured results (G168) -----      | 3-34 |
| 3.17 | Absolute command and incremental command (G90, G91) -----    | 3-35 |
| 3.18 | Change of working coordinate system (G92) -----              | 3-37 |
| 3.19 | Measurement feed (G131,G132) -----                           | 3-40 |
| 3.20 | Changeover of tap twisting direction (G133,G134) -----       | 3-41 |
| 3.21 | G code priority -----                                        | 3-42 |

## Chapter 4

### Preparation Function (tool offset function) ----- 4-1

|         |                                                              |      |
|---------|--------------------------------------------------------------|------|
| 4.1     | Tool Dia Offset (G40,G41,G42) -----                          | 4-2  |
| 4.1.1   | Tool dia offset function -----                               | 4-2  |
| 4.1.1.1 | Tool dia fine compensation -----                             | 4-2  |
| 4.1.2   | Cancel Mode -----                                            | 4-2  |
| 4.1.3   | Start-up -----                                               | 4-4  |
| 4.1.3.1 | Inside cutting ( $180^\circ$ ) -----                         | 4-5  |
| 4.1.3.2 | Outside cutting ( $90^\circ \leq \theta < 180^\circ$ ) ----- | 4-6  |
| 4.1.3.3 | Outside cutting ( $\theta < 90^\circ$ ) -----                | 4-7  |
| 4.1.4   | Offset Mode -----                                            | 4-8  |
| 4.1.4.1 | Inside cutting ( $180^\circ \leq \theta$ ) -----             | 4-8  |
| 4.1.4.2 | Outside cutting ( $90^\circ \leq \theta < 180^\circ$ ) ----- | 4-10 |
| 4.1.4.3 | Outside cutting -----                                        | 4-11 |
| 4.1.4.4 | Exceptional case -----                                       | 4-12 |
| 4.1.5   | Offset Cancel -----                                          | 4-13 |
| 4.1.5.1 | Inside cutting ( $180^\circ \leq \theta$ ) -----             | 4-14 |
| 4.1.5.2 | Outside cutting ( $90^\circ \leq \theta < 180^\circ$ ) ----- | 4-15 |
| 4.1.5.3 | Outside cutting ( $\theta < 90^\circ$ ) -----                | 4-16 |
| 4.1.6   | G40 single command -----                                     | 4-17 |
| 4.1.7   | Change of offset direction in offset mode -----              | 4-18 |

|          |                                                         |      |
|----------|---------------------------------------------------------|------|
| 4.1.8    | Change of offset direction in offset mode -----         | 4-19 |
| 4.1.8.1  | When there is a cross point -----                       | 4-19 |
| 4.1.8.2  | When there is no cross point -----                      | 4-20 |
| 4.1.8.3  | When offset path becomes more than a circle -----       | 4-22 |
| 4.1.9    | G cord command for tool dia offset in offset mode ----- | 4-23 |
| 4.1.10   | Notes on tool dia offset -----                          | 4-24 |
| 4.1.11   | Override function related to tool dia dffset -----      | 4-32 |
| 4.1.11.1 | Automatic corner override -----                         | 4-32 |
| 4.1.11.2 | Override of the inside circular cutting -----           | 4-33 |
| 4.2      | Tool length ofset (G43,G44,G49) -----                   | 4-34 |
| 4.2.1    | Tool length fine offset -----                           | 4-35 |

## Chapter 5

### Preparation Function (canned cycle) ----- 5-1

|        |                                                        |      |
|--------|--------------------------------------------------------|------|
| 5.1    | List of canned cycle function -----                    | 5-2  |
| 5.2    | Basic motions in canned cycle -----                    | 5-4  |
| 5.3    | General description of canned cycle -----              | 5-5  |
| 5.3.1  | Command related to canned cycle motions -----          | 5-5  |
| 5.3.2  | Setting of data in absolute/ incremental command ----- | 5-5  |
| 5.3.3  | Types of return point (G98,G99) -----                  | 5-6  |
| 5.3.4  | Canned cycle motion conditions -----                   | 5-6  |
| 5.3.5  | Machining data of canned cycle -----                   | 5-7  |
| 5.3.6  | Repeat number of canned cycle -----                    | 5-8  |
| 5-4    | Details of Canned Cycle -----                          | 5-9  |
| 5.4.1  | High-speed peek drilling cycle (G73) -----             | 5-9  |
| 5.4.2  | Reverce tapping cycle (G74) -----                      | 5-10 |
| 5.4.3  | Fine boring cycle (G76) -----                          | 5-11 |
| 5.4.4  | Tapping cycle (G77) -----                              | 5-12 |
| 5.4.5  | Reverce tapping cycle (synchro mode) (G78) -----       | 5-13 |
| 5.4.6  | Drilling cycle (G81,G82) -----                         | 5-15 |
| 5.4.7  | Peck drilling cycle (G83) -----                        | 5-17 |
| 5.4.8  | Taping cycle (G84) -----                               | 5-18 |
| 5.4.9  | Boring cycle (G85,G89) -----                           | 5-19 |
| 5.4.10 | Boring cycle (G86) -----                               | 5-21 |

|                                                              |      |
|--------------------------------------------------------------|------|
| 5.4.11 Back boring cycle (G87) -----                         | 5-23 |
| 5.4.12 High-speed peck drilling cycle (G173) -----           | 5-24 |
| 5.4.13 End mill tap cycle (G177) -----                       | 5-25 |
| 5.4.14 End mill tap cycle (G178) -----                       | 5-26 |
| 5.4.15 Doubledrillingcycle (G181,G182) -----                 | 5-27 |
| 5.4.16 Peck drilling cycle (G183) -----                      | 5-28 |
| 5.4.17 Doubleboring cycle (G185,G189) -----                  | 5-29 |
| 5.4.18 Double boring cycle (G186) -----                      | 5-30 |
| 5.4.19 Canned cycle of reducing step -----                   | 5-31 |
| 5.4.20 Canned cycle cancel (G80) -----                       | 5-38 |
| 5.4.21 Notes on canned cycle -----                           | 5-38 |
| 5.5 Canned cycle for tool change (non-stop ATC) (G100) ----- | 5-39 |
| 5.6 Optional positioning path control -----                  | 5-49 |

## Chapter 6

### Preparation Function (coordinate calculation) --- 6-1

|                                                      |     |
|------------------------------------------------------|-----|
| 6-1 List of coordinate calculation function -----    | 6-2 |
| 6.2 Coordinate calculation parameter -----           | 6-3 |
| 6.3 Details of coordinate calculation function ----- | 6-4 |
| 6.3.1 Bolt hole circle -----                         | 6-4 |
| 6.3.2 Linear (angle) -----                           | 6-5 |
| 6.3.3 Linear (X,Y) -----                             | 6-6 |
| 6.3.4 Grid -----                                     | 6-7 |
| 6.4 Usage of coordinate calculation function -----   | 6-8 |

## Chapter 7 Macro ----- 7-1

|                                            |     |
|--------------------------------------------|-----|
| 7.1 Simple call -----                      | 7-4 |
| 7.2 Modal call -----                       | 7-5 |
| 7.3 Arguments that can be designated ----- | 7-7 |
| 7.4 Difference between G65 and M98 -----   | 7-8 |
| 7.5 Calling depth of nesting -----         | 7-9 |

|      |                                             |      |
|------|---------------------------------------------|------|
| 7.6  | Variables-----                              | 7-10 |
| 7.7  | Calculation command -----                   | 7-12 |
| 7.8  | Calculation order -----                     | 7-13 |
| 7.9  | Control command -----                       | 7-13 |
| 7.10 | Displaying and setting macro variable ----- | 7-17 |
| 7.11 | General precautions for macro -----         | 7-18 |
| 7.12 | Example of program using macro -----        | 7-19 |

## **Chapter 8 Z axis measurement system ----- 8-1**

|         |                                                                        |      |
|---------|------------------------------------------------------------------------|------|
| 8.1     | Cautions -----                                                         | 8-2  |
| 8.2     | Setting -----                                                          | 8-4  |
| 8.3     | Z-axis thermal displacement offset -----                               | 8-7  |
| 8.3.1   | Offset capacity -----                                                  | 8-8  |
| 8.3.2   | For correct thermal displacement offset -----                          | 8-8  |
| 8.3.3   | Command -----                                                          | 8-10 |
| 8.3.3.1 | Determination of thermal measurement -----                             | 8-11 |
| 8.3.3.2 | Thermal measurement operation -----                                    | 8-12 |
| 8.3.4   | Program examples -----                                                 | 8-13 |
| 8.3.5   | Thermal measurement data screen -----                                  | 8-15 |
| 8.3.6   | Outputting thermal displacement measurement data to the computer ----- | 8-16 |
| 8.3.7   | Example parameter setting and alarm -----                              | 8-18 |
| 8.3.8   | Example offset -----                                                   | 8-19 |
| 8.4     | Tool breakage detection -----                                          | 8-25 |
| 8.4.1   | Determination of tool breakage detection -----                         | 8-25 |
| 8.4.2   | Program examples -----                                                 | 8-26 |
| 8.5     | Automatic tool length measurement -----                                | 8-28 |
| 8.5.1   | Command -----                                                          | 8-28 |
| 8.5.2   | Operation -----                                                        | 8-31 |

## **Chapter 9 Origin measurement ----- 9-1**

|     |                                 |     |
|-----|---------------------------------|-----|
| 9.1 | Before origin measurement ----- | 9-4 |
|-----|---------------------------------|-----|

|       |                                               |      |
|-------|-----------------------------------------------|------|
| 9.2   | Setting of data on origin measurement -----   | 9-4  |
| 9.3   | Operation of origin measurement -----         | 9-8  |
| 9.3.1 | Corner -----                                  | 9-8  |
| 9.3.2 | Parallel -----                                | 9-12 |
| 9.3.3 | Circle -----                                  | 9-15 |
| 9.3.4 | Z level -----                                 | 9-20 |
| 9.3.5 | Positioning to the measurement position ----- | 9-21 |
| 9.4   | Display of the measured results -----         | 9-22 |
| 9.5   | Lock key operations -----                     | 9-24 |

## **Chapter 10 Subprogram function ----- 10-1**

|        |                                              |      |
|--------|----------------------------------------------|------|
| 10.1   | Making subprogram -----                      | 10-3 |
| 10.2   | Simple call -----                            | 10-4 |
| 10.3   | Return No.designation from sub program ----- | 10-5 |
| 10.3.1 | Command by sub program -----                 | 10-5 |
| 10.3.2 | Command by main program- -----               | 10-6 |

## **Chapter 11 Feed function ----- 11-1**

|    |                     |      |
|----|---------------------|------|
| 11 | Feed function ----- | 11-2 |
|----|---------------------|------|

## **Chapter 12 S,T,M function ----- 12-1**

|        |                                 |       |
|--------|---------------------------------|-------|
| 12.1   | S function -----                | 12-2  |
| 12.2   | T function -----                | 12-2  |
| 12.2.1 | Commanded by tool No. -----     | 12-2  |
| 12.2.2 | Commanding by pot No. -----     | 12-2  |
| 12.2.3 | Commanded by group No. -----    | 12-2  |
| 12.3   | Mfunction -----                 | 12-3  |
| 12.3.1 | Program stop (M00) -----        | 12-11 |
| 12.3.2 | Optional stop (M01) -----       | 12-11 |
| 12.3.3 | End of program (M02, M30) ----- | 12-11 |

|          |                                                     |       |
|----------|-----------------------------------------------------|-------|
| 12.3.4   | Commands on the spindle (M03, M04, M05, M19, M111)  | 12-11 |
| 12.3.4.1 | Spindle orientation to desired angle (M19)          | 12-11 |
| 12.3.5   | M signal level output (M400~M409)                   | 12-12 |
| 12.3.6   | Tool change (M06)                                   | 12-13 |
| 12.3.7   | Workpiece counter specification (M211~M214)         | 12-22 |
| 12.3.8   | Workpiece counter cancel (M221~M224)                | 12-22 |
| 12.3.9   | M120 function                                       | 12-22 |
| 12.3.10  | Tool breakage detection (M200 and M201)             | 12-22 |
| 12.3.11  | Tap time constant selection (M241 to 250)           | 12-23 |
| 12.3.12  | Pallet related M codes (M410, M411, M430, and M431) | 12-25 |
| 12.3.13  | Unclamping and clamping C axis (M440 and M441)      | 12-25 |
| 12.3.14  | Unclamping and clamping B axis (M440 and M441)      | 12-25 |
| 12.3.15  | Unclamping and clamping Aaxis (M442 and M443)       | 12-25 |
| 12.3.16  | One-shot output (M450, M451, M455, and M456)        | 12-26 |
| 12.3.17  | Waiting until response is given (M460 to M469)      | 12-26 |

## **Chapter 13 Option----- 13-1**

|      |                                 |      |
|------|---------------------------------|------|
| 13.1 | Memory capacity expansion ----- | 13-2 |
|------|---------------------------------|------|