

mitsubishi cnc meldas 600m series

INSTRUCTION MANUAL

CONTENTS

CHAPTER 1 SCREEN OPERATIONS

| | |
|---|--------|
| 1. Operating the Setting and Display Unit | I - 1 |
| 1.1 Setting display unit | I - 1 |
| 1.2 Screen transition diagram | I - 5 |
| 1.3 Screen selection procedures | I - 6 |
| 1.4 Setting data | I - 7 |
| 1.4.1 Setting numerals and alphabetic characters | I - 7 |
| 1.4.2 Inputting operations | I - 10 |
| 1.5 Screen operations | I - 11 |
| 1.5.1 Setting a manual value command (S, M, T, B) | I - 11 |
| 1.5.2 Changing the valid area | I - 13 |
| 1.5.3 Changing the absolute value/incremental value setting | I - 14 |
| 1.5.4 Changing the display axis | I - 16 |
| 1.5.5 Selecting a device, directory and file | I - 17 |
| 1.5.6 Changing the display system | I - 24 |
| 1.5.7 Changing the menu | I - 25 |
| 1.5.8 Menu operations | I - 26 |
| 2. Monitor (Operation) Screens | I - 27 |
| 2.1 Position Display 1 screen (Position display1 screen) | I - 27 |
| 2.1.1 Changing the counter display | I - 29 |
| 2.1.2 Executing manual value commands | I - 30 |
| 2.1.3 Presetting the counter (Counter set, origin set, origin cancel) | I - 30 |
| 2.1.4 Changing the display axis | I - 31 |
| 2.2 Position Display 2 screen (Position display2 screen) | I - 32 |
| 2.2.1 Setting manual value commands | I - 33 |
| 2.2.2 Changing the counter display | I - 33 |
| 2.2.3 Correcting the buffer | I - 34 |
| 2.2.4 Changing the display axis | I - 36 |
| 2.3 Position Display 3 screen (Position display3 screen) | I - 37 |
| 2.3.1 Changing the counter display | I - 41 |
| 2.3.2 Setting the incremental time | I - 42 |
| 2.3.3 Changing the display system | I - 43 |
| 2.3.4 Changing the display axis | I - 43 |
| 2.4 Operation Search screen | I - 44 |
| 2.4.1 Executing an operation search | I - 46 |
| 2.4.2 Executing verify stop | I - 48 |
| 2.5 Restart Search screen | I - 50 |
| 2.5.1 Operation sequence for restarting program | I - 52 |
| 2.5.2 Executing top search | I - 53 |
| 2.5.3 Executing restart search | I - 54 |
| 2.5.4 Returning to the restart position | I - 57 |
| 2.5.5 Setting the S, M, T and B current modal values | I - 58 |
| 2.5.6 Calculating the machining time | I - 59 |

| | | |
|-----------|---|----------------|
| 2.6 | Graphics screen | I – 70 |
| 2.6.1 | Tracing and displaying the machine position..... | I – 71 |
| 2.6.2 | Checking the program | I – 74 |
| 2.6.3 | Changing the display range..... | I – 83 |
| 2.6.4 | Changing the display mode | I – 87 |
| 2.6.5 | Changing the display angle | I – 88 |
| 2.7 | Common Variable screen..... | I – 89 |
| 2.7.1 | Setting common variables | I – 91 |
| 2.7.2 | Copying/pasting common variables..... | I – 92 |
| 2.7.3 | Erasing common variables | I – 93 |
| 2.8 | Local Variable screen..... | I – 94 |
| 2.8.1 | Displaying local variables..... | I – 96 |
| 2.9 | PLC Switch screen | I – 98 |
| 2.9.1 | Turning PLC switches ON/OFF | I – 99 |
| 2.10 | Control Parameter screen (Control param screen) | I – 100 |
| 2.10.1 | Turning control parameters ON/OFF..... | I – 101 |
| 2.10.2 | Control parameter 1 details | I – 101 |
| 2.10.3 | Control parameter 2 details | I – 102 |
| 3. | Setup Screens | I – 106 |
| 3.1 | Tool offset amount screen (Tool offset amnt screen)..... | I – 106 |
| 3.1.1 | Setting the tool offset data..... | I – 110 |
| 3.1.2 | Erasing the tool offset data..... | I – 111 |
| 3.1.3 | Copying/pasting the tool offset data | I – 113 |
| 3.2 | Coordinate System Offset screen (Coord offset screen) | I – 115 |
| 3.2.1 | Setting the coordinate system offset data | I – 117 |
| 3.2.2 | Erasing the coordinate system offset data | I – 118 |
| 3.2.3 | Setting the workpiece coordinate zero point..... | I – 118 |
| 3.2.4 | Changing the counter display | I – 119 |
| 3.2.5 | Setting the manual value command | I – 119 |
| 3.2.6 | Changing the coordinate system display | I – 120 |
| 3.3 | Data Input/Output screen (Input/Output screen) | I – 121 |
| 3.3.1 | Selecting a device, directory and file | I – 124 |
| 3.3.2 | Transferring a file..... | I – 131 |
| 3.3.3 | Comparing files (Compare) | I – 133 |
| 3.3.4 | Erasing a file..... | I – 134 |
| 3.3.5 | Changing a file names (Rename)..... | I – 135 |
| 3.3.6 | Creating a directory | I – 136 |
| 3.3.7 | Formatting an FLD..... | I – 136 |
| 3.3.8 | Formatting an IC card..... | I – 137 |
| 3.3.9 | List of file names..... | I – 137 |
| 3.3.10 | Edit lock B and C..... | I – 138 |
| 3.3.11 | Data protect keys | I – 139 |
| 3.4 | Parameter screens..... | I – 141 |
| 3.4.1 | Setting the parameters | I – 144 |
| 3.4.2 | Copying/pasting parameters..... | I – 145 |

| | | |
|-----------|---|----------------|
| 3.5 | User parameter details | I – 147 |
| 3.5.1 | Axis Parameter screen (Axis param screen) | I – 148 |
| 3.5.2 | Machining Parameter screen (Process param screen) | I – 150 |
| 3.5.3 | Operation Parameter screen (Operation param screen) | I – 156 |
| 3.5.4 | Input/Output Parameter screen (I/O param screen) | I – 158 |
| 3.5.5 | RS-232-C I/O device parameter setting examples and cable connections | I – 162 |
| 3.5.6 | Ethernet Parameter screen (Ethernet param screen) | I – 163 |
| 3.5.7 | Computer Link parameter screen | I – 168 |
| 3.6 | Tool Life screen..... | I – 171 |
| 3.6.1 | Displaying in group units (Tool life (grp) screen) | I – 172 |
| 3.6.2 | Displaying the group list (T life (gr list) screen)..... | I – 179 |
| 3.6.3 | Displaying the Help screen (Tool life (help) screen) | I – 181 |
| 3.7 | Workpiece Measurement screen | I – 182 |
| 3.7.1 | Carrying out surface measurement | I – 186 |
| 3.7.2 | Carrying out hole measurement | I – 187 |
| 3.7.3 | Carrying out width measurement..... | I – 188 |
| 3.8 | Rotation Measurement screen | I – 189 |
| 3.8.1 | Carrying out rotation measurement | I – 191 |
| 3.9 | Tool Measurement screen..... | I – 193 |
| 3.9.1 | Carrying out tool length measurement | I – 196 |
| 3.9.2 | Carrying out tool radius measurement..... | I – 197 |
| 3.10 | Tool Registration screen | I – 198 |
| 3.10.1 | Registering a tool in the magazine pot | I – 200 |
| 3.10.2 | Changing the spindle/standby tool No. | I – 201 |
| 3.10.3 | Setting the PLC command..... | I – 201 |
| 3.10.4 | Erasing the tool registration data | I – 202 |
| 4. | Edit Screens..... | I – 203 |
| 4.1 | Edit screen | I – 203 |
| 4.1.1 | Creating a new machining program..... | I – 207 |
| 4.1.2 | Editing a program | I – 208 |
| 4.1.3 | Creating MDI data..... | I – 210 |
| 4.2 | Editing operations..... | I – 211 |
| 4.2.1 | Changing the display | I – 212 |
| 4.2.2 | Designating a random line | I – 213 |
| 4.2.3 | Rewriting data..... | I – 213 |
| 4.2.4 | Inserting data..... | I – 214 |
| 4.2.5 | Copying/pasting data | I – 215 |
| 4.2.6 | Deleting data..... | I – 216 |
| 4.2.7 | Searching for character strings..... | I – 218 |
| 4.2.8 | Replacing character strings | I – 219 |
| 5. | Diagnosis Screens..... | I – 220 |
| 5.1 | Hardware and Software Configuration screen (H/W S/W config screen) | I – 220 |
| 5.2 | Option Display screen | I – 222 |

| | | |
|-----------|---|----------------|
| 5.3 | I/F Diagnosis screen..... | I – 223 |
| 5.3.1 | Displaying the PLC device data..... | I – 226 |
| 5.3.2 | Carrying out modal output..... | I – 227 |
| 5.3.3 | Carrying out one-shot output..... | I – 228 |
| 5.3.4 | Diagnosis when an emergency stop status occurs..... | I – 228 |
| 5.4 | Amplifier Monitor screen (Amp monitor screen)..... | I – 230 |
| 5.4.1 | Servo axis unit display items..... | I – 232 |
| 5.4.2 | Spindle unit display items..... | I – 235 |
| 5.4.3 | Display items for the power supply unit..... | I – 241 |
| 5.4.4 | Clearing the alarm history..... | I – 242 |
| 5.5 | NC Memory Diagnosis screen (NC memry diagn screen)..... | I – 243 |
| 5.5.1 | Writing/reading the data using the NC data designation..... | I – 245 |
| 5.6 | Alarm screen..... | I – 246 |
| 6. | Maintenance Screens..... | I – 247 |
| 6.1 | Maintenance screen..... | I – 249 |
| 6.2 | Absolute Position Setting screen..... | I – 250 |
| 6.2.1 | Selecting the axis..... | I – 253 |
| 6.3 | Ladder Monitor screen..... | I – 254 |
| 6.3.1 | Starting the ladder monitor..... | I – 256 |
| 6.3.2 | Operations in the window..... | I – 256 |
| 6.3.3 | Searching a circuit..... | I – 257 |
| 6.3.4 | Various operations in Ladder Monitor screen..... | I – 260 |
| 6.3.5 | Exiting the ladder monitor..... | I – 262 |
| 6.3.6 | Message window..... | I – 262 |
| 6.3.7 | List of ladder monitor menus and operation keys..... | I – 263 |

CHAPTER 2 MACHINE OPERATIONS

| | | |
|-----------|---|---------------|
| 1. | Operation State..... | II – 2 |
| 1.1 | Operation state transition diagram..... | II – 2 |
| 1.2 | Power off..... | II – 2 |
| 1.3 | Run not ready..... | II – 3 |
| 1.4 | Ready..... | II – 3 |
| 1.4.1 | Reset..... | II – 3 |
| 1.4.2 | Automatic operation start..... | II – 3 |
| 1.4.3 | automatic operation pause..... | II – 4 |
| 1.4.4 | Automatic operation stop..... | II – 4 |
| 2. | Indicator Lamps..... | II – 5 |
| 2.1 | "Control Unit Ready"..... | II – 5 |
| 2.2 | Automatic operation busy..... | II – 5 |
| 2.3 | Automatic operation start busy..... | II – 5 |
| 2.4 | Automatic operation pause busy..... | II – 5 |
| 2.5 | Return to reference point..... | II – 5 |
| 2.6 | NC alarm..... | II – 5 |
| 2.7 | M00..... | II – 5 |
| 2.8 | M02/M30..... | II – 5 |

| | |
|--|----------------|
| 3. Reset Switch and Emergency Stop Button | II - 6 |
| 3.1 Reset switch..... | II - 6 |
| 3.2 Emergency stop button | II - 6 |
| 4. Operation Mode..... | II - 7 |
| 4.1 Mode select switch | II - 7 |
| 4.2 Jog feed mode | II - 8 |
| 4.3 Rapid traverse feed mode | II - 9 |
| 4.4 Reference point return mode..... | II - 10 |
| 4.5 Incremental feed mode..... | II - 12 |
| 4.6 Handle feed mode..... | II - 13 |
| 4.7 Program run mode | II - 14 |
| 4.8 MDI operation mode..... | II - 16 |
| 5. Operation Panel Switches in Operation Mode | II - 17 |
| 5.1 Rapid traverse override | II - 17 |
| 5.2 Cutting feed override..... | II - 17 |
| 5.3 Manual feedrate | II - 17 |
| 5.4 Handle/incremental feed magnification factor..... | II - 18 |
| 5.5 Handle feed axis selection..... | II - 18 |
| 5.6 Manual pulse generator..... | II - 18 |
| 5.7 Cycle start and feed hold..... | II - 19 |
| 5.8 Feed axis selection..... | II - 19 |
| 6. Operation Switch Functions and Other Functions | II - 20 |
| 6.1 All axes machine lock..... | II - 20 |
| 6.2 Display lock | II - 20 |
| 6.3 Cancel Z lock | II - 20 |
| 6.4 Miscellaneous function lock..... | II - 21 |
| 6.5 Single block..... | II - 21 |
| 6.6 Dry run | II - 21 |
| 6.7 Manual override..... | II - 21 |
| 6.8 Override cancel | II - 21 |
| 6.9 Optional stop | II - 21 |
| 6.10 Optional block skip | II - 22 |
| 6.11 Manual absolute | II - 23 |
| 6.12 Mirror image | II - 24 |
| 6.13 Error defect | II - 30 |
| 6.14 Follow-up function | II - 30 |
| 6.15 Axis removal..... | II - 30 |
| 6.16 F1 digit feed | II - 31 |
| 6.17 Manual/automatic synchronous feed | II - 31 |
| 6.18 Handle interruption | II - 32 |
| 6.18.1 Outline | II - 32 |
| 6.18.2 Interruptible conditions | II - 32 |
| 6.18.3 Interruption effective axis | II - 32 |
| 6.18.4 Axis movement speed resulting from interruption..... | II - 33 |
| 6.18.5 Path resulting after handle interruption..... | II - 34 |

| | | |
|--------|--|---------|
| 6.18.6 | Handle interruption in tool radius compensation..... | II - 36 |
| 6.18.7 | Interrupt amount reset..... | II - 38 |
| 6.18.8 | Operation sequence..... | II - 39 |
| 6.19 | Deceleration check..... | II - 40 |

CHAPTER 3 MAINTENANCE

| | | |
|-----------|--|-----------------|
| 1. | Confirming the Operation..... | III - 1 |
| 1.1 | Confirming the axis movement direction..... | III - 1 |
| 1.2 | Confirming the limit switch operation..... | III - 1 |
| 2. | Confirming the Drive Section..... | III - 2 |
| 3. | Adjusting the Dog-Type Reference Point Return..... | III - 3 |
| 3.1 | Outline..... | III - 3 |
| 3.2 | Dog-type reference point return..... | III - 3 |
| 3.3 | Reference point return parameters..... | III - 5 |
| 3.4 | Dog-type reference point return adjustment procedures..... | III - 10 |
| 4. | Daily Maintenance..... | III - 11 |
| 4.1 | Daily inspection..... | III - 11 |
| 4.1.1 | Checking the external view..... | III - 11 |
| 4.1.2 | Checking the inside of the NC unit..... | III - 11 |
| 4.2 | Replacement..... | III - 12 |
| 4.2.1 | Replacing the battery..... | III - 12 |
| 4.2.2 | Replacing the backlights..... | III - 14 |
| 4.2.3 | Replacing the cooling fan..... | III - 15 |
| 4.2.4 | Replacing the hard disk drive (HDD)..... | III - 16 |
| 4.3 | Cleaning and handling..... | III - 19 |
| 4.3.1 | Escutcheon..... | III - 19 |
| 4.3.2 | Floppy disk..... | III - 19 |
| 4.3.3 | Hard disk drive..... | III - 23 |
| 4.3.4 | LCD panel..... | III - 23 |
| 4.3.5 | PCMCIA Card..... | III - 24 |
| 5. | Fault Diagnosis and Action..... | III - 25 |
| 5.1 | Checking the fault occurrence status..... | III - 25 |
| 5.2 | Fault examples..... | III - 26 |

CHAPTER 4 APPENDICES

| | | |
|-------------------|--|---------------|
| Appendix 1 | Fixed Cycle Programs..... | IV - 1 |
| 1.1 | Parameters for Fixed cycle operation..... | IV - 1 |
| 1.2 | Inputting/outputting Fixed cycle programs..... | IV - 2 |
| 1.3 | Standard Fixed cycle subprogram..... | IV - 3 |
| Appendix 2 | Operation Messages..... | IV - 9 |
| 2.1 | Position display-related operation messages..... | IV - 9 |
| 2.2 | Operation search-related operation messages..... | IV - 9 |
| 2.3 | Restart search-related operation messages..... | IV - 9 |
| 2.4 | Graphic display-related operation messages..... | IV - 10 |

| | | |
|---|--|----------------|
| 2.5 | Compensation-related (tool offset, coordinate system offset) operation messages..... | IV - 10 |
| 2.6 | Data input/output-related operation messages..... | IV - 10 |
| 2.7 | Parameter-related operation messages..... | IV - 13 |
| 2.8 | Tool-related operation messages..... | IV - 13 |
| 2.9 | Measurement-related (workpiece, rotation) operation messages..... | IV - 14 |
| 2.10 | Editing-related operation messages..... | IV - 15 |
| 2.11 | Diagnosis-related operation messages..... | IV - 16 |
| 2.12 | Absolute position detection-related operation messages..... | IV - 16 |
| 2.13 | Maintenance-related operation messages..... | IV - 16 |
| 2.14 | Other operation messages..... | IV - 17 |
| Appendix 3 Alarm Messages..... | | IV - 18 |
| 3.1 | Errors common to all systems (SY00000)..... | IV - 18 |
| 3.2 | Servo errors (SV00000)..... | IV - 19 |
| 3.3 | Spindle errors (SP00000)..... | IV - 22 |
| 3.4 | Axis errors (AX00000)..... | IV - 24 |
| 3.5 | Operation errors (OP00000)..... | IV - 25 |
| 3.6 | Program errors (PR00000)..... | IV - 26 |
| Appendix 4 Warning Messages..... | | IV - 36 |
| 4.1 | Warnings common to all systems (SY00000)..... | IV - 36 |
| 4.2 | Servo warnings (SV00000)..... | IV - 37 |
| 4.3 | Spindle warnings (SP00000)..... | IV - 37 |
| 4.4 | Axis warnings (AX00000)..... | IV - 38 |
| 4.5 | Operation warnings (OP00000)..... | IV - 38 |
| 4.6 | Program warnings (PR00000)..... | IV - 42 |