

Mazak


MAINTENANCE MANUAL

FJV-200 & FJV-250

SMM 2500

Manual No.: S528MA0022E

**MAINTENANCE
MANUAL**

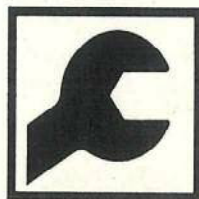

MAINTENANCE MANUAL

FJV-200 & FJV-250

SMM 2500

Manual No.: S528MA0022E

Before using this machine and equipment, fully understand the contents of this manual to ensure proper operation. Should any questions arise, please ask the nearest Technical/Service Center.

IMPORTANT NOTICE

1. Be sure to observe the safety precautions described in this manual and the contents of the safety plates on the machine and equipment. Failure may cause serious personal injury or material damage. Please replace any missing safety plates as soon as possible.
2. No modifications are to be performed that will affect operation safety. If such modifications are required, please contact the nearest Technical/Service Center.
3. For the purpose of explaining the operation of the machine and equipment, some illustrations may not include safety features such as covers, doors, etc. Before operation, make sure all such items are in place.
4. This manual was considered complete and accurate at the time of publication, however, due to our desire to constantly improve the quality and specification of all our products, it is subject to change or modification. If you have any questions, please contact the nearest Technical/Service Center.
5. Always keep this manual near the machinery for immediate use.
6. If a new manual is required, please order from the nearest Technical/Service Center with the manual No. or the machine name, serial No. and manual name.

Issued by Manual Publication Section, Yamazaki Mazak Corporation, Japan

CONTENTS

1	INTRODUCTION	1-1
1-1	List of Related Manuals and Documents	1-1
1-2	Pagination	1-1
1-3	Numbering of Figures and Tables	1-2
2	SAFETY PRECAUTIONS	2-1
2-1	Rule	2-1
2-2	Basic Safety	2-1
2-3	Clothing and Personal Safety	2-3
2-4	Operational Safety	2-3
2-5	Safety Considerations Relating to Holding Workpieces and Tooling	2-4
2-6	Maintenance Safety	2-5
2-7	Workplace Safety	2-6
2-8	Safety Considerations Relating to Chip Conveyor	2-6
2-9	Safety Equipment	2-6
2-10	Remarks on the Cutting Conditions Recommended by the NC	2-7
2-11	Safety Nameplates	2-7
2-12	Locations of Main Safety Equipment and Nameplates	2-8
3	OUTLINE OF THE MACHINE	3-1
3-1	Machine Construction	3-1
3-2	Machine Nomenclature	3-3

4	REGULAR INSPECTION	4-1
4-1	General.....	4-1
4-2	Table of Inspection and Maintenance Items	4-2
4-3	Daily Inspection and Maintenance.....	4-3
4-3-1	Cleaning.....	4-3
4-3-2	Oil Level Check and Oil Supply	4-4
4-3-3	Replenishing Coolant (As Needed)	4-6
4-3-4	Checking Pressures (Hydraulic and Air).....	4-6
4-3-5	Inspections and Adjustments.....	4-6
4-4	Weekly Inspection and Maintenance	4-7
4-4-1	Cleaning.....	4-7
4-4-2	Inspections and Adjustments.....	4-7
4-5	Monthly Inspection and Maintenance	4-8
4-5-1	Cleaning.....	4-8
4-5-2	Inspections and Adjustments.....	4-8
4-6	Every Six-Month Inspection and Maintenance	4-9
4-6-1	Changing Oil and Cleaning/Replacing Filters	4-9
4-6-2	Inspections and Adjustments.....	4-11
4-7	Every One- and Two-year Inspection and Maintenance.....	4-13
4-7-1	Changing Oil and Cleaning/Replacing Filters	4-13
4-7-2	Replenishing Grease.....	4-18
4-7-3	Inspections and Adjustments.....	4-19
4-8	Inspection and Maintenance before Stopping the Machine for a Long Time	4-20

4-9	Inspection and Maintenance before Starting the Operation after Stopping the Machine for a Long Time	4-21
4-10	Control of Oil Supply.....	4-22
5	MAINTENANCE OF MAJOR UNITS	5-1
5-1	Spindle	5-2
5-1-1	Configuration and Outline of Operation	5-2
5-1-2	Troubleshooting	5-3
5-2	X-axis, Y-axis, Z-axis.....	5-4
5-2-1	Configuration and Outline of Operation	5-4
5-2-2	Troubleshooting	5-5
5-3	ATC Unit.....	5-6
5-3-1	Configuration.....	5-6
5-3-2	Troubleshooting	5-6
5-3-3	Maintenance of ATC	5-7
5-4	Tool Magazine	5-8
5-4-1	Configuration.....	5-8
5-4-2	Troubleshooting	5-8
5-5	Hydraulic System.....	5-9
5-5-1	Configuration and Outline of Operation	5-9
5-5-2	Troubleshooting	5-9
5-6	Hydraulic Circuit Diagram.....	5-10
5-7	Centralized Lubrication Unit	5-15
5-7-1	Configuration and Outline of Operation	5-15
5-7-2	Troubleshooting	5-16

5-7-3	Adjustment.....	5-16
5-8	Cooling Unit.....	5-17
5-8-1	Configuration and Outline of Operation	5-17
5-8-2	Troubleshooting	5-18
5-9	Coolant System	5-19
5-9-1	Configuration and Outline of Operation	5-19
5-9-2	Troubleshooting	5-19
5-10	Pneumatic System	5-20
5-10-1	Troubleshooting	5-20
5-10-2	Pneumatic Circuit Diagram.....	5-21
5-10-3	Maintenance	5-23
5-11	Tool Length Measurement Unit	5-24
5-11-1	Configuration and Outline of Operation	5-24
5-11-2	Troubleshooting	5-24
5-11-3	Adjustment.....	5-24
5-12	NC Unit and Electric Control Cabinet	5-25
5-12-1	Troubleshooting	5-25
5-12-2	Resetting the thermal relay.....	5-25
5-12-3	Changing the Proximity Sensor	5-26
6	INSTALLATION.....	6-1
6-1	Precautions on Installing the Machine	6-1
6-2	Preparing for Installation.....	6-2
6-2-1	Environment for Machine Operation	6-2
6-2-2	External Power Source Requirements.....	6-3

6-2-3	Air Source Requirements	6-4
6-2-4	Items to be Confirmed when Carrying the Machine	6-4
6-3	Installation	6-5
6-3-1	Precautions on Installation	6-5
6-3-2	Lifting	6-5
6-3-3	Weights of Machine Units.....	6-7
6-3-4	Unpacking, Inspection and Cleaning	6-7
6-3-5	Location of the Shipping Brackets	6-8
6-3-6	Installation Procedure	6-9
6-3-7	Mounting the Sub Table	6-10
6-3-8	Transport and Installation Procedure of 40-tool Magazine.....	6-12
6-4	Connecting to the Power and Air Sources.....	6-15
6-4-1	Connecting to the Power Source.....	6-15
6-4-2	Grounding	6-16
6-4-3	Connecting to the Air Source.....	6-17
6-5	Test Run.....	6-18
6-5-1	Checking the Machine before Starting Test Run	6-18
6-5-2	Electric Inspection before Switching the Power ON.....	6-18
6-5-3	Checking the Parameter Settings	6-19
6-5-4	Checking the Machine in Manual Operation	6-19
6-5-5	Breaking in Operation.....	6-19
7	APPENDIX	7-1
7-1	List of Sensors, Limit Switches, and Oiling Points.....	7-1
7-2	List of Wearable Parts	7-2