



COMPUTERIZED SPRING MACHINE

MCS-8E

MACHINE MANUAL



MCS-8E Users Manual 1985/07

1st EDITION Jun.1985
2nd EDITION Jul.1985

USERS MANUAL



C O N T E N T S

Chapter	1	GENERAL	
	1-1	Foreword	1.1
	1-2	Composition	1.1
Chapter	2	SPECIFICATIONS	
	2-1	External Dimensions	2.1
	2-2	Construction	2.1
	2-3	Forming Capacity	2.2
	2-4	Feed Characteristics	2.2
	2-5	Cam Shaft Characteristics	2.2
	2-6	Input and Output Terminals	2.3
	2-7	Standard Accessories	2.4
	2-8	Optional Accessories	2.5
Chapter	3	STRUCTURE DETAIL	
	3-1	Feed Roll Unit	3.1
	3-2	Quill unit	3.2
	3-3	Wire Wheel	3.3
	3-4	Cam Shaft Unit	3.3
	3-5	Slide Unit	3.4
	3-6	Slide Abnormality Detecting Sensors	3.12
	3-7	Back-up Block Unit	3.12
	3-8	Pneumatic Solenoid Valves	3.14
	3-9	Pneumatic Filter & Regulator	3.14
Chapter	4	OPERATION	
	4-1	Operation Panel	4.1
	4-2	Keyboard	4.2
	4-3	Mode Selector Switches	4.3
	4-4	Inverse Function Button	4.3
	4-5	Jog Button	4.3
	4-6	Cam Shaft & Feed Speed Setting Switch	4.3
	4-7	Start Button	4.4
	4-8	Stop Button	4.4
	4-9	Emergency Shutdown Button	4.4
	4-10	Remote Control Switch	4.5
	4-11	Micro Floppy Disk Drive	4.5
	4-12	Power Switch	4.5
	4-13	Hour Meter	4.5
	4-14	Alarm Fuse	4.5
	4-15	Main Power Breaker	4.5
	4-16	Basic Operation	4.6
	4-17	ON, OFF of the Main Power (M)	4.6
	4-18	ON, OFF of the Cam Shaft Motor (C)	4.6
	4-19	Operation of Feed	4.7
	4-20	Operation of Cam Shaft	4.7
	4-21	Operation of Pneumatic Cylinder for Sensors	4.8
	4-22	Screen Display	4.9
	4-23	Output Status Display	4.14



4-24	Slide Status Display	4.14
4-25	Alarm Status Display	4.14
4-26	Sensor Status Display	4.14
4-27	Operation in Program Mode	4.15
4-28	Operation in Drive Mode	4.16
4-29	Operation in 1 Rev. Mode	4.18
4-30	Operation in Step Mode	4.19
4-31	Operation in Disk Mode	4.20
4-32	Operation in Manual Mode	4.21
4-33	Changing the Program During Operation	4.23
4-34	Count-up State Display	4.23
4-35	Error State Display	4.24
4-36	Condition of Alarms	4.24
4-37	Terminal Block (TB4)	4.25
4-38	Method of Utilizing the Sensor Terminals ...	4.25
4-39	Method of Utilizing the External Shutdown Terminals	4.26
4-40	Method of Utilizing the Peripheral Device Control Terminals	4.26
4-41	Method of Utilizing the Pay off Reel Control Terminals	4.27
4-42	Body Diameter Feedback Control Device	4.28
4-43	Error Code	4.29
4-44	Error Message	4.32

Chapter 5 PROGRAMS

5-1	Programming	5.1
5-2	Feed Command	5.1
5-3	Rotation Start Command	5.1
5-4	Rotation Stop Command	5.1
5-5	Angle Detection Command	5.2
5-6	Timer Command	5.2
5-7	End Command	5.2
5-8	Auto Feed Command	5.2
5-9	Check Commands	5.3
5-10	Output Control Command	5.3
5-11	Slide Check Command	5.4
5-12	Cam Shaft Speed Control Command	5.4
5-13	Feed Speed Control Command	5.5
5-14	Special Commands	5.6
5-15	Loop Command and Loop End Command	5.6
5-16	Jump Command	5.6
5-17	Subroutine Command	5.6
5-18	Conditional Skip Command	5.7
5-19	Slide Conditional Skip Command	5.7
5-20	Counter A Setting Command and Decrease Command	5.8
5-21	Counter B Setting Command and Decrease Command	5.8
5-22	Step Increase and Decrease Command	5.9
5-23	Step Conditional Skip Command	5.9
5-24	Step Clear Command	5.9
5-25	Forced End Command	5.9
5-26	Program Clear Command	5.10
5-27	Elapsed Time Clear Command	5.10



	5-28	Program Steps	5.11
	5-29	Parameters	5.11
	5-30	Counters	5.12
	5-31	Count-up Processing	5.12
	5-32	Error Processing	5.13
	5-33	Memory Back-up	5.13
	5-34	Insertion and Deletion of Program	5.13
	5-35	Input of Feed Data Using Jog Button	5.14
	5-36	Fine Adjustment of Feed Data	5.14
	5-37	Commands Prohibited to Use While Cam Shaft is Rotating	5.14
	5-38	Commands Prohibited to Use While Cam Shaft is Stopping	5.14
	5-39	Table of MCS Commands	5.15
Chapter	6	INSTALLATION	
	6-1	Transportation	6.1
	6-2	Installation Environment	6.1
	6-3	Wiring Connections	6.1
	6-4	Test Run	6.3
Chapter	7	MAINTENANCE	
	7-1	Daily Maintenance	7.1
	7-2	Hour Meter	7.1
	7-3	Zero Balance Adjustment of Brushless DC Servo motor	7.2
	7-4	Position of Fuses	7.3
	7-5	Servo Driver	7.4
	7-6	Spare Parts Box	7.5
	7-7	Adjustment of Screen display	7.5
	7-8	Adjustment of Linear Motion Bearing	7.6
	7-9	Precision Adjustment of Tool Holder on T Slide	7.9
	7-10	Method of Replacing the Bulb	7.10
Chapter	8	APPLICATIONS	
	8-1	Applications of Angle Detection Command	8.1
	8-2	Applications of Reverse Rotation of Cam Shaft	8.2
	8-3	Applications of Auto Feed Command	8.3
	8-4	Applications of Subroutine Command	8.5
	8-5	Application of Error and Count-up Processing Program	8.6
	8-6	Applications of Check Command	8.7
	8-7	Applications of Conditional Skip Command ...	8.9
	8-8	Application of Step Increase and Decrease Command	8.11
	8-9	Multiple Operation Function	8.12



MCS-8E Users Manual 1985/07

Chapter 9 CONNECTION OF PERIPHERAL DEVICES

9-1	Connecting the Payoff Reel of Our Specification	9.1
9-2	Connecting Other Payoff Reels	9.2
9-3	Connecting the Electric Furnace	9.4
9-4	Connecting Other Peripheral Devices	9.5

APPENDIX

1	Numbered Diagrams of Parts
2	Parts Drawings
3	High Voltage Circuit Diagrams



1ST EDITION Jul.1985

OPERATION MANUAL



C O N T E N T S

Chapter 1 BASIC OPERATION

1-1	Mounting the Feed Rolls	1.1
1-2	Mounting the Quill	1.3
1-3	Mounting the Slides	1.5
1-4	Mounting the Cam	1.5
1-5	Mounting the Cut Tool	1.6
1-6	Insertion of the Wire	1.7

Chapter 2 SETTING THE GERMAN HOOK EXTENSION SPRING

2-1	Parts Lists	2.1
2-2	Mounting the Slides	2.2
2-3	Mounting the Swing Unit	2.2
2-4	Mounting the Cam	2.3
2-5	Mounting the Feed Rolls	2.4
2-6	Mounting the Quill	2.4
2-7	Mounting the Cut Tool	2.4
2-8	Mounting the Back-up Block	2.4
2-9	Loading the Basic Program	2.5
2-10	German Hook Portions' Names	2.5
2-11	Mounting the Body Tool	2.7
2-12	Mounting the Center Tool	2.8
2-13	Forming the Body portion	2.9
2-14	Forming the No.1 Squeezed Portion	2.10
2-15	Forming the No.2 Squeezed Portion	2.10
2-16	Forming the No.1 Hook Portion	2.11
2-17	Forming the No.1 Raised portion	2.11
2-18	Mounting the Support Pin	2.12
2-19	Adjusting the Swing Rod	2.12
2-20	Forming the No.2 Raised Portion	2.15
2-21	Forming the No.2 Hook Portion	2.17
2-22	Mounting the Support Plate	2.17

Chapter 3 SETTING THE ENGLISH HOOK EXTENSION SPRING

3-1	Parts List	3.1
3-2	Mounting the Slides	3.2
3-3	Mounting the Swing Unit	3.2
3-4	Mounting the Cam	3.3
3-5	Mounting the Feed Rolls	3.4
3-6	Mounting the Quill	3.4
3-7	Mounting the Cut Tool	3.4
3-8	Mounting the Back-up Block	3.4
3-9	Loading the Basic Program	3.5
3-10	English Hook Portions' Names	3.5
3-11	Mounting the Body Tool	3.7
3-12	Forming the Body Portion	3.8
3-13	Forming the No.1 Cross Bar Portion	3.9
3-14	Forming the No.2 Cross Bar Portion	3.9
3-15	Mounting the No.2 Tool	3.10
3-16	Forming the No.1 Hook Portion	3.10
3-17	Adjusting the Swing Rod	3.10



3-18	Mounting the No.5 Tool	3.11
3-19	Forming the No.2 Hook Portion	3.11

Chapter 4 SETTING THE DOUBLE BODY TORSION SPRING

4-1	Parts List	4.1
4-2	Mounting the Slides	4.3
4-3	Mounting the Swing Unit	4.3
4-4	Mounting the Cam	4.4
4-5	Mounting the Feed Rolls	4.5
4-6	Mounting the Quill	4.5
4-7	Mounting the Cut Tool	4.5
4-8	Removing the Center Rotary Table	4.5
4-9	Mounting the U Attachment	4.6
4-10	Loading the Basic Program	4.7
4-11	Double Torsion Portions' Names	4.7
4-12	Mounting the Body Tool	4.9
4-13	Forming the Right-hand coil Body Portion ...	4.9
4-14	Mounting the Auxiliary Tool	4.10
4-15	Forming the Left-hand Coil Body Portion	4.10
4-16	Mounting the No.6 Tool	4.11
4-17	Forming the Central Portion	4.11
4-18	Forming the Auto Feed Portion	4.12

**Chapter 5 SETTING THE HIGH-SPEED ENGLISH HOOK
EXTENSION SPRING**

5-1	Parts List	5.1
5-2	Mounting the Slides and the Cams	5.2
5-3	Mounting the Feed Rolls	5.3
5-4	Mounting the Quill	5.3
5-5	Mounting the Cut Tool	5.3
5-6	Removing the Center Rotary Table	5.3
5-7	Loading the Basic Program	5.4
5-8	High-Speed English Hook Portions' Names ...	5.4
5-9	Basic Program 2	5.5
5-10	Mounting the Body Tool	5.6
5-11	Forming the Body Portion	5.7
5-12	Mounting the No.2 Tool	5.8
5-13	Forming the 1st Squeezed Portion	5.8
5-14	Forming the 2nd Squeezed Portion	5.9
5-15	Forming the 1st Hook Portion	5.9
5-16	Adjusting the No.2 Tool	5.10
5-17	Forming the No.2 Hook Portion	5.10

**Chapter 6 SETTING THE OVERLAP ENGLISH HOOK
EXTENSION SPRING**

6-1	Parts List	6.1
6-2	Mounting the Slides	6.2
6-3	Mounting the Swing Unit	6.2
6-4	Mounting the Cam	6.3
6-5	Mounting the Feed Rolls	6.4
6-6	Mounting the Quill	6.4



6-7	Mounting the Cut Tool	6.4
6-8	Removing the Center Rotary Table	6.4
6-9	Loading the Basic Program	6.5
6-10	Overlap English Hook Portions' Names	6.5
6-11	Mounting the Body Tool	6.7
6-12	Forming the Body Portion	6.8
6-13	Forming the No.1 Cross Bar Portion	6.9
6-14	Forming the No.2 Cross Bar Portion	6.9
6-15	Forming the No.2 Loop Portion	6.10
6-16	Mounting the No.2 Tool	6.11
6-16	Forming the No.1 Hook Portion	6.11
6-17	Adjusting the Swing Rod	6.11
6-18	Mounting the No.5 Tool	6.11
6-19	Mounting the Right Lateral Guide Tool	6.12
6-20	Mounting the Left Lateral Guide Tool	6.13
6-21	Explanation of the H2 Slide Operation	6.14
6-22	Mounting the Raised Tool	6.15
6-23	Adjusting the Raised Tool's Initial Position	6.15
6-24	Adjusting the Raising Movement	6.16