

**Mazak**

**PARAMETER LIST  
ALARM LIST**

for

**MAZATROL FUSION  
640M**

MANUAL No. : H735SA0015E

MANUAL No. : H735SA0024E

# **OPERATING MANUAL**



# PARAMETER LIST

for

## MAZATROL FUSION 640M

MANUAL No. : H735SA0015E

*Before using this machine and equipment, fully understand the contents of this manual to ensure proper operation. Should any questions arise, please ask the nearest Technical/Service Center.*

### IMPORTANT NOTICE

1. Be sure to observe the safety precautions described in this manual and the contents of the safety plates on the machine and equipment. Failure may cause serious personal injury or material damage. Please replace any missing safety plates as soon as possible.
2. No modifications are to be performed that will affect operation safety. If such modifications are required, please contact the nearest Technical/Service Center.
3. For the purpose of explaining the operation of the machine and equipment, some illustrations may not include safety features such as covers, doors, etc. Before operation, make sure all such items are in place.
4. This manual was considered complete and accurate at the time of publication, however, due to our desire to constantly improve the quality and specification of all our products, it is subject to change or modification. If you have any questions, please contact the nearest Technical/Service Center.
5. Always keep this manual near the machinery for immediate use.
6. If a new manual is required, please order from the nearest Technical/Service Center with the manual No. or the machine name, serial No. and manual name.

Issued by *Manual Publication Section, Yamazaki Mazak Corporation, Japan*

# CONTENTS

	Page
1 INTRODUCTION .....	1-1
2 PRELIMINARY REMARKS .....	2-1
3 FORMAT OF PARAMETER TABLES .....	3-1
4 PRECAUTIONS .....	4-1
5 USER PARAMETER .....	5-1
5-1 POINT (D) .....	5-1
5-2 LINE/FACE/3D (E) .....	5-20
5-3 EIA/ISO (F) .....	5-40
5-4 SOFT LIMIT (I) .....	5-66
6 MACHINE PARAMETER .....	6-1
6-1 CALL MACRO (J) .....	6-1
6-2 SPINDLE SKIP (K) .....	6-5
6-3 TABLE SENSOR (L) .....	6-22
6-4 FEED VEL. (M) .....	6-47
6-5 TIME CONST. (N) .....	6-53
6-6 OTHERS (S) .....	6-57
7 DATA I/O PARAMETER .....	7-1
7-1 CMT Parameter (CMT) .....	7-1
7-2 TAPE Parameter (TAP) .....	7-4
7-3 DNC Parameter (DNC) .....	7-16

7-4 Extended Parameter ..... 7-26

# ALARM LIST

for

## MAZATROL FUSION 640M

MANUAL No. : H735SA0024E

*Before using this machine and equipment, fully understand the contents of this manual to ensure proper operation. Should any questions arise, please ask the nearest Technical/Service Center.*

### IMPORTANT NOTICE

1. Be sure to observe the safety precautions described in this manual and the contents of the safety plates on the machine and equipment. Failure may cause serious personal injury or material damage. Please replace any missing safety plates as soon as possible.
2. No modifications are to be performed that will affect operation safety. If such modifications are required, please contact the nearest Technical/Service Center.
3. For the purpose of explaining the operation of the machine and equipment, some illustrations may not include safety features such as covers, doors, etc. Before operation, make sure all such items are in place.
4. This manual was considered complete and accurate at the time of publication, however, due to our desire to constantly improve the quality and specification of all our products, it is subject to change or modification. If you have any questions, please contact the nearest Technical/Service Center.
5. Always keep this manual near the machinery for immediate use.
6. If a new manual is required, please order from the nearest Technical/Service Center with the manual No. or the machine name, serial No. and manual name.

Issued by *Manual Publication Section, Yamazaki Mazak Corporation, Japan*

# CONTENTS

	Page
1 INTRODUCTION .....	1-1
2 GENERAL OUTLINE .....	2-1
2-1 Machine-Status Indicator Lamps .....	2-1
2-2 Alarm Display.....	2-1
2-3 Color of Alarm Display and its Elimination .....	2-1
3 STRUCTURE OF THE ALARM LIST .....	3-1
4 PRECAUTIONS.....	4-1
5 ALARM LIST.....	5-1