

LEGACY CNC 88 USER MANUAL



FADAL MACHINING CENTERS, LLC
support@fadal.com
20701 Plummer Street, Chatsworth, California 91311 USA

TABLE OF CONTENTS

1.0 SUMMARY	1
1.1 NC WORD SUMMARY	2
1.2 G CODES	3
1.2.1 PREPARATORY FUNCTIONS	3
1.2.2 MODAL & NON MODAL FUNCTIONS	3
1.3 DEFAULT STATUS	7
1.3.1 RESET	7
1.4 M FUNCTIONS	8
1.4.1 MODAL	8
1.4.2 NON MODAL	8
1.5 PROGRAM TAPE INPUT	10
1.6 PROGRAM NUMBERS, PROTECTION & STORAGE	12
1.6.1 PROGRAM NUMBER	12
1.6.2 O WORD	12
1.7 PROGRAM PROTECTION	13
1.7.1 NOEDIT	13
1.7.2 KEY LOCK	13
1.7.3 EMERGENCY STOP BUTTON	13
1.7.4 PROGRAM STORAGE	13
1.7.5 PROGRAM DATA INPUT	15
1.8 FORMAT CLASSIFICATION SHEET	15
1.8.1 MACHINE	15
1.8.2 FORMAT CLASSIFICATION SHORTHAND	15
1.8.3 FORMAT DETAIL	16
1.8.4 G FUNCTION CODES	16
1.8.5 M FUNCTION CODES	16
1.8.6 F FUNCTION RANGE	17
1.8.7 S FUNCTION	17
1.8.8 T FUNCTION CODE	18
1.8.9 D FUNCTION CODE	18
1.8.10 H FUNCTION CODE	18
1.8.11 MAXIMUM WORKING DIMENSIONS	19
1.8.12 GEOMETRIC RELATIONSHIP	21
 2.0 M FUNCTIONS	 23
2.1 M0 PROGRAM STOP	24
2.2 M1 OPTIONAL PROGRAM STOP	24

2.3 M2 END OF PROGRAM (FORMAT 1)	25
2.4 M2 END OF PROGRAM (FORMAT 2)	25
2.5 M3 SPINDLE CW	25
2.6 M3.1 SUB-SPINDLE ON, IGNORE MAGNET	26
2.7 M3.2 ACKNOWLEDGE SPINDLE MAGNET	26
2.8 M4 SPINDLE CCW	27
2.9 M4.1 SUB-SPINDLE ON, IGNORE MAGNET	27
2.10 M4.2 ACKNOWLEDGE SPINDLE MAGNET	27
2.11 M5 SPINDLE OFF	27
2.12 M6 TOOL CHANGE	28
2.12.1 SETP PARAMETER	28
2.12.2 T-# MOVE TOOL CHANGER	29
2.13 M7 COOLANT ONE ON	29
2.13.1 SETP PARAMETER	29
2.14 M7.1 PROGRAMMABLE COOLANT ON	30
2.14.1 SETP PARAMETER	30
2.15 M8 COOLANT TWO ON	30
2.15.1 SETP PARAMETER	30
2.16 M8.1 PROGRAMMABLE COOLANT ON	31
2.17 M9 COOLANT OFF	31
2.18 M10 CANCEL RECIPROCATION	31
2.19 M11 X AXIS RECIPROCATION	31
2.20 M12-M16 RECIPROCATION FOR Y, Z, B, A	32
2.21 M17 END OF SUBROUTINE	32
2.22 M18 AIR RATCHETING INDEXER	33
2.23 M19 SPINDLE STOP AND ORIENT	34
2.24 M20 GENERAL PURPOSE INDEXER	34
2.25 M30 END OF ALL SUBROUTINES (FORMATS 1&2)	34
2.26 M30 END OF PROGRAM (FORMAT 2)	35
2.27 M31 EXCHANGE PALLETS	35
2.28 M32 LOAD AND STORE PALLET A	36
2.29 M32.1 LOAD PALLET A & VERIFY PALLET A HAS BEEN LOADED	36
2.30 M33 STORE AND LOAD PALLET B	36
2.31 M 33.1 LOAD PALLET B & VERIFY PALLET B HAS BEEN LOADED	37
2.32 M41-M43 BELT DRIVE RANGE	37
2.33 M45 EXECUTE FIXED CYCLE	37
2.33.1 M45 USED WITH FIXTURE OFFSETS	38
2.34 M46 POSITIVE APPROACH	38

2.35 M47 CANCEL POSITIVE APPROACH	39
2.36 M48 POTENTIOMETER CONTROLS IN	39
2.37 M49 POTENTIOMETER CONTROLS OUT	39
2.38 M48.1 & M49.1 SERVO COOLANT POTENTIOMETER CONTROLS IN/OUT	39
2.39 M48.2 & M49.2 PALLET A ROTARY TABLE OVERRIDE POTENTIOMETER	39
2.40 M48.3 & M49.3 PALLET B ROTARY TABLE OVERRIDE POTENTIOMETER	40
2.41 M60 - M69 USER ATTACHED DEVICES	41
2.41.1 M-60 & M-62 FOR FIXED CYCLES	41
2.42 M80 AUTOMATIC DOORS OPEN	41
2.43 M81 AUTOMATIC DOORS CLOSE	42
2.44 M90-M93 GAIN SETTING	42
2.44.1 M90 CHANGE AXIS GAIN: P WORD	42
2.45 M94 FEED FORWARD FUNCTION	42
2.45.1 P WORD	43
2.45.2 Q WORD	44
2.46 M94.1 FEED FORWARD BY FEED RATE MODIFICATION	44
2.46.1 P WORD	44
2.46.2 Q WORD	44
2.46.3 R0+#	45
2.46.4 R1+#	45
2.46.5 R2+#	45
2.47 M94.2 ADVANCED FEED FORWARD (AFF)	46
2.47.1 R1	46
2.47.2 R2	46
2.47.3 P WORD	47
2.47.4 Q WORD	47
2.48 M95 FEED FORWARD CANCEL	47
2.49 M95.1 FEED FORWARD BY FEED RATE MODIFICATION CANCEL	47
2.50 M95.2 AFF CANCEL	47
2.51 M96 INTERSECTIONAL CUTTER COMPENSATION CANCELED (ROLL CRC)	48
2.52 M97 INTERSECTIONAL CUTTER COMPENSATION	49
2.53 M98 SUBPROGRAM (FORMATS 1 & 2)	49
2.53.1 P WORD	49
2.53.2 L WORD	49
2.54 M99 END OF SUBPROGRAM (FORMATS 1 & 2)	50
2.55 M99 LINE JUMP (FORMATS 1 & 2)	50
2.55.1 P WORD	50
3.0 G CODES	51
3.1 G0 RAPID TRAVEL	52

3.2 G1 LINEAR INTERPOLATION	52
3.3 G2 CIRCULAR INTERPOLATION ARC CLOCKWISE	53
3.4 G3 CIRCULAR INTERPOLATION ARC COUNTER-CLOCKWISE	53
3.5 G4 DWELL	53
3.5.1 G4 AS AN IN-POSITION CHECK	54
3.5.2 G4 AS A PROGRAM STOP	54
3.6 G5 NON MODAL RAPID	54
3.7 G8 ACCELERATION (NO FEED RAMPS)	54
3.8 G9 DECELERATION (FEED RAMPS)	55
3.8.1 G9 AS AN IN-POSITION CHECK	55
3.9 G10 PROGRAMMABLE DATA INPUT	56
3.9.1 L2	56
3.9.2 L10	57
3.9.3 L12	57
3.9.4 L13	57
3.9.5 L14	57
3.9.6 L15	57
3.9.7 L100 - L109	58
3.9.8 T	58
3.10 G15 YZ CIRCULAR INTERPOLATION WITH THE A AXIS	59
3.11 G17-G19 PLANE SELECTION	59
3.12 G17.1-G17.2 A/B WORD SWAP	60
3.13 G20 INCH PROGRAMMING	60
3.14 G21 METRIC PROGRAMMING	60
3.15 G28 RETURN TO ZERO	60
3.15.1 FORMAT 1	60
3.15.2 FORMAT 2	61
3.16 G28.1 CANCEL JOG AWAY	61
3.17 G29 RETURN FROM ZERO	62
3.18 G31 PROBE TOUCH FUNCTION	62
3.19 STORING PROBED POSITIONS	63
3.19.1 SAVING POSITIONS THROUGH THE RS-232 PORT	63
3.19.2 SAVING POSITIONS TO P WORDS	63
3.19.3 SAVING THE POSITION AS A V VARIABLE	64
3.20 G31.1 PROBE NO TOUCH FUNCTION	64
3.21 G40 CUTTER COMPENSATION CANCEL	64
3.22 G41 CUTTER COMPENSATION LEFT	64
3.23 G42 CUTTER COMPENSATION RIGHT	64
3.24 G43 TOOL LENGTH COMPENSATION POSITIVE	64
3.25 G44 TOOL LENGTH COMPENSATION NEGATIVE	65

3.26 G45 TOOL OFFSET SINGLE EXPANSION	65
3.27 G46 TOOL OFFSET SINGLE REDUCTION	66
3.28 G47 TOOL OFFSET DOUBLE EXPANSION	66
3.29 G48 TOOL OFFSET DOUBLE REDUCTION	66
3.30 G49 TOOL LENGTH OFFSET CANCEL	66
3.31 G50 RAMP CONTROL CANCEL	67
3.32 G50.1 MIRROR IMAGE CANCEL	67
3.33 G51 RAMP CONTROL	67
3.34 G51.1 MIRROR IMAGE	68
3.35 G51.2 TOOL LOAD COMPENSATION (TLC)	69
3.35.1 R1 = TARGET SPINDLE LOAD (PERCENTAGE)	69
3.35.2 R2 = MINIMUM PERCENTAGE FEED RATE REDUCTION	69
3.35.3 R3 = MAXIMUM PERCENTAGE FEED RATE INCREASE	69
3.35.4 R4 = NUMBER OF SECONDS AT MINIMUM FEED RATE UNTIL THE CONTROL ACTIVATES SLIDE HOLD	69
3.36 CANCELING G51.2 (TLC)	70
3.37 TLC MANUAL TARGET POWER OVERRIDE	70
3.38 G51.3 AXIS SCALING	70
3.39 G52 COORDINATE SYSTEM SHIFT	71
3.39.1 CANCEL G52	72
3.40 G53 MACHINE COORDINATE SYSTEM	72
3.41 G54-G59 FIXTURE OFFSETS	73
3.42 G66 MODAL SUBROUTINE	73
3.43 G67 CANCEL MODAL SUBROUTINE	75
3.44 G68 COORDINATE SYSTEM ROTATION	5
3.45 G69 COORDINATE SYSTEM ROTATION CANCEL	76
3.46 G70 INCH PROGRAMMING	76
3.47 G71 METRIC PROGRAMMING	76
3.48 G73-G76, G81-G89 FIXED CYCLES	76
3.49 G80 FIXED CYCLE CANCEL	76
3.50 G90 ABSOLUTE INPUT	77
3.51 G91 INCREMENTAL INPUT	77
3.52 G91.1 HIGH SPEED EXECUTION	78
3.53 G91.2 HIGH SPEED EXECUTION CANCEL (FORMAT 2 ONLY)	78
3.54 G92 ABSOLUTE PRESET	78
3.55 G93 I/T (INVERSE TIME) FEED RATE SPECIFICATION (IPM/INCHES, DPM/DEGREES)	79

3.56 G94 FEED RATE SPECIFICATION MMPM, IPM OR DPM	79
3.57 G98 RETURN TO INITIAL PLANE	79

4.0 FIXED CYCLES81

4.1 DEFINITION	82
4.2 PROCEDURE TO INITIALIZE A FIXED CYCLE	82
4.3 I PLANE	82
4.4 R PLANE	82
4.5 G 98 RETURN TO I PLANE AFTER FINAL Z	83
4.6 G99 RETURN TO R0 PLANE AFTER FINAL Z	83
4.7 CYCLE EXECUTION	83
4.7.1 FORMAT 1	83
4.7.2 FORMAT 2	84
4.7.3 FORMAT 1 & FORMAT 2	84
4.8 FIXED CYCLE PARAMETERS	84
4.8.1 F WORD	84
4.8.2 Q WORD	85
4.8.3 P WORD	85
4.8.4 I WORD: INITIAL PECK, X AXIS SHIFT G76	85
4.8.5 J WORD: REDUCING VALUE, Y AXIS SHIFT G76	85
4.8.6 K WORD: MINIMUM PECK	85
4.8.7 L WORD: CYCLE REPEAT AND SUSPEND, L# OR L0	85
4.8.8 R PLANE: R0 +/- #	86
4.8.9 S WORD	86
4.8.10 Z WORD	86
4.8.11 FIXED CYCLE EXAMPLES	86
4.8.12 G73 PECK DRILLING USING Q	88
4.8.13 G73 PECK DRILLING USING I, J, K	88
4.8.14 G74 LEFT HAND TAPPING	88
4.8.15 G74.1 LEFT HAND RIGID TAPPING	88
4.8.16 G75 TAPPING HEAD CYCLE	88
4.8.17 G76 FINE BORING	88
4.8.18 G81 SPOT DRILLING	88
4.8.19 G82 COUNTER BORING, CENTER DRILLING, SPOT FACING	89
4.8.20 G83 DEEP HOLE DRILLING USING Q	89
4.8.21 G83 DEEP HOLE DRILLING USING I, J, K	89
4.8.22 G84 RIGHT HAND TAPPING	89
4.8.23 G84 RIGHT HAND TAPPING USING P WORD	89
4.8.24 G84.1 RIGHT HAND RIGID TAPPING	89
4.8.25 G85 BORE IN, BORE OUT	89
4.8.26 G86 BORE IN, SPINDLE OFF, ORIENT, RAPID OUT	90
4.8.27 G87 BORE IN, BORE OUT	90
4.8.28 G88 BORE IN, DWELL, BORE OUT	90
4.8.29 G89 BORE IN, DWELL, BORE OUT	90
4.8.30 G73 - PECK DRILLING USING Q	91
4.8.31 G73 - PECK DRILLING USING I, J, K	91
4.8.32 G74 - LEFT HAND TAPPING (FORMAT 1)	92

4.8.33 G74 - LEFT HAND TAPPING (FORMAT 2)	93
4.8.34 G75 - TAPPING HEAD CYCLE (FORMATS 1 & 2)	94
4.8.35 G76 - FINE BORING USING Q	95
4.8.36 G76 - FINE BORING USING I, J	96
4.8.37 G81 - SPOT DRILLING	97
4.8.38 G82 - COUNTER BORING	98
4.8.39 G83 - DEEP HOLE DRILLING USING Q	99
4.8.40 G83 - DEEP HOLE DRILLING USING I, J, K	100
4.8.41 G84 - RIGHT HAND TAPPING (FORMAT 1)	101
4.8.42 G84 - RIGHT HAND TAPPING (FORMAT 2)	102
4.8.43 G85 - BORE IN, BORE OUT	103
4.8.44 G86 - BORE IN, SPINDLE OFF, RAPID OUT	104
4.8.45 G87 - BORE IN, BORE OUT	105
4.8.46 G88 - BORE IN, DWELL, BORE OUT	105
4.8.47 G89 - BORE IN, DWELL, BORE OUT	106
4.9 TAPPING CYCLES	107
4.9.1 GENERAL TAPPING RULES	107
4.9.2 FORMAT 1	108
4.9.3 FORMAT 2	108
4.9.4 FEED RATE CALCULATION	108
4.9.5 PROGRAM EXAMPLES	110
4.9.6 RIGID TAPPING	110
4.9.7 TAPMATIC NCR SERIES	112
4.9.8 TAPMATIC SPD SERIES	112
4.9.9 PROCUNIER SERIES	113
4.9.10 COMPRESSION (NON SELF-REVERSING) TAP HOLDER SERIES	113
4.9.11 DEEP HOLE PROGRAMMING USING G73 AND G83 I, J, AND K	114
4.9.12 INITIAL PECK: I#	114
4.9.13 REDUCING FACTOR: J#	114
4.9.14 MINIMUM PECK: K#	114
4.9.15 FEED DISTANCE BEFORE NEXT PECK: P#	114
4.9.16 PECK DRILL: G73	114
4.9.17 DEEP HOLE DRILL: G83	114
5.0 SUBROUTINES & SUBPROGRAMS	115
5.1 SUBROUTINES	116
5.2 BEGINNING A SUBROUTINE	116
5.3 CALLING A SUBROUTINE	116
5.4 ENDING A SUBROUTINE	116
5.5 MAIN PROGRAM	117
5.6 NESTING	117
5.7 PARAMETRIC PROGRAMMING	119
5.8 INDEFINITE SUBROUTINE REPETITIONS	120
5.9 SUBPROGRAMS	120
6.0 FIXED SUBROUTINES	123

6.1 DEFINITION	124
6.1.1 L9101 PROBE FUNCTIONS	124
6.2 ENGRAVING	124
6.2.1 L9201 ENGRAVING FUNCTIONS	124
6.2.2 PARAMETERS	124
6.2.3 RESTRICTIONS	125
6.2.4 ENGRAVING A CONSTANT STRING	125
6.2.5 ENGRAVING A SERIALIZED STRING	126
6.2.6 SERIALIZATION RANGE	126
6.2.7 SPACING, POSITIONING, & TOOL PATH CALCULATIONS	127
6.2.8 COMPUTING ACTUAL LETTER HEIGHT FROM THE R2 VARIABLE	127
6.2.9 COMPUTING START SPACING	127
6.2.10 COMPUTING END SPACING	128
6.2.11 COMPUTING START POSITION	128
6.2.12 COMPUTING ENGRAVING LENGTH	128
6.2.13 LETTER WIDTH FACTOR VALUES	129
6.3 BOLT CIRCLE	131
6.3.1 L93NN BOLT CIRCLE	131
6.4 MILL BORING	132
6.4.1 L94NN MILL BORING CYCLE COUNTERCLOCKWISE	132
6.4.2 L95NN MILL BORING CYCLE CLOCKWISE	133
6.5 RECTANGULAR POCKET CLEAN-OUT	134
6.5.1 L9601 RECTANGULAR POCKET CLEAN-OUT COUNTERCLOCKWISE	134
6.5.2 L9701 RECTANGULAR POCKET CLEAN-OUT CLOCKWISE	135
6.6 CIRCULAR POCKET CLEAN-OUT	136
6.6.1 L9801 CIRCULAR POCKET CLEAN-OUT COUNTERCLOCKWISE	136
6.6.2 L9901 CIRCULAR POCKET CLEAN-OUT CLOCKWISE	137
7.0 KEYBOARD	139
7.1 KEY LOCK SWITCH (EDIT PROTECTION)	140
7.2 BLOCK SKIP SWITCH	140
7.3 OPTIONAL STOP SWITCH	140
7.4 LIGHT ON/OFF SWITCH	140
7.5 VIDEO ON/OFF SWITCH	140
7.6 RAPID TRAVEL SELECTOR	141
7.7 FEED RATE OVERRIDE POTENTIOMETER	141
7.8 SPINDLE SPEED OVERRIDE POTENTIOMETER	141
7.9 JOG KEY AND THE HAND WHEEL	142
7.10 SHIFT	142
7.11 ENTER	142
7.12 DELETE	142
7.13 BACKSPACE	143

7.14 SPINDLE ON/OFF	143
7.15 AUTO	143
7.16 SLIDE HOLD	144
7.17 SLIDE HOLD, JOG AWAY	144
7.18 EXTERNAL SLIDE HOLD	145
7.19 SPACEBAR, BACKGROUND EDITING	146
7.20 SINGLE STEP	147
7.21 START	147
7.22 EMERGENCY STOP	148
7.23 MANUAL	148
7.24 COOLANT-1 (FLOOD)	148
7.25 COOLANT-2 (MIST)	148
7.26 TURRET CW	148
7.27 TURRET CCW	148
8.0 COMMANDS	149
8.1 COMMANDS	150
8.2 AUTO	151
8.2.1 AU, FROM, TO, DRY RUN, DIRECT BLOCK START	151
8.3 BACKLASH	152
8.3.1 BL, AXIS NO., AMOUNT AT CENTER, AT - LIMIT, AT + LIMIT	152
8.4 CHANGE DEVICE	152
8.4.1 CD, BAUD RATE, LINE FEED OPTION, COMMAND ECHO OPTION, DEVICE OPTION	152
8.5 CHANGE PROGRAM	153
8.5.1 CH, FROM, THROUGH	153
8.6 COMMAND LOCK	154
8.6.1 CL	154
8.7 COPY PROGRAM	156
8.7.1 CO, FROM, THROUGH, TO JUST AFTER	156
8.8 COLD START	156
8.8.1 CS	156
8.9 DISPLAY BUCKET #	157
8.9.1 DD	157
8.10 DELETE BLOCKS	157
8.10.1 DE, FROM, THROUGH	157
8.11 DISPLAY FEED FORWARD PARAMETERS	157
8.11.1 DFF (OPTIONAL)	157
8.12 DISPLAY FIXTURE OFFSETS	159

8.12.1 DF	159
8.13 DIAGNOSTICS	159
8.13.1 DI	159
8.14 DIRECT NUMERICAL CONTROL	159
8.14.1 DNC, VIDEO OPTION, ERROR OPTION, DRY RUN, START BLOCK NUM.	159
8.15 XMODEM DIRECT NUMERICAL CONTROL	160
8.15.1 DNCX, VIDEO OPTION, ERROR OPTION, DRY RUN, START BLOCK NUM.	160
8.16 DRAW	160
8.16.1 DR	160
8.16.2 A = AUTO	161
8.16.3 C = CLEAR	161
8.16.4 F = FULL TABLE	161
8.16.5 M = TOGGLE DISPLAY MODE	161
8.16.6 O = OPTIONS PLOTTING	162
8.16.7 S = SINGLE STEP	162
8.16.8 V= VIEW TOP OR ISOMETRIC	162
8.16.9 JOG = ZOOM	162
8.17 DISPLAY TOOL TABLE	163
8.17.1 DT	163
8.18 DISPLAY TOOL TIME TABLE	164
8.18.1 DTT	164
8.18.2 TIMERS	165
8.19 DISPLAY VARIABLE TABLE COMMAND	165
8.19.1 DV	165
8.20 FIXTURE OFFSET	166
8.20.1 FO, OFFSET NUMBER, X VALUE, Y VALUE, Z VALUE, A VALUE, B VALUE	166
8.21 HOME AXIS	166
8.21.1 HO	166
8.22 INSERT BLOCKS	167
8.22.1 IN, FROM, INCREMENT	167
8.23 JOG AXIS	167
8.23.1 J(AXIS ID) (DIRECTION)	167
8.24 LEARN MODE	167
8.24.1 LE, FIRST BLOCK NUMBER, INCREMENT, TOOL NUMBER	167
8.25 LIST PROGRAM	168
8.25.1 LI, FROM, THROUGH	168
8.26 MACRO	168
8.26.1 MA	168
8.27 MANUAL DATA INPUT	169
8.27.1 MD	169
8.28 MEMORY	169
8.28.1 ME	169
8.29 MENU	170

8.29.1 MU (WHEN USED IN THE COMMAND MODE)	170
8.30 NEW PROGRAM	170
8.30.1 NE	170
8.31 RENUMBER PROGRAM	170
8.31.1 NU, INCREMENT	170
8.32 PROGRAM PAGE EDIT	170
8.32.1 PA	170
8.33 FUNCTION MENU	171
8.33.1 USING THE FUNCTION MENUS	171
8.33.2 CURSOR MOVEMENT	172
8.33.3 GETTING STARTED	172
8.33.4 THE MENUS	172
8.34 GRAPHICS MENU	173
8.35 BACKGROUND EDITING	173
8.35.1 SPACE BAR OR MU (WHEN USED IN THE AUTO MODE)	173
8.36 DRY RUN OPTIONS	173
8.37 OFFSETS	174
8.38 HELP	174
8.39 PROGRAM MAINTENANCE LIBRARY	175
8.39.1 PR, PROGRAM #	175
8.40 PUNCH PROGRAM TAPE	176
8.40.1 PU, DATA OPTION, CODE OPTION, TTY OPTION	176
8.41 REINITIALIZE	177
8.41.1 RI	177
8.42 SET COLD START	177
8.42.1 SETCS	177
8.43 SET HOME POSITION OF ALL AXES	178
8.43.1 SETH	178
8.44 SET HOME POSITION FOR ONE AXIS	178
8.44.1 SET(AXIS)	178
8.45 METRIC PROGRAMMING	178
8.45.1 SETME	178
8.46 INCH PROGRAMMING	179
8.46.1 SETIN	179
8.47 SET SYSTEM PARAMETERS	179
8.47.1 SETP	179
8.48 PALLET PROGRAMMING	179
8.48.1 SETPA AND SETPB	179
8.49 PROGRAMMING FORMATS	180
8.49.1 FORMATS	180

8.49.2 FORMAT 1	180
8.49.3 FORMAT 2	182
8.50 OPERATION FORMATS	184
8.51 AXES:X,Y,Z	184
8.52 DEFAULT: G0	185
8.53 DEFAULT: G90	185
8.54 DEFAULT: G17	186
8.55 RPM FACTOR	186
8.56 BAUD RATE: 2400	187
8.57 TRAVEL	187
8.58 TOOL CHANGER CAP	188
8.59 TIMERS	188
8.60 SPINDLE TYPE	189
8.61 SPINDLE AFTER M6	189
8.62 PENDANT	190
8.63 IMM. FIXED CYCLE	190
8.64 ORIENTATION FACTOR	191
8.65 DEFAULT: INCH	191
8.66 PU FORMAT	192
8.67 CRC MODE	192
8.68 PALLET	193
8.69 M7-FLOOD, M8-MIST	193
8.70 BINARY BUFFERS 255	194
8.71 TURRET FACTOR	195
8.72 GAIN	196
8.73 3 PHASE 5% LOW: NO	196
8.74 HIGH TORQUE/RIGID TAP	197
8.75 CMD MENU	197
8.76 RAMP	198
8.77 A-AXIS RATIO	198
8.78 B-AXIS RATIO	199
8.79 M60/A-AXIS BRAKE	199
8.80 M62/B-AXIS BRAKE	200
8.81 N-WORDS ORDERED	200
8.82 TOOL TABLE	201

8.83 SET TURRET ORDER	201
8.83.1 SETTO	201
8.83.2 SETTO,#	202
8.84 SET TOOL LENGTH OFFSET 202	
8.84.1 SL, TOOL NUMBER, OPTIONAL CHANGE VALUE	202
8.85 SUM PROGRAM	203
8.85.1 SU, DISPLAY FROM, THROUGH, CRC OPTION, DISPLAY OPTION	203
8.85.2 SU,0,0,0,1	203
8.85.3 SU,10,0,1,1	203
8.85.4 SU,10,50,0,2	204
8.86 SURVEY	204
8.86.1 SV	204
8.87 TAPE (PROGRAM) INPUT	205
8.87.1 TA, DEVICE OPTION, ERROR OPTION, ADD AT THE END OPTION	205
8.88 TOOL CHANGER OPEN	206
8.88.1 TC,1	206
8.89 TOOL PARAMETER DEFINITION	206
8.89.1 TO, NUMBER, DIAMETER, LENGTH OFFSET	206
8.90 TOOL LOADING PROCEDURE	207
8.91 UTILITY	208
8.91.1 UT, TOOL NUMBER	208
8.91.2 OFFSET UTILITY OPTIONS:	208
8.91.3 OFFSET UTILITY OPTION 1	208
8.91.4 OFFSET UTILITY OPTION 2	208
8.91.5 ITEM 1	209
8.91.6 ITEM 2	210
8.91.7 ITEM 3	211
8.91.8 ITEM 4	212
8.91.9 ITEM 5	213
8.91.10 ITEM 6	213
8.91.11 ITEM 7	214
8.91.12 ITEM 8	214
8.91.13 ITEM 9	214
8.91.14 OFFSET UTILITY OPTION 3	214
8.91.15 OFFSET UTILITY OPTION 4	214
8.91.16 OFFSET UTILITY OPTION 5	214
8.91.17 OFFSET UTILITY OPTION 6	215
8.91.18 ITEM 1	215
8.91.19 ITEM 2	216
8.91.20 ITEM 3	216
8.91.21 ITEM 4	216
8.92 TAPE VERIFICATION	217
8.92.1 VT, DEVICE OPTION	217

9.0 CUTTER RADIUS COMPENSATION	219
9.1 CUTTER RADIUS COMPENSATION	220
9.1.1 FORMAT 1	220
9.1.2 FORMAT 2	220
9.2 G40 - CANCEL CUTTER RADIUS COMPENSATION	221
9.3 G41 - CLIMB CUT (CUTTER LEFT)	221
9.4 G42 - CONVENTIONAL CUT (CUTTER RIGHT)	221
9.5 CLIMB AND CONVENTIONAL CUTTING	222
9.6 THE H AND THE D WORD WITH CRC	223
9.6.1 H AND D WORD USE	223
9.7 ADVANTAGES OF CLIMB CUTTING	223
9.7.1 ADVANTAGES OF CONVENTIONAL CUTTING	225
9.8 GUIDELINES FOR USING CRC	225
9.9 GENERAL RULES	226
9.9.1 EXAMPLES OF APPLYING AND CANCELING CRC	227
9.10 O-RING GROOVE EXAMPLE	231
9.11 PERPENDICULAR RULE	232
9.12 FILLET RADII AND STEP DOWNS	233
9.12.1 PROGRAM EXAMPLE	234
9.13 CORNER ROUNDING	235
9.14 M96 CANCEL INTERSECTIONAL CRC (ROLLING)	236
9.15 M97 INTERSECTIONAL CRC	236
9.16 WHEN TO USE M96 AND M97	236
9.17 CRC & Z AXIS MOVES	237
9.18 APPLYING COMPENSATION WITH A Z MOVE	238
9.19 APPLYING COMPENSATION WITH A Z MOVE ON A CIRCLE	240
9.19.1 COMPENSATION EXAMPLE	241
 10.0 ERROR MESSAGES	 243
10.1 ERROR MESSAGES	244
10.1.1 ABSOLUTE MODE REQUIRED AT N =	244
10.1.2 AMPLIFIER FAULT ON AXIS	244
10.1.3 ARM MUST BE LEFT	244
10.1.4 ARRAY EXCEEDS ALLOWABLE NUMBER	244
10.1.5 ATC FAILURE	245
10.1.6 ATC TURRET FAILURE	245
10.1.7 ATC WILL NOT MOVE TO POSITION	245
10.1.8 ATC AMBIGUOUS TURRET POSITION, VERIFY POCKET # WITH SETTO,# OR, TURRET LOCATION LOST, RESET TURRET LOCATIONS WITH SETTO,#	246
10.1.9 ATC AMBIGUOUS BUCKET POSITION, VERIFY POCKET # WITH SETTO,# OR,	

BUCKET NOT UP/DOWN, RESET TURRET LOCATIONS WITH SETTO,#	246
10.1.10 ATC ARM IS NOT IN HOME POSITION	246
10.1.11 ATC ARM SOLENOID SENSOR/HOME SENSOR FAILURE OR, ARM DID NOT MOVE FROM HOME	246
10.1.12 ATC BUCKET UP SOLENOID/SENSOR FAILURE OR, BUCKET DID NOT MOVE UP	246
10.1.13 ATC BUCKET DOWN SOLENOID/SENSOR FAILURE OR, BUCKET DID NOT MOVE DOWN	247
10.1.14 ATC COMMUNICATION ERROR WITH 1330 CARD	247
10.1.15 ATC INTERLOCK IS ON	247
10.1.16 ATC TOOL CLAMPING FAILURE OR, ARM DID NOT ARRIVE AT SPINDLE	247
10.1.17 ATC TOOL UNCLAMPING FAILURE OR, ARM DID NOT LEAVE SPINDLE	247
10.1.18 ATC TOOL ARM OBSTRUCTED OR, ARM DID NOT ARRIVE AT SPINDLE	247
10.1.19 ATC TOOL SENSOR FAILURE OR, ARM NOT AT SPINDLE	248
10.1.20 CAROUSEL SOLENOID FAILURE (OR SENSOR) OR, TURRET HAS NOT ROTATED	248
10.1.21 DRAWBAR SENSOR FAILURE OR, DRAWBAR NOT CLAMPING TOOL	248
10.1.22 DRAWBAR SOLENOID FAILURE (OR NO AIR) OR, DRAWBAR NOT RELEASING TOOL	248
10.1.23 ATTEMPTED DIVISION BY ZERO	248
10.1.24 ATTEMPTED SQR OF A NEGATIVE NUMBER	248
10.1.25 ATTEMPT TO CHANGE CRC SIDE WITHOUT G40 AT N =	249
10.1.26 ATTEMPT TO CHANGE TOOL WHILE IN CRC MODE, N =	249
10.1.27 ATTEMPT TO SWITCH PLANE DURING CRC	249
10.1.28 AXIS CONTROLLER DOES NOT RESPOND DURING POWER UP SEQUENCE	249
10.1.29 AXIS CONTROLLER DOES NOT RESPOND TO NC	249
10.1.30 AXIS DATA TRANSFER IS STALLED	249
10.1.31 AXIS DOES NOT RESPOND	249
10.1.32 AXIS FAULT(S) AS FOLLOWS	249
10.1.33 AXIS OVERFLOW	250
10.1.34 BAD CIRCLE OR MISSING G AT N	250
10.1.35 BAD DATA OR NO TOOL DIA	250
10.1.36 BAD FIXTURE NO.	250
10.1.37 BAD INTERPOLATION TYPE AT N	250
10.1.38 BAD R FIELD	250
10.1.39 BAD R1 USING L91 AT N =	251
10.1.40 BAD T WORD AT N=	251
10.1.41 BAD Z OR R0 IN CANNED CYCLE CALL, N =	251
10.1.42 CALCULATED RADIUS ERROR OF	251
10.1.43 CANCEL CRC BEFORE G50.1 OR G51.1 AT N =	251
10.1.44 CANCEL CRC BEFORE N =	252
10.1.45 CANCEL Z AXIS MIRROR BEFORE TOOL CHANGE AT N	252
10.1.46 CANNOT RETURN FROM SUBPROGRAM OR SUBROUTINE CALLING LINE CANNOT BE FOUND	252
10.1.47 CANNOT START DIRECTLY IN A SUBPROG.	252
10.1.48 CHAR. SIZE OR DEPTH EXCEEDS 2.5 IN.	252
10.1.49 CHECK EMERGENCY STOP SWITCH AND MOTOR OVERLOAD RELAYS	252
10.1.50 CHECK SPINDLE LUBE, WAY LUBE AND AIR PRESSURE	253
10.1.51 CLEAR AN EMERGENCY STOP CONDITION	253
10.1.52 COMMAND ERROR	253
10.1.53 COMMAND PROHIBITED BY THE KEY LOCK	253
10.1.54 CRC CALLED WITH NO TOOL ASSIGNED AT N =	253
10.1.55 D OR H TOO LARGE	253
10.1.56 DATA TRANSFER FAULT	253
10.1.57 DNC MODE	254
10.1.58 DOOR BEGAN TO CLOSE WHILE ARM WAS MOVING	254
10.1.59 DO YOU WANT TO MOVE TO THE LAST HOME POSITION?	254
10.1.60 DO YOU WANT TO ZERO TOOL TABLE?	254
10.1.61 DO YOU WANT TO ZERO FIXTURE OFFSETS?	254

10.1.62 DO YOU WANT REINITIALIZE MEMORY?	254
10.1.63 DRY RUN OPTION __ IS IN EFFECT	254
10.1.64 DUPLICATE NAME	254
10.1.65 DUPLICATE OR BAD PROG. NAME	255
10.1.66 DWELL, HIT START TO INTERRUPT	255
10.1.67 E WORD MAY ONLY BE USED WITH G0 OR G1 N=	255
10.1.68 EMERGENCY STOP-TAKE APPROPRIATE ACTION	255
10.1.69 ENTER AGAIN OR HIT MANUAL TO EXIT	256
10.1.70 ENTER COMMAND SETP AND SET THE MACHINE PARAMETERS	256
10.1.71 ENTER COMMAND MU TO SEE THE MENU	256
10.1.72 ERROR	256
10.1.73 ERROR IN USER PROGRAM, 'SUM' TO SEE MESSAGE	256
10.1.74 ERROR N WORD EXCEEDS 99999	256
10.1.75 ERROR WHILE PROCESSING BLOCK	256
10.1.76 ERROR(S) READING TAPE	257
10.1.77 FILE OVERFLOW	257
10.1.78 FIXTURE OFFSET OUT OF RANGE	257
10.1.79 FIXTURE OFFSET MUST BE APPLIED WITH G0 OR G1	257
10.1.80 G28 AND G29 USED WITH CUTTER RADIUS COMP AT SEQ	257
10.1.81 G31 USED WITH AN INCOMPATIBLE WORD OR MODE	257
10.1.82 G45-G48 & G52 ARE NOT ALLOWED WITH ROTATION, N =	258
10.1.83 G91.2 IS NOT ALLOWED IN FORMAT 1	258
10.1.84 G92 CANNOT BE USED IN CRC MODE, N =	258
10.1.85 G92 MUST BE ONLY G CODE IN BLOCK	258
10.1.86 GNN IS AN UNSUPPORTED G CODE AT N	258
10.1.87 HELICAL MOVE TOO SHORT, N =	258
10.1.88 HELICAL RADIUS TOO SMALL, N =	258
10.1.89 HELICAL RISE TOO STEEP, N =	258
10.1.90 I, J, OR K MUST BE SPECIFIED AT N =	258
10.1.91 ILLEGAL O WORD	258
10.1.92 ILLEGAL G CODE DURING G91.1 MODE AT N =	258
10.1.93 IMPROPER USE OF CANNED SUBR.	259
10.1.94 INCHES MODE REQUIRED - OPERATOR MUST SET	259
10.1.95 INCOMPATIBLE G CODES AT SEQ	259
10.1.96 INCREMENT DIVIDED BY TWO	259
10.1.97 INCREMENT TOO LARGE	259
10.1.98 INCREMENT TOO SMALL	260
10.1.99 INPUT XMODEM TRANSMIT BLOCK MISSED ERROR	260
10.1.100 JOG AXES TO HOME POSITIONS, THEN ENTER THE CS COMMAND	260
10.1.101 LOOK AHEAD WAS CANCELED BY OPERATOR	260
10.1.102 M,S,T LOCKOUT IS IN EFFECT	260
10.1.103 M FUNCTION TOO LARGE AT N =	260
10.1.104 MAIN PROG. NOT FOUND	260
10.1.105 MEMORY ERROR, RELOAD PROGRAM	261
10.1.106 MEMORY ERROR, RESPOND WITH Y TO DELETE BAD BLOCKS	261
10.1.107 METRIC MODE REQUIRED - OPERATOR MUST SET	261
10.1.108 MOTOR OVERLOAD	262
10.1.109 MOVE EXCEEDS AXIS LIMIT AT N =CHECK PROGRAM AND TOOL OR FIXTURE OFFSETS	262
10.1.110 MOVE TURRET TO TOOL 1 AND ENTER SETTO COMMAND	262
10.1.111 NEXT ENTRY IS OUT OF RANGE	262
10.1.112 NO ANGLE, THE POINTS ARE THE SAME	262
10.1.113 NO MEMORY AVAILABLE FOR NEW PROGRAM	262
10.1.114 NO OTHER WORDS ALLOWED WITH O WORD	262
10.1.115 NO PARAMETERS OR PARAMETERS CORRUPTED MACHINE DEFAULTS USED	263

10.1.116 NO RESPONSE FROM AXIS	263
10.1.117 NO TOUCH OR INCOMPLETED POINT AT N =	263
10.1.118 NOTE ERROR THEN HIT MANUAL	263
10.1.119 NUMBER OUT OF RANGE	263
10.1.120 OFFSET ENTRY ERROR	263
10.1.121 ONLY BLOCK SKIP ALLOWED WITH MACRO	264
10.1.122 ONLY M3, M4 & M5 ARE ALLOWED WITH M6 AT N =	264
10.1.123 ONLY Z, L, R & F WORDS ALLOWED	264
10.1.124 ORIENTATION FAILURE	264
10.1.125 OUT OF FILE SPACE, A FILE COMPRESSION IS BEING TRIED	264
10.1.126 O WORD OUT OF RANGE	264
10.1.127 PALLET DISABLED IN PARAMETERS	264
10.1.128 PALLET IN STORAGE	264
10.1.129 PALLET NOT FULLY STORED	265
10.1.130 PALLET MUST BE CLAMPED	265
10.1.131 PARAMETER ERROR	265
10.1.132 PARITY ERROR	265
10.1.133 PARITY ERROR DURING DNC	265
10.2 PLEASE PUT AN O WORD AT THE FIRST OF THE CURRENT PROGRAM THE FOLLOWING PROGRAMS ARE IN MEMORY	266
10.2.1 POINTS ARE ON SAME LINE AT N =	266
10.2.2 POSSIBLE PROBE OVER TRAVEL	266
10.2.3 POSITION LIMIT	266
10.2.4 PRESS Y TO KEEP THIS POSITION PRESS N TO RETURN TO LAST POSITION	266
10.2.5 PROBE TEST = FAILURE	266
10.2.6 PROBLEM POSITIONING SLIDES TO ZERO	267
10.2.7 PROGRAM DOES NOT EXIST RETRY OR HIT MANUAL TO EXIT	267
10.2.8 PROGRAM NOT FOUND	267
10.2.9 PROGRAM BLOCK NOT FOUND	267
10.2.10 P WORD TOO LARGE	267
10.2.11 RESET THE EMERGENCY STOP SWITCH	267
10.2.12 RESOLVER FAULT OR SCALE ERROR	267
10.2.13 RAILS NOT ALIGNED	268
10.2.14 RETURN PALLET TO THE LOAD POSITION	268
10.2.15 ROTARY AXIS MOVE TOO LONG. N =	268
10.2.16 RS-232 ERROR DURING DNC	268
10.2.17 SCALE ERROR	268
10.2.18 SEE MENU FOR NEW CD FORMAT	268
10.2.19 SEQUENCE NUMBER TOO LARGE	268
10.2.20 SEQUENCE NUMBER TOO SMALL	268
10.2.21 SERVO AMPLIFIER FAULT	268
10.2.22 SINGLE STEP	269
10.2.23 SLIDE HOLD	269
10.2.24 SPINDLE CONTROLLER DOES NOT RESPOND	269
10.2.25 SPINDLE CONTROLLER OR DRIVER FAULT	269
10.2.26 SPINDLE CONTROLLER SOFTWARE UPDATE IS REQUIRED	270
10.2.27 SPINDLE DRIVER FAULT	270
10.2.28 SPINDLE FAILURE WHILE TAPPING	270
10.2.29 SPINDLE FAILURE DURING REVERSAL	270
10.2.30 SPINDLE HAS FAILED TO TURN ON	270
10.2.31 SPINDLE FAULT LINE	270
10.2.32 SPINDLE MOTOR TEMPERATURE FAULT	270
10.2.33 SPINDLE WOULD NOT STOP	270

10.2.34 STACK OVERFLOW	270
10.2.35 SUBROUTINE CALL IS NOT ALLOWED IN MDI	271
10.2.36 SUBR. DOES NOT EXIST	271
10.2.37 SUBR. NESTING ERROR	271
10.2.38 TAPE INPUT TERMINATED	271
10.2.39 TAPE IS GOOD	271
10.2.40 TEMPERATURE FAULT	271
10.2.41 TEMPORARY CONFLICT WITH AUTO	271
10.2.42 THE AXIS CONTROLLER IS NOT A 1010-4	271
10.2.43 THE SURVEY CONTAINS ERRORS, PLEASE REVIEW	272
10.2.44 THE SURVEY WAS NOT WRITTEN TO THE AXIS CONTROLLER	272
10.2.45 THERE IS NO SURVEY	272
10.2.46 THREAD LEAD NOT SPECIFIED AT N =	272
10.2.47 TOO MANY BLOCKS FOR GAP	272
10.2.48 TOO MANY M FUNCTIONS AT N=	272
10.2.49 TOO MANY CONSECUTIVE NON MOTION BLOCKS	272
10.2.50 TOO MANY PARAMETERS	272
10.2.51 TOO MANY SUBR. CALLS	273
10.2.52 TOOL BREAKAGE DETECTION = FAILURE AT N =	273
10.2.53 TOOL DIAMETER TOO LARGE AT N=	273
10.2.54 TOOL OFFSET NOT ALLOWED DURING Z MIRROR	273
10.2.55 TOOL NN IS IN THE SPINDLE	273
10.2.56 TOOL NUMBER TOO HIGH	273
10.2.57 TOOL TURRET LOCATION IS NOT SET	273
10.2.58 TRANSFER ERROR, PLEASE RETRY	274
10.2.59 TROUBLE READING THE EXTERNAL SLIDE HOLD SWITCH	274
10.2.60 TYPE A Y TO IGNORE, OR TURN POWER OFF AND THEN ON AGAIN	274
10.2.61 UNDEFINED MACRO ERROR	274
10.2.62 WAIT 2 SEC., THE AXIS DRIVERS ARE BEING RESET	274
10.2.63 WAITING	274
10.2.64 WAITING ON AIR VALVE	274
10.2.65 WARNING POSSIBLE GOUGE AT N =	274
10.2.66 WAY LUBE PRESSURE SWITCH FAILURE	274
10.2.67 WRITING ERROR, WAIT 2 MIN. AND RETRY	274
10.2.68 X,Y OR Z MOVE MUST BE SPECIFIED AT N =	275
10.2.69 YOU CANNOT DELETE THE PROGRAM THAT IS CURRENTLY ACTIVE	275
10.2.70 YOU HAVE A VERSION UPGRADE OR MEMORY HAS BEEN CORRUPTED MEMORY NEEDS TO BE ZEROED	275
10.2.71 YOU MUST ENTER THE BACKLASH TABLE	275
10.2.72 YOUR VERSION OF CNC MAIN NEEDS TO BE UPDATED	275
10.2.73 Z, Q, OR F MISSING IN CANNED CYCLE CALL, N =	275
10.2.74 Z & M6 LOCKOUT IS IN EFFECT	275
10.2.75 Z AXIS MUST BE AT COLD START FOR TC,1	276
10.3 AXIS/SPINDLE CONTROLLER ERROR MESSAGES	276
10.3.1 DESCRIPTIONS	276
10.3.2 1. NO MOTOR FEEDBACK	276
10.3.3 2. ENCODER NOT RESPONDING PROPERLY	276
10.3.4 3. LOGIC JUMPER INCORRECT OR COMMAND SIGNAL MISSING	276
10.3.5 4. ENCODER IS NOT 1024 LINE	276
10.3.6 5. NO INDEX MARK DETECTED	276
10.3.7 6. SWITCH 1 DISABLED	277
10.3.8 7. RIGID TAP PRECYCLE ENCODER COUNT PROBLEM (NOT ENOUGH COUNT)	277
10.3.9 8. SPINDLE MAGNET NOT DETECTED OR SPINDLE NOT RUNNING	277

10.3.10 9. SPINDLE FAULT LINE DOWN	277
10.3.11 10. ENCODER AND MAGNET NOT RESPONDING OR SPINDLE NOT RUNNING	277
10.3.12 11. MOTOR OVERLOAD. EXCESSIVE FOLLOWING ERROR	277
10.3.13 12. MOTOR OVERLOAD. PULSE COMMAND STEP COMMAND CHECKSUM ERROR	277
10.3.14 13. MOTOR OVERLOAD. FOLLOWING ERROR GREATER THAN THE OVERLOAD FACTOR	277
10.3.15 14. MOTOR OVERLOAD. MISSING 0 OR 1 COMMAND	278
10.3.16 15. TIME OUT ON RIGID TAP PRE-CYCLE TEST	278
10.3.17 16. TIME OUT ON RESOLVER RESPONSE	278
10.3.18 17. BAD READING ON RESOLVER PORT	278
10.3.19 18. SERVO AMPLIFIER FAULT LINE DOWN	278
10.3.20 19. STACK OVERFLOW. OVERLOADED WITH STEP COMMAND	278
10.3.21 20. MOVE TRANSFER FAULT. INCOMPLETE DATA FOR MOVE COMMAND	278
10.3.22 21. SPURIOUS INTERRUPTS. NOT SERVICEABLE	278
10.3.23 22. BAD SCALE READING	278
10.3.24 23. MOTOR OVERLOAD. ERROR > OVERLOAD FACTOR IN STANDBY MODE	279
10.3.25 24. MOTOR OVERLOAD. ERROR > OVERLOAD FACTOR IN POINT TO POINT MODE	279
10.3.26 25. MOTOR OVERLOAD. ERROR > OVERLOAD FACTOR IN CONTOURING MODE	279
10.3.27 26. MOTOR OVERLOAD. ERROR > OVERLOAD FACTOR IN JOB MODE	279
10.3.28 27. RETURN TO MAGNET TIME-OUT	279
10.3.29 28. ORIENTATION TIME-OUT OR TAPPING CALIBRATION FAILURE	279
10.3.30 29. RIGID TAP PRECYCLE ENCODER FAILURE (TOO MANY COUNTS)	279
10.3.31 30. SURVEY CLEARED DUE TO BLANK OR CORRUPT SURVEY	279
10.3.32 31. TIME-OUT ON ORIENTATION	280
10.3.33 32. SPINDLE WILL NOT STOP. CHECK INVERTER ZERO SPEED	280
10.3.34 33. ENCODER CHANNELS ARE REVERSED (RIGID TAP)	280

11.0 COORDINATE SYSTEMS 281

11.1 MACHINE COORDINATE SYSTEM	282
11.2 TOOLING COORDINATE SYSTEM - HOME	282
11.3 FIXTURE OFFSETS	282
11.4 PROGRAM COORDINATE SYSTEM	28

12.0 ROTARY AXES 287

12.1 A AXIS	287
12.1.1 DIRECTION OF MOTION	287
12.1.2 G90 ABSOLUTE MODE	287
12.1.3 G91 INCREMENTAL MODE	288
12.1.4 MOVE TO HOME	289
12.1.5 JOG MODE	289
12.1.6 NUMERICAL FORMAT	290
12.1.7 MAXIMUM & MINIMUM ANGULAR LIMITS	291
12.1.8 DEGREE FEEDRATE CALCULATION	293
12.1.9 FEED RATE SPECIFICATION IN DEGREES PER MINUTE	294
12.1.10 G93 - 1/T (INVERSE TIME)	294
12.1.11 G15 - YZA CIRCULAR INTERPOLATION	296
12.1.12 FLAT CAM (CAM WRAPPING) PROGRAMMING	299
12.1.13 CAM WALL ANGLES	303
12.2 TILT ROTARY TABLE	305

12.2.1 DIRECTION OF MOTION	305
12.2.2 TILT TABLE BRAKE	306
12.2.3 G90 ABSOLUTE MODE	307
12.2.4 G91 INCREMENTAL MODE	307
12.2.5 A & B FIXTURES OFFSETS	308
13.0 INTERPOLATION	309
13.1 VMC INTERPOLATION MODES	310
13.1.1 LINEAR INTERPOLATION	310
13.1.2 CIRCULAR INTERPOLATION	310
13.1.3 END POINT	311
13.2 ARC CENTER	312
13.2.1 G90 AND G91	312
13.3 ARC DIRECTION	313
13.4 CIRCLE EXAMPLES	314
13.4.1 CIRCULAR BOSS EXAMPLE	318
13.4.2 CONTOURED SLOT EXAMPLE	319
13.4.3 CIRCULAR INTERPOLATION USING G18 & G19	319
13.4.4 G18	319
13.4.5 G19	322
13.5 CIRCULAR INTERPOLATION USING RADIUS DESIGNATION	324
13.5.1 G90	324
13.5.2 G91	324
13.6 HELICAL INTERPOLATION	325
13.7 REPEATING HELICAL MOVES	326
13.7.1 EXAMPLES USING COPIED LINES	326
13.7.2 EXAMPLES USING LINE REPETITIONS	326
13.7.3 EXAMPLES USING SUBROUTINES AND SUBPROGRAMS	327
13.8 CUTTER RADIUS COMPENSATION WITH HELICAL MOVES	328
13.9 PARTIAL ARCS AND HELICAL MOVES	329
13.10 THREAD MILLING	329
13.10.1 CUTTING AN OD THREAD	331
13.10.2 CUTTING AN ID THREAD	332
14.0 COMMUNICATIONS	335
14.1 COMMUNICATIONS	336
14.1.1 CHARACTER CODE	336
14.1.2 INITIAL CONNECTION	336
14.1.3 MACHINE GROUNDING	336
14.1.4 TERMINATION	336
14.1.5 HANDSHAKING	336
14.1.6 XON/XOFF PROTOCOL	337
14.1.7 XMODEM PROTOCOL	337
14.1.8 HOW TO SEND A FILE USING XMODEM FOR DNCX	337

14.2 COMMANDS	340
14.2.1 CNC 88 COMMANDS	340
14.2.2 TAPE INPUT	340
14.2.3 PU COMMAND	341
14.2.4 DNC MODE	342
14.2.5 DNC PROTOCOLS	343
14.2.6 RS-232-C INTERFACE CONNECTION	343
14.2.7 CABLE CONFIGURATION	344
14.2.8 IBM-COMPATIBLE PC-SIMPLE DB25 NULL MODEM	345
14.2.9 IBM-COMPATIBLE PC-DB9 TO DB25 FOR DTE EQUIPMENT-NULL MODEM NOT INCLUDED	345
14.2.10 MACINTOSH II MINI-8 CONNECTOR	346
14.2.11 MACINTOSH PLUS DIN-9 CONNECTOR	346
14.2.12 MACINTOSH PLUS DIN-8 CONNECTOR	347
14.3 VMC COMMUNICATIONS PROCEDURES	347
14.3.1 VMC CONTROL PARAMETERS	347
14.3.2 RECEIVING DATA / PROGRAMS AT THE VMC	348
14.3.3 SENDING DATA / PROGRAMS FROM THE VMC	348
14.4 DEVICE COMMUNICATIONS PROCEDURES	349
14.4.1 COMPUTER	349
14.5 TAPE PUNCH / TELETYPE	350
14.5.1 COMMUNICATIONS TROUBLESHOOTING	351
14.5.2 ENVIRONMENT	351
14.5.3 FILE	352
14.5.4 VMC	353
14.5.5 CABLES	354
14.5.6 COMPUTER AND COMPUTER IO PORT	356
14.5.7 SOFTWARE	357
 15.0 TOUCH PROBES	 363
15.1 TOUCH PROBES	364
15.1.1 TOUCH PROBE - LENGTH OFFSET	364
15.1.2 TOOL SETTING CYCLE 364	
15.1.3 OPTION 1=JOG TO POSITION	365
15.1.4 OPTION 2 & 3 - PROBE MOUNT	366
15.1.5 PROBE FIXTURE OFFSET NUMBER (0, 1-48)	366
15.2 PROBE OFFSETS	367
15.2.1 Z FIXTURE OFFSETS	367
15.2.2 LOCATING LENGTH USING THE JOG FUNCTION	368
15.2.3 LOCATING LENGTH USING THE PROBE	368
15.2.4 TOOL BREAKAGE DETECTION	369
15.2.5 TOUCH PROBE - TOOL DIAMETER OFFSET	371
15.2.6 GENERAL RULES TO FOLLOW: MP SERIES PROBE	372
15.2.7 LOCATING THE POINTS	372
15.2.8 G31 PROBE TOUCH FUNCTION	372
15.2.9 STORING PROBED POSITIONS	373
15.2.10 G31.1 PROBE NO TOUCH FUNCTION	374
15.2.11 USING G31	374
15.2.12 L9101 PROBE FUNCTIONS	375
15.2.13 LOCATE TOUCH POINT	377
15.2.14 COMPUTE CENTER AND RADIUS	378

15.2.15 PART ORIENTATION	380
15.2.16 MID-POINT AND ANGLE	383
15.2.17 Z DATUM LOCATION	384
15.2.18 TOOL BREAKAGE DETECTION	386
15.2.19 TOUCH CHECK, POSITION CHECK	386
15.2.20 TRUE OR FALSE COMPARISON	388
15.2.21 CALCULATE DIAMETER	389
15.2.22 SET CALIBRATION	389
15.2.23 XY SHIFT ERROR	389
15.2.24 RADIAL OVER TRAVEL	389
15.2.25 MP8 PROBE CALIBRATION	390
15.2.26 ENTERING XY SHIFT VALUES	390
15.2.27 ENTERING RADIAL OVER TRAVEL	391
15.2.28 SET COUNTER	391
15.3 SET TOUCH POINT	392
15.4 PROBE TUTORIAL	393
15.4.1 EXAMPLES IN FORMAT 2	393
15.5 USING THE PROBE WITH MACRO STATEMENTS	395
15.5.1 EXAMPLES IN FORMAT 2	395
15.6 FIXED SUBROUTINES	398
15.6.1 EXAMPLES IN FORMAT 2	398
16.0 COMMAND MENUS	401
16.1 QUICK KEYS MENU	402
16.1.1 1-DRY RUN	402
16.1.2 2-NEXT TOOL	402
16.1.3 3-ZERO RETURN	402
16.1.4 4-SET FIXTURE	402
16.1.5 5-SET LENGTH	402
16.1.6 6-OFFSETS	403
16.1.7 7-AXIS ZERO	403
16.1.8 8-READ	403
16.1.9 9-PUNCH	403
16.1.10 0-CUSTOM MACRO	404
16.2 EDIT MENU	405
16.2.1 EDIT MENU OPTIONS	406
16.3 FUNCTION MENU	406
16.3.1 1- SETUP FUNCTION	407
16.3.2 2 - MEMORY FUNCTION	408
16.3.3 3 - MDI FUNCTION	410
16.3.4 4 - HOME AXES FUNCTION	410
16.3.5 5 - RESET FUNCTION	411
16.3.6 6- COMMAND MODE FUNCTION	411
16.3.7 7- DIAGNOSTICS FUNCTION	411
16.3.8 8- LAST SCREEN FUNCTION	411
16.3.9 9- COLD START FUNCTION	411

17.0 PALLET CHANGER	413
17.1 MECHANICAL OVERVIEW	414
17.2 G17.1 - G17.2 A/B WORD SWAP	414
17.3 M31 EXCHANGE PALLETS	414
17.4 M32 STORE PALLET B AND LOAD PALLET A	415
17.5 M32.1 STORE PALLET B & LOAD PALLET A & VERIFY PALLET A HAS BEEN LOADED	415
17.6 M33 STORE PALLET A AND LOAD PALLET B	415
17.7 M33.1 STORE PALLET A & LOAD PALLET B & VERIFY PALLET B HAS BEEN LOADED	416
17.8 PALLET A ROTARY TABLE & PALLET B ROTARY TABLE OVERRIDE POTENTIOMETER	417
17.9 M48.2 PALLET A ROTARY TABLE OVERRIDE POTENTIOMETER ENABLE	417
17.10 M49.2 PALLET A ROTARY TABLE OVERRIDE POTENTIOMETER DISABLE	417
17.11 M48.3 PALLET B ROTARY TABLE OVERRIDE POTENTIOMETER ENABLE	417
17.12 M49.3 PALLET B ROTARY TABLE OVERRIDE POTENTIOMETER DISABLE	418
17.13 REMOTE MACHINE CONTROL	418
17.14 UTILITY MENU	419
17.14.1 OPTION 1	419
17.14.2 OPTION 2	420
17.14.3 OPTION 3	420
17.14.4 OPTION 4	421
18.0 MACROS	423
18.1 MACROS AND PARAMETRIC PROGRAMMING	424
18.1.1 MACROS	424
18.1.2 PARAMETRIC PROGRAMMING	424
18.1.3 R VARIABLE DEFINITION	424
18.1.4 EXAMPLE PROGRAM FOR PARAMETRIC PROGRAMMING	425
18.1.5 MACROS	426
18.2 MATHEMATICAL FUNCTIONS	429
18.2.1 MATHEMATICAL FUNCTION MACROS	429
18.2.2 ORDER OF CALCULATION	429
18.2.3 DECIMALS	430
18.2.4 EXPONENTIAL FORM	430
18.2.5 COMMENTS	430
18.2.6 CALCULATIONS	430
18.3 VARIABLES	431
18.3.1 ARRAYS	431
18.3.2 AX, AY, AZ, AA, AB, AC: AXIS POSITION VARIABLES	431
18.3.3 CP: CLOCK FROM POWER ON	431
18.3.4 CR: CLOCK FOR ALL RUN TIME	431
18.3.5 CC: CLOCK FOR CURRENT PART	432
18.3.6 D1 - D99: TOOL DIAMETER/RADIUS VARIABLES	432

18.3.7 FX1-FX48, FY1-FY48, FZ1-FZ48, FA1-FA48, FB1-FB48: FIXTURE OFFSET VARIABLES	432
18.3.8 H1 - H99: TOOL LENGTH OFFSET VARIABLES	433
18.3.9 I, G, O, HO, TL, VF: MACRO VARIABLES	433
18.3.10 PX1 - PB1, PX2 - PB2, PX3 - PB3: PROBE TOUCH POINT VARIABLES	436
18.3.11 R0-R9: PARAMETRIC VARIABLES	437
18.3.12 TN: TOOL NUMBER	437
18.3.13 TT: TOOL TIME	437
18.3.14 TU: TOOL USED	437
18.3.15 V1-V100: MACRO VARIABLES	438
18.4 FUNCTIONS	438
18.4.1 ABS	438
18.4.2 ATN	438
18.4.3 COS	438
18.4.4 INT	439
18.4.5 RND	439
18.4.6 SGN	439
18.4.7 SIN	439
18.4.8 SIN/COS	439
18.4.9 SQR	440
18.5 MACRO COMMANDS	440
18.5.1 CLEAR	440
18.5.2 GOTO	440
18.5.3 LABELS	441
18.5.4 IF - THEN	441
18.5.5 INDEX	442
18.5.6 INPUT	442
18.5.7 LABELS	443
18.5.8 PRINT	443
18.5.9 SET	443
18.5.10 SET DEBUG	444
18.5.11 SET DEGREES / RADIANS	444
18.5.12 SET RND#	444
18.5.13 SET RUN	445
18.5.14 SINPUT	445
18.5.15 SPRINT	445
18.5.16 START #	446
18.5.17 AND, OR, AND NOT	446
18.6 MACRO TUTORIAL	447
18.6.1 OVERVIEW	447
18.6.2 SUMMARY	447
18.6.3 CONVENTIONS	448
18.6.4 COMMENTS	448
18.6.5 CALCULATIONS	448
18.7 VARIABLES	448
18.7.1 V1-V100: MACRO VARIABLES	448
18.7.2 ARRAYS	449
18.7.3 AX, AY, AZ, AA, AB, AC: AXIS POSITION VARIABLES	449
18.7.4 CLEAR	449
18.8 OPERATOR INTERACTION	450
18.8.1 PRINT	450
18.8.2 INPUT	450

18.9 PROGRAM BRANCHING	451
18.9.1 LABELS	451
18.9.2 GOTO	451
18.9.3 IF-THEN	452
18.9.4 SYMBOLIC OPERATORS	452
18.10 AND, OR, AND NOT	453
18.10.1 LOGICAL OPERATORS	453
18.10.2 COUNTING LOOPS	454
18.11 FADAL MACRO LANGUAGE EXAMPLES	455
18.11.1 D-HOLE MACRO	455
18.11.2 SUB PROGRAM 800	456
18.11.3 SUB PROGRAM 900	459
18.11.4 ROW COLUMN PATTERN MACRO	459
18.11.5 SUB PROGRAM 810	460
18.11.6 SPIRAL CUT MACRO	460
18.11.7 DRILL GRID PATTERN MACRO - WHOLE NUMBER INCREMENTS	461
18.11.8 DRILL GRID PATTERN MACRO - DECIMAL INCREMENTS	462
18.12 TUTORIAL PROGRAM SUMMARIES	463
18.12.1 SYNOPSIS	463
18.12.2 PROGRAM NUMBER 1	463
18.12.3 PROGRAM NUMBER 2	463
18.12.4 PROGRAM NUMBER 3	463
18.12.5 PROGRAM NUMBER 4	463
18.12.6 PROGRAM NUMBER 5	463
18.12.7 PROGRAM NUMBER 6	463
18.12.8 PROGRAM NUMBER 7	64
18.12.9 PROGRAM NUMBER 8	464
18.12.10 PROGRAM NUMBER 9	465
18.13 TUTORIAL PROGRAM EXPLANATIONS	465
18.13.1 PROGRAM NUMBER 1	465
18.13.2 PROGRAM NUMBER 2	466
18.13.3 PROGRAM NUMBER 3	467
18.13.4 PROGRAM NUMBER 4	470
18.13.5 PROGRAM NUMBER 5	471
18.13.6 PROGRAM NUMBER 6	472
18.13.7 PROGRAM NUMBER 7	474
18.13.8 PROGRAM NUMBER 8	476
18.13.9 PROGRAM NUMBER 9	478
18.14 TUTORIAL PROGRAM LISTINGS	480
18.14.1 PROGRAM NUMBER 1	480
18.14.2 PROGRAM NUMBER 2	481
18.14.3 PROGRAM NUMBER 3	482
18.14.4 PROGRAM NUMBER 4	482
18.14.5 PROGRAM NUMBER 5	483
18.14.6 PROGRAM NUMBER 6	483
18.14.7 PROGRAM NUMBER 7	484
18.14.8 PROGRAM NUMBER 8	485
18.14.9 PROGRAM NUMBER 9	486
19.0 MISCELLANEOUS	489

19.1 FLOOD COOLANT THROUGH THE SPINDLE (OPTIONAL)	490
19.1.1 DESCRIPTION	490
19.2 HYDRO SWEEP (OPTIONAL)	491
19.2.1 HYDRO SWEEP™ CHIP REMOVAL SYSTEM	491
19.2.2 OPERATION	491
19.3 AUTOMATIC DOORS (OPTIONAL)	492
19.3.1 DESCRIPTION	492
19.3.2 M80 AUTOMATIC DOORS OPEN	493
19.3.3 M81 AUTOMATIC DOORS CLOSE	493
19.4 SERVO COOLANT (OPTIONAL)	493
19.4.1 DESCRIPTION	493
19.4.2 THE CS PROCEDURE	494
19.4.3 SETUP PROCEDURE	494
19.4.4 CONTINUOUS SWEEP MODE FOR THE SERVO COOLANT	496
19.5 CHIP AUGER AND WASH DOWN (OPTIONAL)	497
19.5.1 DESCRIPTION	497
19.5.2 OPERATION	497
19.6 DUAL ARM TOOL CHANGER	500
19.6.1 COMMANDS	500
19.6.2 DD	500
19.6.3 SETTO	500
19.6.4 SETTO,#	500
19.6.5 TOOL LOADING PROCEDURE	501
19.6.6 OPERATING THE DATC FROM A PROGRAM	501
19.7 MISCELLANEOUS CONTROL OPTIONS	502
19.7.1 INPUT FROM A TAPE PUNCH OR COMPUTER	502
19.7.2 KEY LOCK	503
19.7.3 NOEDIT FEATURE	503
19.8 ANALYZER SOFTWARE	503
19.8.1 DESCRIPTION	503
19.8.2 ADVANTAGES OF ANALYZER	504
19.8.3 USING THE ANALYZER	504
19.8.4 SAMPLE FILE: DATA.ABS	505
19.9 CNC88 HS OPTIONAL DISKETTE DRIVE	505
19.9.1 SPECIFICATIONS	505
19.9.2 ACCESS FROM CONTROL	505
19.9.3 ACCESS FROM PROGRAM USING MACRO STATEMENT #DISK	506
19.9.4 RESTRICTIONS ON USER-DEFINED SUBROUTINES	507
19.9.5 SUBPROGRAMS AND FIXED SUBROUTINES ARE ALLOWED	507
20.0 GRAPHICS	509
20.1 CNC 88HS GRAPHICS	510
20.1.1 GRAPHICS MENU	510
20.1.2 PLOTTING OPTIONS	510
20.2 FUNCTION MENU	512
20.2.1 USING THE FUNCTION MENUS	512
20.2.2 CURSOR MOVEMENT	512

20.2.3 GETTING STARTED	513
20.2.4 THE MENUS	513
20.2.5 COORDINATE SYSTEM	514
20.2.6 POINTS	514
20.2.7 ANGLES	515
20.2.8 LINES	516
20.2.9 CIRCLES	516
20.2.10 BLEND RADIUS	517
20.3 THE FUNCTION MENU DISPLAY	517
20.3.1 FUNCTION MENUS	517
20.3.2 MAIN MENU	517
20.3.3 ANGLE OF A LINE	518
20.3.4 TWO LINE FUNCTIONS	518
20.3.5 FINDING A PARALLEL LINE USING A LINE OR CIRCLE	519
20.3.6 THREE INTERSECTION FUNCTIONS	519
20.3.7 INTERSECTION OF 2 LINES	520
20.3.8 INTERSECTION OF 2 CIRCLES	520
20.3.9 INTERSECTION OF A LINE AND CIRCLE	521
20.3.10 TWO TANGENT FUNCTIONS	521
20.3.11 TANGENT POINT OF A LINE AND CIRCLE	522
20.3.12 TANGENT POINTS OF TWO CIRCLES	522
20.3.13 NINE BLEND RADIUS FUNCTIONS	523
20.3.14 BLEND RADIUS FROM A LINE TO A LINE	523
20.3.15 BLEND RADIUS FROM A LINE TO A CIRCLE	524
20.3.16 BLEND RADIUS FROM A CIRCLE TO A LINE	524
20.3.17 BLEND RADIUS FROM A CIRCLE TO A CIRCLE	525
20.3.18 BLEND RADIUS FROM A POINT TO A LINE	525
20.3.19 BLEND RADIUS FROM A LINE TO A POINT	526
20.3.20 BLEND RADIUS FROM A POINT TO A CIRCLE	526
20.3.21 BLEND RADIUS FROM A CIRCLE TO A POINT	527
20.3.22 BLEND RADIUS FROM A POINT TO A POINT	527
20.3.23 CIRCLE FUNCTION	528
20.3.24 TRIANGLE SOLVER	528
20.3.25 TOOL CALL AND END OF PROGRAM	529
20.3.26 TOOL CALL	529
20.3.27 END OF PROGRAM	530
20.3.28 FIXED CYCLES AND SUBROUTINE FUNCTIONS	530
20.3.29 ENGRAVING	531
20.3.30 BOLT CIRCLE	531
20.3.31 MILL BORING	532
20.3.32 RECTANGULAR POCKET	532
20.3.33 CIRCULAR POCKET	533
20.3.34 DRILLING CYCLES	533
20.3.35 TAPPING CYCLES	534
20.3.36 BORING CYCLES	534
21.0 FORMATS	536
21.1 OVERVIEW	537
21.1.1 FORMAT 1	537
21.1.2 FORMAT 2	537
21.2 FORMAT 1 PROGRAMMING	537

21.2.1 NOTES ON FORMAT 1 STYLE PROGRAMMING	537
21.2.2 FORMAT 1 PROGRAM EXAMPLE	538
21.2.3 FORMAT 1 PROGRAM WITH SUBROUTINES AND SUBPROGRAM CALLS	538
21.3 FORMAT 2 PROGRAMMING	539
21.3.1 NOTES ON FORMAT 2 STYLE PROGRAMMING	539
21.3.2 FORMAT 2 PROGRAM EXAMPLE	541
21.4 DEFAULT PARAMETERS, SETP COMMAND	542
21.4.1 FORMAT 1 & FORMAT 2	542
21.4.2 FORMAT 1 PARAMETER SETTINGS	543
21.4.3 FORMAT 2 PARAMETER SETTINGS	544
21.4.4 FORMAT	546
21.4.5 AXES: X,Y,Z	546
21.4.6 DEFAULT: G0	546
21.4.7 DEFAULT: G90	547
21.4.8 DEFAULT: G17	547
21.4.9 RPM FACTOR	548
21.4.10 BAUD RATE	548
21.4.11 TRAVEL	548
21.4.12 A-AXIS RATIO	548
21.4.13 B-AXIS RATIO	549
21.4.14 TOOL CHANGER CAP	549
21.4.15 SPINDLE TYPE	549
21.4.16 SPINDLE AFTER M6	549
21.4.17 PENDANT	550
21.4.18 M60/A-AXIS BRAKE	550
21.4.19 M62/B-AXIS BRAKE	550
21.4.20 IMM. FIXED CYCLE	550
21.4.21 ORIENTATION FACTOR	551
21.4.22 DEFAULT: INCH	551
21.4.23 PU FORMAT	551
21.4.24 CRC MODE	551
21.4.25 SPINDLE OFF	551
21.4.26 PALLET	552
21.4.27 ASPECT	552
21.4.28 M7-FLOOD M8-MIST	552
21.4.29 BINARY BUFFERS: 255	552
21.4.30 TURRET FACTOR	552
21.4.31 GAIN	552
21.4.32 TIMERS	553
21.4.33 3 PHASE 5% LOW: NO	553
21.4.34 HIGH TORQUE	553
21.4.35 CMD MENU	553
21.4.36 RAMP	553
21.4.37 OVERLOAD	554
21.4.38 SCREW	554
21.4.39 IPM	554
21.4.40 XYZ RAMP	554
21.4.41 Z TAP GAIN	554
21.4.42 VECTOR	554
21.4.43 AXIS DISPLAY	554
21.4.44 A-PALLET	555
21.4.45 B-PALLET	555
21.4.46 AUTO BRAKE	555

21.4.47 5TH AXIS PROGRAMMABLE HEAD	555
21.4.48 G0 DETAIL	555
21.4.49 AIR VALVE FEEDBACK	556
21.5 PARAMETERS APPLICABLE TO FORMAT 2 ONLY	556
21.5.1 N-WORDS ORDERED	556
21.5.2 TOOL TABLE	556
22.0 OPERATION OF THE TRM	558
22.1 INTRODUCTION	559
22.1.1 EXISTING PROGRAMS	559
22.1.2 TOOL CHANGES	559
22.1.3 MANUAL MODE USING THE MPG HAND WHEELS	559
22.1.4 KEYBOARD	561
22.1.5 LEARN MODE	561
22.1.6 SPINDLE AND AXIS MOTOR POWER LOAD PERCENTAGE	562
22.1.7 TOOL ROOM USER MACRO	563
22.1.8 DEFAULT PARAMETERS FOR TRM CUSTOM MACRO	564
22.1.9 DRILL FUNCTION	564
22.1.10 TAPPING FUNCTION	565
22.1.11 CIRCLE AND RECTANGLE FUNCTIONS	565